



How to change rear
brake pads on **NISSAN**
Juke (F15) – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

NISSAN Juke (F15) 1.6 DIG-T NISMO RS, NISSAN Juke (F15) 1.6 DIG-T NISMO RS 4x4

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: NISSAN X-Trail (T30) 2.5 4x4

REPLACEMENT: BRAKE PADS – NISSAN JUKE (F15).
 TOOLS YOU MIGHT NEED:



- Wire brush
- Nylon cleaning brush
- WD-40 spray
- Brake cleaner
- Anti-squeal paste
- Brake caliper guide pins grease
- Ceramic grease
- Torque wrench
- Drive socket # 14
- Wheel impact socket #21
- Ratchet wrench
- Brake caliper wind back tool
- Wheel chock

Buy tools

Replacement: brake pads – NISSAN Juke (F15). Tip from AUTODOC experts:

- Perform the replacement of brake pads in complete set for each axis. This provides effective braking.
- The replacement procedure is identical for all brake pads on the same axle.
- Please note: all work on the car – NISSAN Juke (F15) – should be done with the engine switched off.


CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the bonnet. Unscrew the brake fluid reservoir cap.



2 Secure the wheels with chocks.

3 Loosen the wheel mounting bolts. Use wheel impact socket #21.

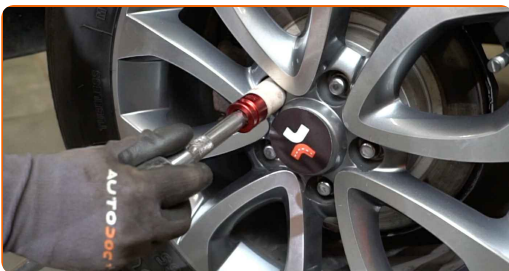

4 Raise the car.

Replacement: brake pads – NISSAN Juke (F15). AUTODOC recommends:

- If you are using a jack, make sure it rests on a flat surface without any unevenness.
- Be sure to additionally secure the car with jack stands.

5

Unscrew the wheel bolts.



AUTODOC recommends:

 
- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
NISSAN Juke (F15)

6


Remove the wheel.




7 Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.



 
8 Unscrew the brake caliper fasteners. Use a drive socket #14. Use a ratchet wrench.



9 Remove the brake caliper guide pins.

 

10 Remove the brake caliper.

 

Replacement: brake pads – NISSAN Juke (F15). Professionals recommend:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.

11

Remove the brake pads.

 


Replacement: brake pads – NISSAN Juke (F15). AUTODOC experts recommend:

- Measure the brake disc thickness. Upon reaching the wear limit the part must be replaced.

12

Treat the brake caliper piston. Use a nylon cleaning brush. Use a brake cleaner.



AUTODOC recommends:

- Replacement: brake pads – NISSAN Juke (F15). After applying the spray, wait a few minutes.

13

Press in the brake caliper piston. Use brake caliper wind back tool.



14

Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.

 


AUTODOC recommends:

- After applying the spray, wait a few minutes.

15

Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use anti-squeal paste.



Replacement: brake pads – NISSAN Juke (F15). Professionals recommend:

- Make sure the disc surface is clean before installing the pads.

 
16

Install new brake pads.



17


Clean the brake caliper guide pins. Use a brake cleaner.




AUTODOC recommends:

- After applying the spray, wait a few minutes.


18 Treat the brake caliper guide pins. Use the brake caliper guide pin grease.

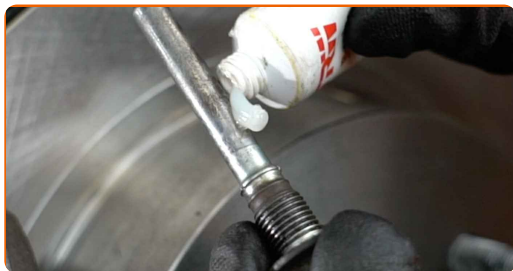


19 Install the brake caliper and fix it.

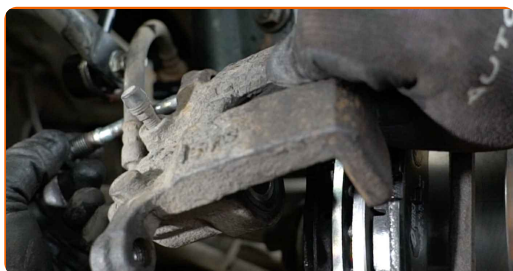


20 Install the brake caliper guide pins.

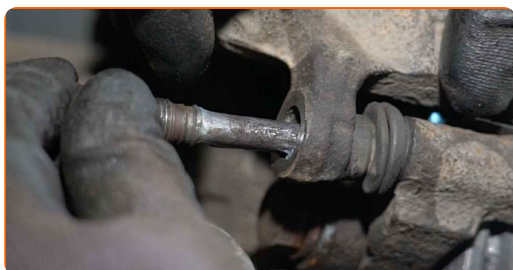

21 Tighten the brake caliper fasteners. Use a drive socket #14. Use a torque wrench. Tighten it to 32 Nm torque.

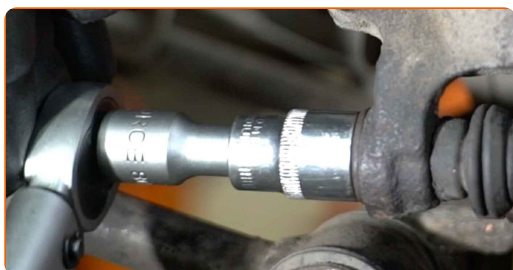

22 Clean the wheel rim mounting seat. Use a wire brush.

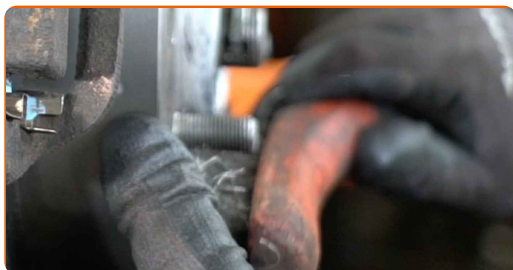

23 Treat the surface where the brake disc contacts the wheel rim. Use ceramic grease.



 
24 Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: brake pads – NISSAN Juke (F15). After applying the spray, wait a few minutes.

25 Install the wheel.




AUTODOC recommends:

- Important! Hold the wheel while screwing in the fastening bolts. NISSAN Juke (F15)

26

 Screw in the wheel bolts. Use wheel impact socket #21.



27

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #21. Use a torque wrench. Tighten it to 118 Nm torque.



28

Remove the jacks and chocks.



Replacement: brake pads – NISSAN Juke (F15). AUTODOC experts recommend:

- Without starting the engine, press the brake pedal several times until you feel significant resistance.
- Check the brake fluid level in the expansion tank and refill if necessary.

29

Tighten the brake fluid reservoir cap. Close the hood.



Replacement: brake pads – NISSAN Juke (F15). Tip from AUTODOC:

- Slow down smoothly for first 150-200 km after the brake pads replacement. Avoid unnecessary and sharp braking to a stop.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BRAKE PADS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.