



How to change engine oil  
and filter on **NISSAN**  
**Juke (F15)** – replacement  
guide

## SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

### Important!

This replacement procedure can be used for:

NISSAN Juke (F15) 1.6, NISSAN Juke (F15) 1.6 DIG-T 4x4, NISSAN Juke (F15) 1.6 DIG-T, NISSAN Juke (F15) 1.6 DIG-T NISMO 4x4, NISSAN Juke (F15) 1.6 DIG-T NISMO, NISSAN Juke (F15) 1.6 DIG-T NISMO RS, NISSAN Juke (F15) 1.6 DIG-T NISMO RS 4x4, NISSAN Juke (F15) 1.6 LPG, NISSAN Juke (F15) 1.6 (HR16DE), NISSAN Juke (F15) 1.6 CVTC

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: NISSAN Qashqai / Qashqai+2 I (J10, NJ10) 1.6

REPLACEMENT: ENGINE OIL AND FILTER – NISSAN  
JUKE (F15). TOOLS YOU'LL NEED:



- Impact socket №19
- Impact socket №10
- Combination spanner №19
- Oil filter cup socket 65/67-14f
- Torque wrench
- Oil drain pan
- Funnel
- Flat screwdriver

[Buy tools](#)


Replacement: engine oil and filter – NISSAN Juke (F15). AUTODOC experts recommend:

- Replace the oil filter every time when changing motor oil.
- All work should be done with the engine stopped.
- Wear gloves to prevent contact with hot liquid.

## CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

**1** Open the hood.

**2** Remove the oil filler cap.

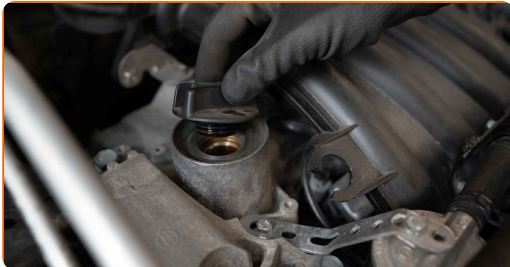

**3** Pour the engine flush in.



**4** Install the oil filler cap.



5 Start the engine, let it run for 15 minutes, and then stop it.

6 Lift the car using a jack or place it over an inspection pit.

**AUTODOC recommends:**

- The vehicle must be on even keel, and if it is at an angle, the drain plug must be at the lowest point.

7 Undo the fasteners of the oil pan lower cover.



8 Remove the oil pan cover. Use a drive socket #10. Use a flat screwdriver.

 


9 Put a waste oil container with at least 5 l capacity under the drainage hole.

10 Unscrew the drain plug. Use a drive socket no.19 Or ring spanner no.19.



11 Drain the used oil.



Replacement: engine oil and filter – NISSAN Juke (F15). Professionals recommend:


- Caution! The oil may be hot.
- Wait until the oil has completely drained from the drainage hole.

12 Move the container under the oil filter.

13 Unscrew the oil filter. Use the 65/67-14f socket.



14 Remove the oil filter. Prepare a container for the old oil filter. Put the old oil filter in the container.

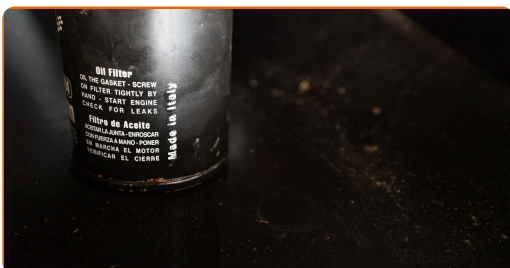

**AUTODOC recommends:**

- Move up the container. The oil starts to drain out of the drainage hole immediately after you have removed the oil filter.

**15**

Clean the oil filter seat.



**16**

Clean the area of the oil pan drainage hole.



**17**

Screw in the new drainage plug and tighten it. Use a torque wrench. Tighten it to 34 nm torque.



**18**

Lubricate the rubber seal of the new filter with a little amount of fresh oil.



19 Screw the new filter into its place. Tighten it to 18 nm torque. Use a torque wrench. Use the 65/67-14f socket.




20 Reinstall the oil pan lower cover.



21 Tighten the fasteners of the oil pan lower cover.



22 Unscrew the oil filler plug.

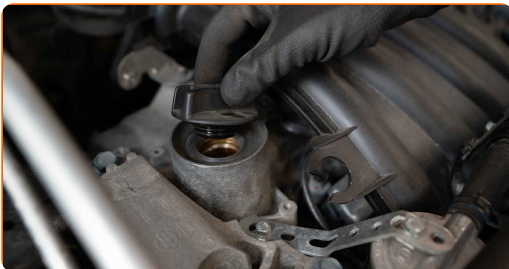

23 Insert the funnel.





24

Pour new oil into the engine in the amount recommended by the car manufacturer.



Replacement: engine oil and filter – NISSAN Juke (F15). Tip:

- Use the oil recommended by the manufacturer.

25

Tighten the oil filler cap. Check the oil level using the dipstick. Top up oil if necessary.



AUTODOC recommends:

- The oil level should be between the min and max marks.

26

Run the engine for a few minutes. After the oil pressure warning light goes out, stop the engine.

**27** Check the oil level 5 minutes after the stop of the engine operation using a dipstick and add oil if necessary.



**AUTODOC recommends:**

- The oil level should be between the min and max marks.
- Make sure that the oil filler cap is properly tightened.
- Check the threaded plug of the drainage hole and the oil filter seal for tightness. If necessary, carefully tighten them up.

**28** Close the hood.

Replacement: engine oil and filter – NISSAN Juke (F15). AUTODOC recommends:

- Note that oil pressure warning light, which indicates insufficient pressure in the lubrication system, may be on for a longer time than usual. After a few seconds, the oil will fill all the channels, and the light will go out.
- To protect the environment from pollution, be sure to dispose of the used filters at special collection points.

**WELL DONE!** 

[VIEW MORE TUTORIALS](#)

## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**

**AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**OIL FILTER: A WIDE SELECTION**

### **(i) DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.