


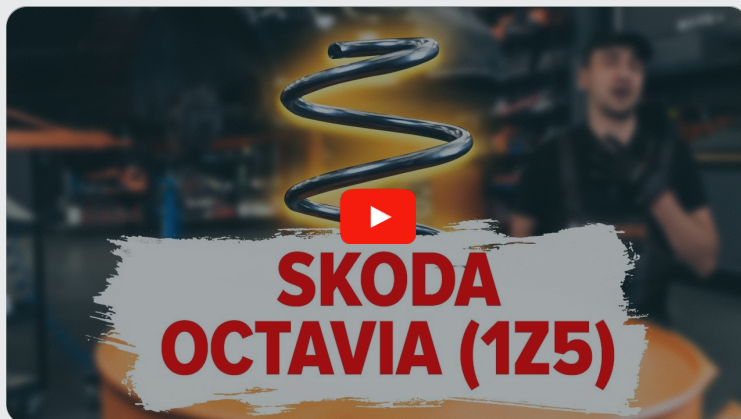

How to change front coil
springs on **Skoda**
Octavia 1Z5 –
replacement guide

VIDEO TUTORIAL

** Important!**

This replacement procedure can be used for:

SKODA Octavia II Combi (1Z5) 2.0 TDI 4x4, SKODA Octavia II Combi (1Z5) 1.6 TDI 4x4, SKODA Octavia II Combi (1Z5) 1.6 LPG, SKODA Octavia II Combi (1Z5) 2.0 TDI 16V 4x4, SKODA Octavia II Combi (1Z5) 1.4, SKODA Octavia II Combi (1Z5) 1.8 TSI 4x4, SKODA Octavia II Combi (1Z5) 1.8 TSI, SKODA Octavia II Combi (1Z5) 2.0 TDI, SKODA Octavia II Combi (1Z5) 1.6, SKODA Octavia II Combi (1Z5) 1.6 FSI, SKODA Octavia II Combi (1Z5) 1.9 TDI, SKODA Octavia II Combi (1Z5) 2.0 TDI 16V, SKODA Octavia II Combi (1Z5) 2.0 FSI, SKODA Octavia II Combi (1Z5) 2.0 FSI 4x4, SKODA Octavia II Combi (1Z5) 1.9 TDI 4x4, (+ 6)

The steps may slightly vary depending on the car design.

**REPLACEMENT: COIL SPRINGS – SKODA OCTAVIA 1Z5.
LIST OF THE TOOLS YOU'LL NEED:**



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- HEX bit no.H6.
- HEX bit no.H7.
- XZN socket bit # 14
- Drive socket # 13
- Drive socket # 16
- Drive socket # 18
- Drive socket # 21
- Drive socket # 22
- Drive socket # 24
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Tap wrench
- Shock absorber socket
- Crow bar
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Fender cover
- Wheel chock


BUY TOOLS

Replacement: coil springs – Skoda Octavia 1Z5. AUTODOC experts recommend:


- Both coil springs of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the front suspension.
- Warning! Shut down the engine before starting any work – Skoda Octavia 1Z5.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1 Open the bonnet.

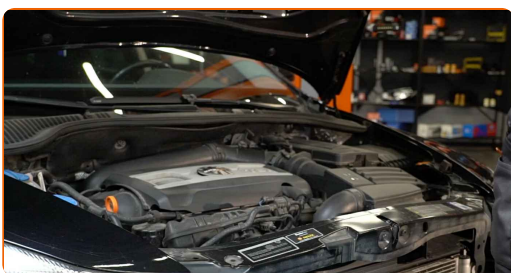

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

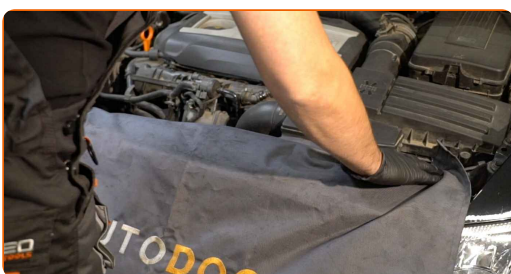


3 Remove the cowl grille seal.

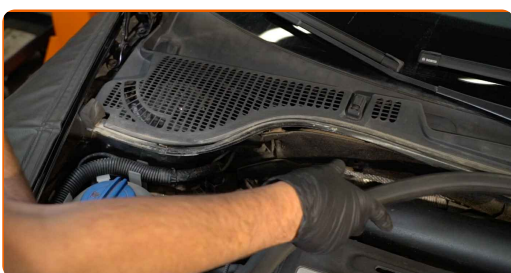

4 Raise the wiper plastic cowl grille.



 
5 Clean the fasteners of the shock strut upper mount. Use a wire brush. Use WD-40 spray.



6 Loosen the upper fastener of the shock strut mount. Use a drive socket #13. Use a ratchet wrench.



 7 Secure the wheels with chocks.



8 Loosen the wheel mounting bolts. Use wheel impact socket #17.



9 Raise the front of the car and secure on supports.



 
10 Unscrew the wheel bolts.



Replacement: coil springs – Skoda Octavia 1Z5. AUTODOC recommends:

- To avoid injury, hold up the wheel when unscrewing the bolts.


11 Remove the wheel.




12 Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.



 
13 Unscrew the fastener connecting the stabilizer link to the shock strut. Use a drive socket #18. Use a ratchet wrench.




14 Remove the stabilizer rod.

 

 15 Disconnect the wiring and the brake hose from the bracket on the shock strut. Use a crowbar.



 
16 Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.




17 Loosen the fastener of the driveshaft. Use a drive socket #24. Use a tap wrench.



 
18 Unscrew the lower fastener connecting the shock strut to the steering knuckle. Use XZN #14. Use a drive socket #18. Use a tap wrench. Use a ratchet wrench.



 
19 Clean all joints of the arm. Use a wire brush. Use WD-40 spray.




- 20 Unscrew the fastener connecting the ball joint to the suspension control arm. Use a drive socket #16. Use a ratchet wrench.

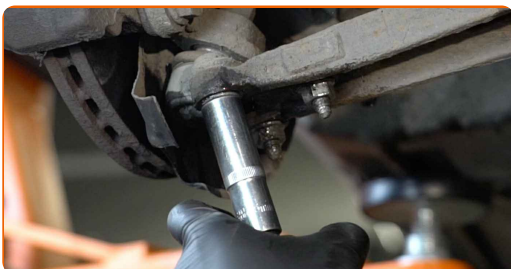

- 21 Disconnect the spherical joint from the arm.

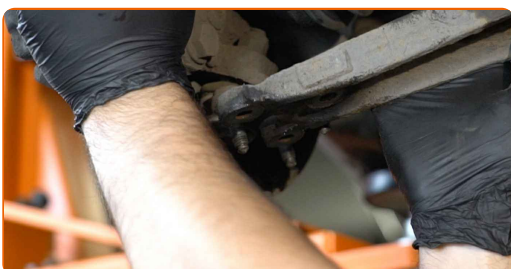

 
- 22 Unscrew the fastener connecting the drive shaft to the wheel hub. Use a drive socket #24. Use a tap wrench.




- 23 Remove the fastening bolt.



 
- 24 Remove the drive shaft.




25 Remove the fastening bolt.

 

 
26 Release the lower fastener connecting the shock strut to the steering knuckle. Use a special drive socket to remove the shock absorber. Use a ratchet wrench.



 
27 Prop up the steering knuckle. Use a hydraulic transmission jack.



 28 Disconnect the steering knuckle from the shock absorber strut.



 29 Unscrew the top fastening of the shock strut mount.



AUTODOC recommends:

- Important! Hold the suspension strut while unscrewing the fastening bolts. Skoda Octavia 1Z5

30

Remove the suspension strut.



31

 
Set the shock absorber strut on the spring compressor tool.



Replacement: coil springs – Skoda Octavia 1Z5. Tip from AUTODOC experts:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.


32 Compress the spring.




33 Treat the shock strut rod. Use a wire brush. Use WD-40 spray.



 34 Remove the strut piston rod nut. Use HEX No.H7. Use a drive socket #21. Use a ratchet wrench.



 
35 Remove the shock absorber mount, boot and bump stop.



AUTODOC recommends:

- Replacement: coil springs – Skoda Octavia 1Z5. Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.

 
36 Release the coil spring.




37 Remove the spring.




38 Install the spring on the shock absorber.

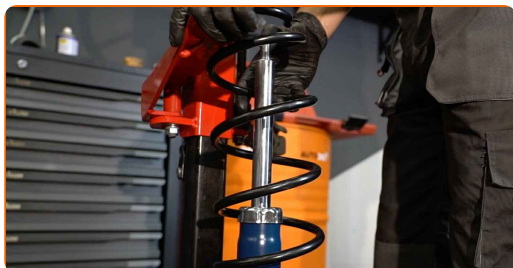


39 Compress the spring.

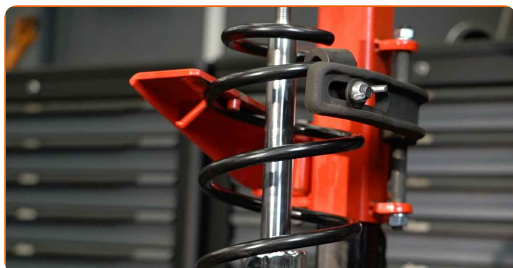

40 Install the mount, the boot and the bump stop on the shock absorber.

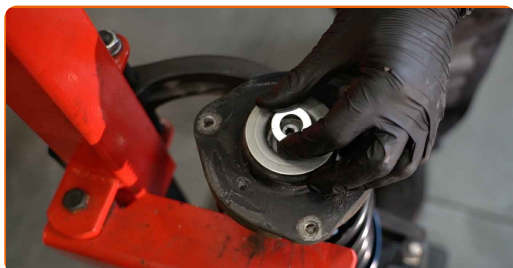

 - 41** Tighten the shock strut piston rod nut. Use HEX No.H6. Use a drive socket #22. Use a torque wrench. Tighten it to 60 Nm torque.



Replacement: coil springs – Skoda Octavia 1Z5. Tip from AUTODOC:

- Check to make sure the spring is positioned correctly. Avoid its misalignment.

 
- 42** Treat the shock strut rod. Use copper grease.



- 43** Decompress the spring.




44 Remove the assembled shock strut.



45 Treat the mounting seats of the shock strut. Use a wire brush. Use WD-40 spray.



 46 Install the shock strut into the wheel arch.



47 Screw the top fastening of the shock strut mount. Do not tighten it.

 


AUTODOC recommends:

- Skoda Octavia 1Z5 – To avoid injury, hold the suspension strut while screwing in the fastening bolts.


48

Treat the shock strut mounting seat on the steering knuckle. Use a wire brush. Use WD-40 spray.




49

 Fix the shock absorber strut on the steering knuckle.



50

 Install the fastening bolt.




51


Screw in the fastener that connects the shock strut to the steering knuckle. Use a drive socket #18. Use XZN #14. Use a ratchet wrench.




52 Clean the splines of the drive shaft CV joint. Use a wire brush. Use WD-40 spray.

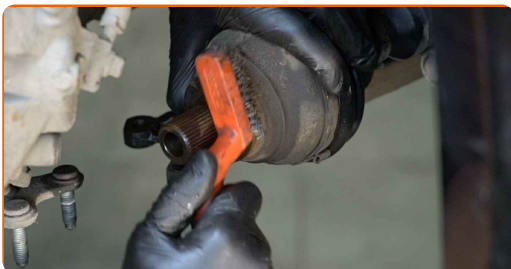

 53 Mount the drive shaft into the wheel hub.



 
54 Remove the support from under the steering knuckle.



AUTODOC recommends:


- Replacement: coil springs – Skoda Octavia 1Z5. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

 55 Attach the ball joint to the control arm.



56

 Tighten the ball joint fastener. Use a drive socket #16. Use a torque wrench. Tighten it to 60 nm torque.



57

Install and tighten the drive shaft bolt. Use a drive socket #24. Use a ratchet wrench.



58

Tighten the lower fasteners connecting the shock strut to the steering knuckle. Use XZN #14. Use a drive socket #18. Use a torque wrench. Tighten it to 70 Nm torque.+90°



AUTODOC recommends:

- Important! Be sure to use new fasteners.

59

Connect the fastener of the ABS sensor cable to the shock absorber strut.

 


60

Fasten the brake hose on the strut. Use a crowbar.

61

Tighten the bolt connecting the drive shaft to the wheel hub. Use a drive socket #24. Use a torque wrench. Tighten it to 200 Nm torque. +90°



AUTODOC recommends:

 
- Important! Be sure to use new fasteners.

62


Install the transverse stabilizer link.




- 63** Tighten the fastener connecting the stabilizer link to the shock strut. Use a drive socket #18. Use a torque wrench. Tighten it to 60 Nm torque.



 - 64** Treat the shock strut fasteners. Treat all joints of the arm. Use copper grease.



 - 65** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



- 66** Clean the brake disk surface. Use a brake cleaner.



Replacement: coil springs – Skoda Octavia 1Z5. Tip:

- After applying the spray, wait a few minutes.

67

Install the wheel.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Skoda Octavia 1Z5

 
68

Screw in the wheel bolts. Use wheel impact socket #17.




69

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



70 Remove the jacks and chocks.

 


71 Tighten the upper fastener of the shock absorber strut mount. Use a drive socket #13. Use a torque wrench. Tighten it to 15 Nm torque. +90°




AUTODOC recommends:

- Important! Be sure to use new fasteners.

 72 Treat the fasteners of the shock strut mount. Use copper grease.



73 Install and secure the cowl grille.

 


74

Install the cowl grille seal.



75

 Remove the fender protection cover.



76

Close the hood.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON  **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR SKODA

COIL SPRINGS: A WIDE SELECTION

CHOOSE CAR PARTS FOR SKODA OCTAVIA 1Z5

COIL SPRINGS FOR SKODA: BUY NOW

**COIL SPRINGS FOR SKODA OCTAVIA 1Z5: THE BEST DEALS
& OFFERS**

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.