



How to change engine oil  
and filter on **Skoda**  
**Octavia 1Z5** –  
replacement guide

## VIDEO TUTORIAL




### **i Important!**

This replacement procedure can be used for:

SKODA Octavia II Combi (1Z5) 1.6 TDI 4x4, SKODA Octavia II Combi (1Z5) 1.6 LPG, SKODA Octavia II Hatchback (1Z3) 1.6 LPG, SKODA Octavia II Hatchback (1Z3) 2.0 TDI, SKODA Octavia II Combi (1Z5) 2.0 TDI, SKODA Octavia I Hatchback (1U2) 1.8, SKODA Octavia I Hatchback (1U2) 1.6, SKODA Octavia I Combi (1U5) 1.6, SKODA Octavia I Combi (1U5) 1.8 20V, SKODA Octavia I Combi (1U5) 1.9 SDI, SKODA Octavia I Combi (1U5) 1.8 T, SKODA Octavia I Hatchback (1U2) 1.8 T, SKODA Octavia I Hatchback (1U2) 2.0, SKODA Octavia I Combi (1U5) 2.0, SKODA Octavia I Hatchback (1U2) 1.4, (+ 21)

The steps may slightly vary depending on the car design.

## REPLACEMENT: ENGINE OIL AND FILTER – SKODA OCTAVIA 1Z5. TOOLS YOU NEED:

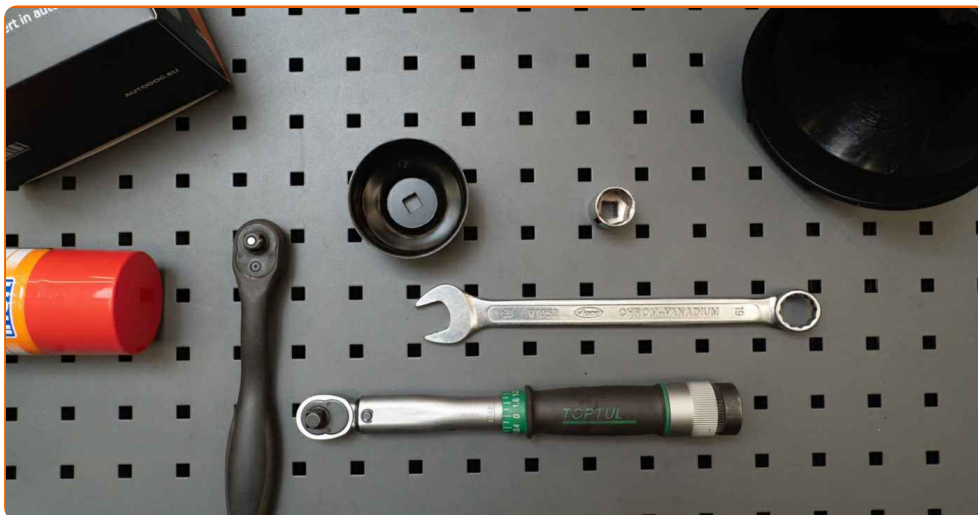

- Wire brush
- All-purpose cleaning spray
- Oil filter cup socket 77/15-F
- Combination spanner #19
- Drive socket # 19
- Ratchet wrench
- Torque wrench
- Oil drain pan
- Funnel
- Fender cover

**BUY TOOLS**

## Replacement: engine oil and filter – Skoda Octavia 1Z5. Tip from AUTODOC experts:

- Replace the oil filter every time when changing motor oil.
- Wear gloves to prevent contact with hot liquid.
- Please note: all work on the car – Skoda Octavia 1Z5 – should be done with the engine switched off.

## CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1

Open the hood.



2

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

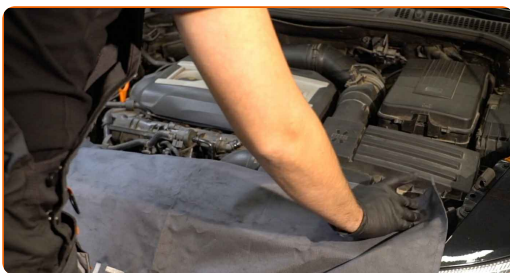

3

Unscrew the oil filler plug.



4

Lift the car using a jack or place it over an inspection pit.

 


Replacement: engine oil and filter – Skoda Octavia 1Z5. Professionals recommend:

- The vehicle must be on even keel, and if it is at an angle, the drain plug must be at the lowest point.
- All work should be done with the engine stopped.


5

Put a waste oil container with at least 5 l capacity under the drainage hole.

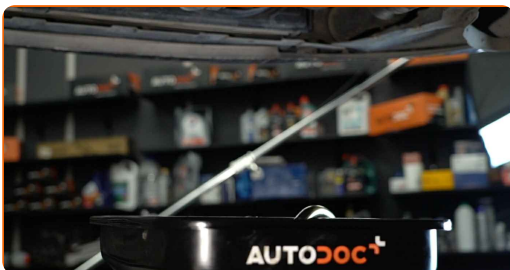


6

Clean the area of the oil pan drainage hole. Use a wire brush. Use all-purpose cleaning spray.

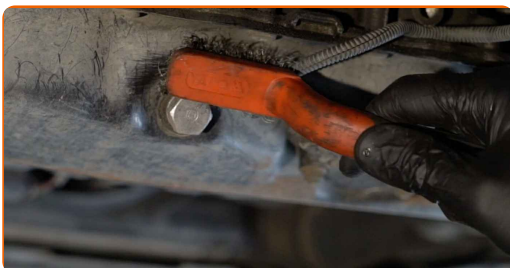

7

 Unscrew the drain plug. Use a combination spanner #19.

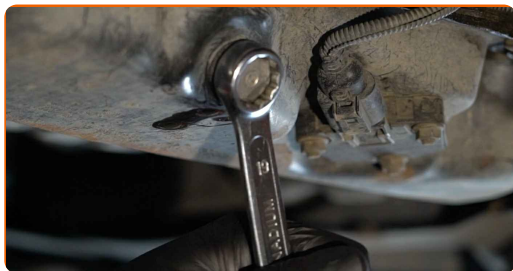

8

Drain the used oil.




### Replacement: engine oil and filter – Skoda Octavia 1Z5. Tip:

 - Caution! The oil may be hot.
- Wait until the oil has completely drained from the drainage hole.


9

Clean the oil filter. Use all-purpose cleaning spray.

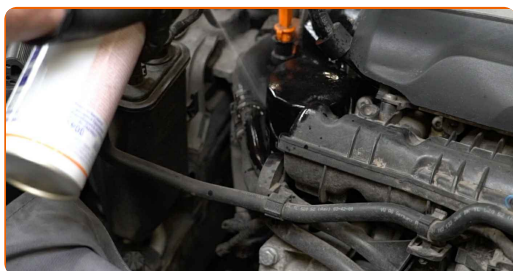

10

Remove the engine cover.

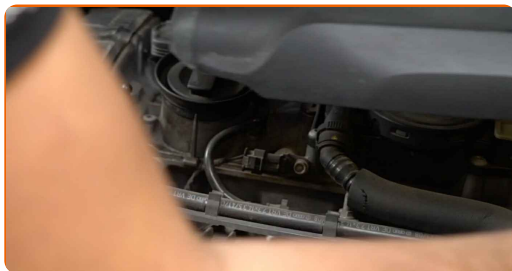


Replacement: engine oil and filter – Skoda Octavia 1Z5. AUTODOC experts recommend:

- Raise the engine cover, holding it on two sides simultaneously.
- Do not apply excessive force when removing the part. Otherwise you may damage it.


11

Unscrew the oil filter. Use the 77/15-F socket. Use a ratchet wrench.

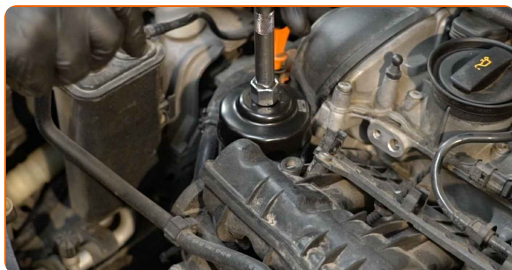

12


Prepare a container for the old oil filter.

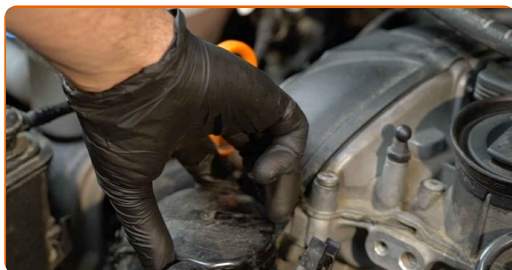



13

 Remove the oil filter.

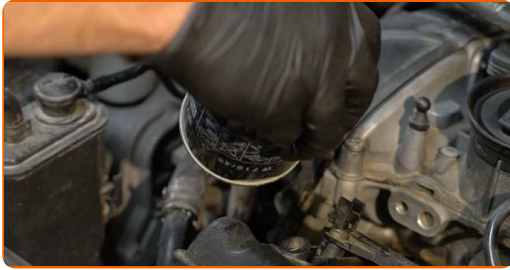


### AUTODOC recommends:

- Move up the container. The oil starts to drain out of the drainage hole immediately after you have removed the oil filter.


14

 Lubricate the rubber seal of the new filter with a little amount of fresh oil.

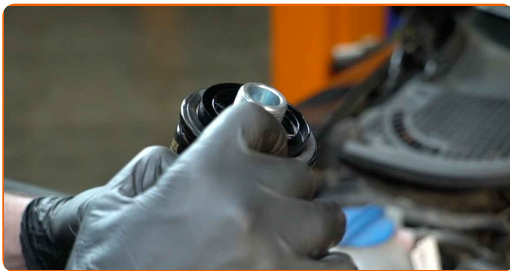


15

Install a new oil filter.

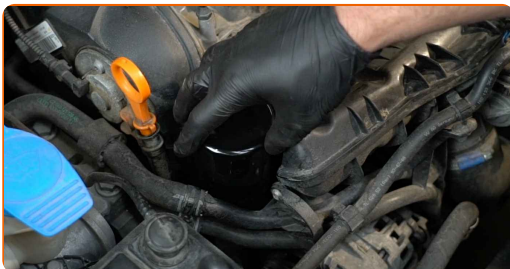

16

Screw the new filter into its place. Use the 77/15-F socket. Use a torque wrench. Tighten it to 24 Nm torque.

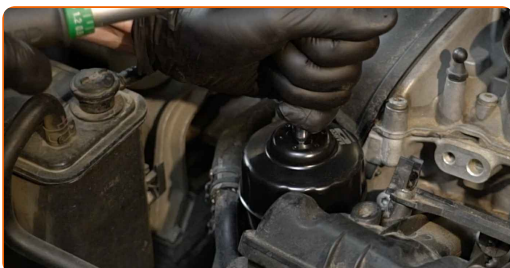



17

Install the engine cover and secure it.




### AUTODOC recommends:

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- Caution! Do not use excessive force during installation. This may damage the fasteners of the car. Skoda Octavia 1Z5


18

Clean the area of the oil pan drainage hole.

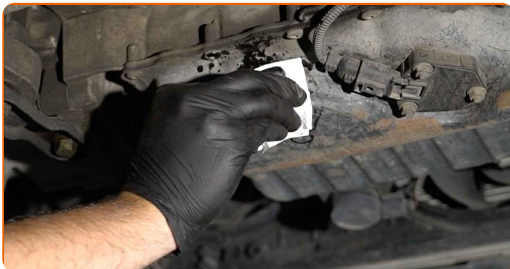


19

Screw in the new drainage plug and tighten it. Use a drive socket #19. Use a torque wrench. Tighten it to 26 Nm torque.

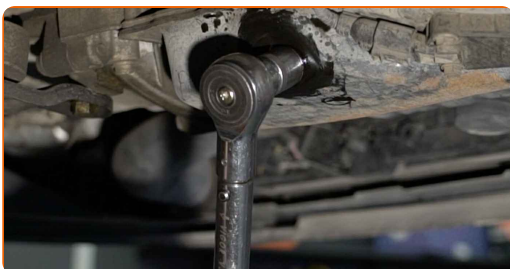

20

 Clean the area of the oil pan drainage hole. Use all-purpose cleaning spray.

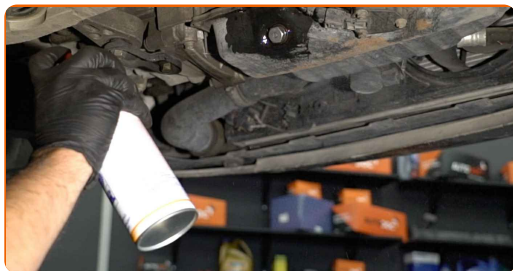

21

Lower the car.



22

Remove the oil filler cap.



23

Insert the funnel.



24

Pour oil into the engine through the filler. Required amount of oil: 4.6 L.

 


Replacement: engine oil and filter – Skoda Octavia 1Z5. AUTODOC recommends:

- Use the oil recommended by the manufacturer.

25

Check the oil level using the dipstick. Top up oil if necessary.

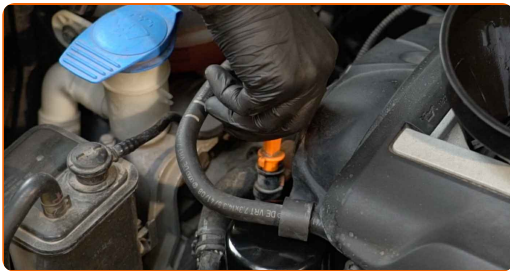

Please note!

- The oil level should be between the Min and Max marks.

26

Install the oil filler cap.



 
27

Tighten the oil filler cap.



28

Run the engine for a few minutes. After the oil pressure warning light goes out, stop the engine.

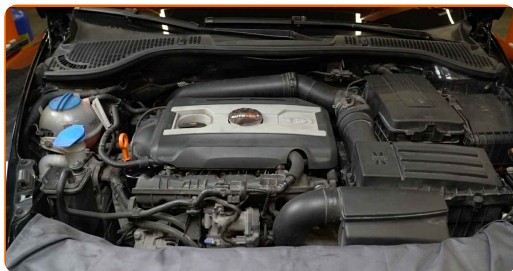

29

Check the oil level 5 minutes after the stop of the engine operation using a dipstick and add oil if necessary.




### Please note!

- The oil level should be between the Min and Max marks.
- Make sure that the oil filler cap is properly tightened.
- Check the threaded plug of the drainage hole and the oil filter seal for tightness. If necessary, carefully tighten them up.


30

Remove the fender protection cover.

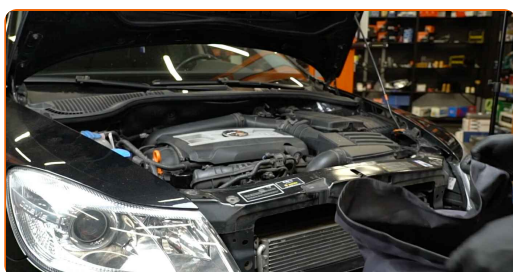

31

 Close the hood.

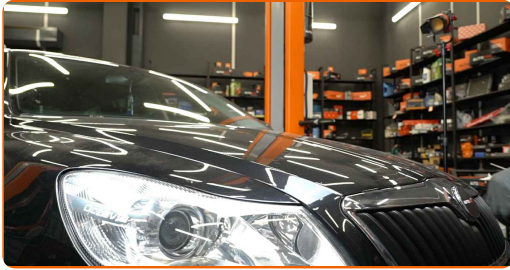

Replacement: engine oil and filter – Skoda Octavia 1Z5. Tip from AUTODOC experts:

- Note that oil pressure warning light, which indicates insufficient pressure in the lubrication system, may be on for a longer time than usual. After a few seconds, the oil will fill all the channels, and the light will go out.
- To protect the environment from pollution, be sure to dispose of the used filters at special collection points.

**WELL DONE!** 

[VIEW MORE TUTORIALS](#)

## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR SKODA**

**OIL FILTER: A WIDE SELECTION**

**CHOOSE CAR PARTS FOR SKODA OCTAVIA 1Z5**

**OIL FILTER FOR SKODA: BUY NOW**

**OIL FILTER FOR SKODA OCTAVIA 1Z5: THE BEST DEALS & OFFERS**

### **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.