# + AUTODOC CLUB


How to change rear coil springs on **Skoda Octavia 1Z5** – replacement guide







### VIDEO TUTORIAL

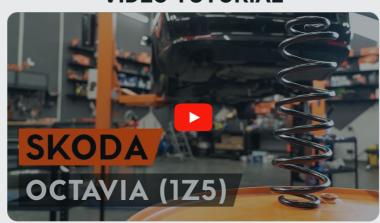

## i Important!

This replacement procedure can be used for:

SKODA Octavia II Combi (1Z5) 2.0 TDI 4x4, SKODA Octavia II Combi (1Z5) 1.6 TDI 4x4, SKODA Octavia II Combi (1Z5) 1.6 LPG, SKODA Superb II Estate (3T5) 1.8 TSI, SKODA Superb II Estate (3T5) 1.8 TSI 4x4, SKODA Octavia II Combi (1Z5) 2.0 TDI 16V 4x4, SKODA Superb II Estate (3T5) 2.0 TSI, SKODA Superb II Estate (3T5) 1.6 TDI, SKODA Octavia II Combi (1Z5) 1.8 TSI 4x4, SKODA Octavia II Combi (1Z5) 1.8 TSI, SKODA Octavia II Combi (1Z5) 2.0 TDI, SKODA Superb II Estate (3T5) 2.0 TDI 16V 4x4, SKODA Superb II Estate (3T5) 2.0 TDI 16V 4x4, SKODA Superb II Estate (3T5) 1.9 TDI, SKODA Octavia II Combi (1Z5) 1.6, (+ 17)

The steps may slightly vary depending on the car design.

CLUB.AUTODOC.CO.UK 1–14







## REPLACEMENT: COIL SPRINGS – SKODA OCTAVIA 1Z5. LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #18
- Drive socket # 18

- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Crow bar
- Hydraulic transmission jack
- Wheel chock

**BUY TOOLS** 

CLUB.AUTODOC.CO.UK 2-14








### Replacement: coil springs – Skoda Octavia 1Z5. AUTODOC recommends:

- Both coil springs of the rear suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the rear suspension.
- All work should be done with the engine stopped.

# REPLACEMENT: COIL SPRINGS – SKODA OCTAVIA 1Z5. RECOMMENDED SEQUENCE OF STEPS:

1

Secure the wheels with chocks.

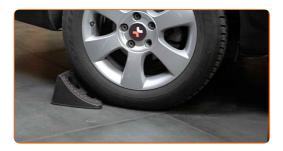

Loosen the wheel mounting bolts. Use wheel impact socket #17.



Raise the rear of the car and secure on supports.



CLUB.AUTODOC.CO.UK 3-14







4 Unscrew the wheel bolts.



## Replacement: coil springs – Skoda Octavia 1Z5. Tip:

- To avoid injury, hold up the wheel when unscrewing the bolts.
- Remove the wheel.



6 Clean all joints of the arm. Use a wire brush. Use WD-40 spray.



Make a mark on the camber adjustment bolt.



CLUB.AUTODOC.CO.UK 4-14







Unscrew the arm fastening to the beam. Use a combination spanner #18. Use a drive socket #18. Use a ratchet wrench.



Glean all joints of the arm. Use a wire brush. Use WD-40 spray.



Unscrew the fastener connecting the control arm to the rear knuckle. Use a combination spanner #18 (2 pieces).



Support the arm. Use a hydraulic transmission jack.




CLUB.AUTODOC.CO.UK 5-14







Remove the fastening bolt. Use a combination spanner #18. Use a crowbar.

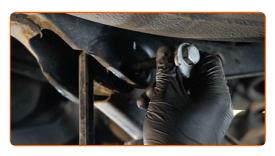

Remove the support from under the arm. Use a crowbar.



### **AUTODOC** recommends:

- Replacement: coil springs Skoda Octavia 1Z5. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.
- Pull down the suspension control arm. Take out the spring.



Remove the rubber spring spacer.



CLUB.AUTODOC.CO.UK 6-14







Clean the coil spring mounting seats. Use a wire brush. Use WD-40 spray.



Install the rubber spacer on the new coil spring.



Install the coil spring together with the rubber mounts into the mounting seats.



Clean the mounting seats and the thread of the suspension arm. Use a wire brush. Use WD-40 spray.



19

CLUB.AUTODOC.CO.UK 7-14







Support the arm. Use a hydraulic transmission jack. Use a crowbar.



21 Install the fastening bolt.



Adjust the position of the alignment bolt according to the mark.



Screw in the fastener connecting the control arm to the subframe. Use a drive socket #18. Use a ratchet wrench.



Remove the support from under the arm.



CLUB.AUTODOC.CO.UK 8-14








# Replacement: coil springs – Skoda Octavia 1Z5. AUTODOC experts recommend:

• Lower the hydraulic transmission jack smoothly, without jerks, to avoid damaging assemblies and mechanisms.

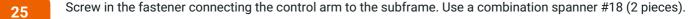



Support the arm. Use a hydraulic transmission jack.



- Screw in the fastener that connects the control arm to the rear knuckle. Use a combination spanner #18 (2 pieces).
- Tighten the fastener connecting the suspension arm to the rear knuckle. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 90 Nm torque.+90°



CLUB.AUTODOC.CO.UK 9-14








### **AUTODOC** recommends:

• Important! Be sure to use new fasteners.

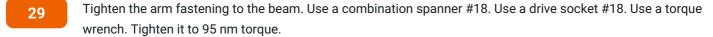



Remove the support from under the arm.



### **AUTODOC** recommends:

- Skoda Octavia 1Z5 Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.
- Treat the shock absorber fasteners. Treat all joints of the arm. Use copper grease.



31

CLUB.AUTODOC.CO.UK 10-14







Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



Clean the brake disk surface. Use a brake cleaner.



Replacement: coil springs – Skoda Octavia 1Z5. Professionals recommend:

• After applying the spray, wait a few minutes.

34

Install the wheel.



### **AUTODOC** recommends:

 Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Skoda Octavia 1Z5

CLUB.AUTODOC.CO.UK 11-14







Screw in the wheel bolts. Use wheel impact socket #17.



Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



Remove the jacks and chocks.





**VIEW MORE TUTORIALS** 

CLUB.AUTODOC.CO.UK 12-14





# AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

**BUY SPARE PARTS FOR SKODA** 

**COIL SPRINGS: A WIDE SELECTION** 

CLUB.AUTODOC.CO.UK 13-14







#### **CHOOSE CAR PARTS FOR SKODA OCTAVIA 1Z5**

**COIL SPRINGS FOR SKODA: BUY NOW** 

**COIL SPRINGS FOR SKODA OCTAVIA 1Z5: THE BEST DEALS** & OFFERS

### **(i) DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 - All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.

CLUB.AUTODOC.CO.UK 14-14