



How to change spark
plugs on **OPEL Astra F
CC (T92)** – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

ⓘ Important!

This replacement procedure can be used for:

OPEL Astra F CC (T92) 1.4 i (F08, M08, F68, M68), OPEL Astra F CC (T92) 1.4 Si (F08, M08, F68, M68), OPEL Astra F CC (T92) 1.6 i (F08, M08, F68, M68), OPEL Astra F CC (T92) 1.6 Si (F08, M08, F68, M68), OPEL Astra F CC (T92) 1.8 i (F08, M08, F68, M68), OPEL Astra F CC (T92) 2.0 i (F08, M08, F68, M68), OPEL Astra F CC (T92) 2.0 GSI 16V (F08, M08, F68, M68), OPEL Astra F CC (T92) 1.8 i 16V (F08, M08, F68, M68), OPEL Astra F CC (T92) 2.0 i 16V (F08, M08, F68, M68), OPEL Astra F CC (T92) 1.4 i 16V (F08, M08, F68, M68), OPEL Astra F CC (T92) 1.6 i 16V (F08, M08, F68, M68), OPEL Astra F CC (T92) 1.4 (F08, M08, F68, M68), OPEL Astra F CC (T92) 1.8 (F08, M08, F68, M68)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: OPEL Astra G CC (T98) 1.2 16V (F08, F48)

REPLACEMENT: SPARK PLUGS – OPEL ASTRA F CC (T92). TOOLS YOU MIGHT NEED:



- High-temperature anti-seize lubricant
- Electronic spray
- Torx bit T30
- Spark plug socket # 16
- Ratchet wrench
- Torque wrench
- Flat screwdriver
- Crow bar
- Fender cover

Buy tools

Replacement: spark plugs – OPEL Astra F CC (T92). Professionals recommend:

- The replacement procedure is the same for all spark plugs.
- Warning! Shut down the engine before starting any work – OPEL Astra F CC (T92).

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the hood. Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

2 Remove the engine cover.



3 Detach the connector from the ignition coil. Use a flat screwdriver.



4 Unscrew the ignition coil bracket. Use Torx T30. Use a ratchet wrench.



5 Pry up the ignition coil. Use a crowbar.



6 Take out the ignition coil from the spark plug well.



7 Clean dirt, dust and debris from inside the spark plug wells.



8 Unscrew the spark plugs. Use the spark plug socket #16. Use a ratchet wrench.




9 Take out the spark plugs.




10

Apply a thin layer of a special high temperature anti-seize lubricant to the threads of the new spark plugs.

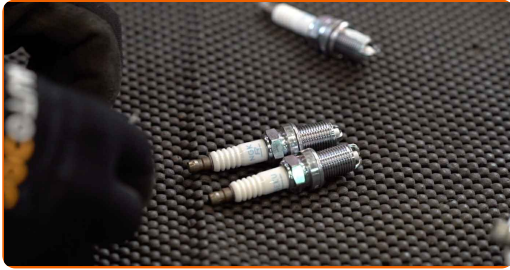


11

Install the new spark plugs into their mounting seats.

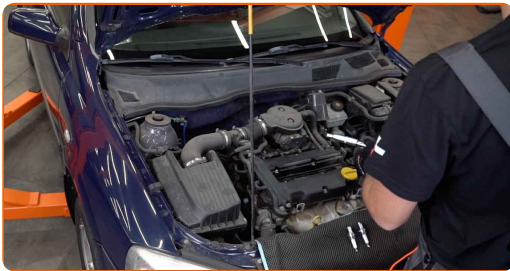

12

 Screw new spark plugs and tighten them. Use the spark plug socket #16. Use a torque wrench. Tighten it to 24 nm torque.




Replacement: spark plugs – OPEL Astra F CC (T92). AUTODOC recommends:

- Don't tighten the plugs with excessive force. Exceeding tightening torque can damage the thread connection.
- Be careful when working with a spark plug wrench. Its skewing can cause damage to the threaded connection.


13 Install the ignition coil to the spark plug well. Make sure you hear a click indicating that it is locked in place.



 14 Tighten the ignition coil fastening. Use Torx T30. Use a torque wrench. Tighten it to 15 nm torque.



 15 Treat the ignition coil connector with electronic spray. The spray will protect the electrical contacts from corrosion, oxidation, and will reduce the contact resistance.



Replacement: spark plugs – OPEL Astra F CC (T92). Tip:

- After applying the spray, wait a few minutes.


16

Plug in the ignition coil connector.



17

Install the engine cover and secure it. Make sure you hear a click indicating that it is locked in place.

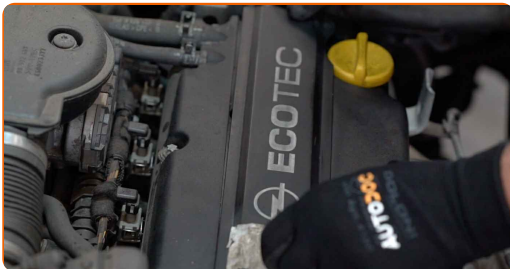

18

Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly. Shut off the engine.

19

Remove the fender protection cover.

20

Close the hood.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

SPARK PLUGS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.