



How to change fuel filter
on **OPEL Sintra (APV)** –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

OPEL Sintra (APV) 2.2 DTI

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: OPEL Zafira A (T98) 2.0 DI 16V (F75)

REPLACEMENT: FUEL FILTER – OPEL SINTRA (APV).
 TOOLS YOU NEED:



- All-purpose cleaning spray
- WD-40 spray
- Torx bit T30
- Drive socket # 10
- Ratchet wrench
- Fluid container
- Fender cover

Buy tools

Replacement: fuel filter – OPEL Sintra (APV). AUTODOC experts recommend:

- Ensure adequate ventilation of the workplace. Fuel vapors are poisonous.
- All work should be done with the engine stopped.

REPLACEMENT: FUEL FILTER – OPEL SINTRA (APV). USE THE FOLLOWING PROCEDURE:

 
1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.


3 Remove the cowl grille seal.



4 Remove the upper part of the scuttle panel.




5 Clean the fasteners of the lower part of the scuttle panel. Use WD-40 spray.

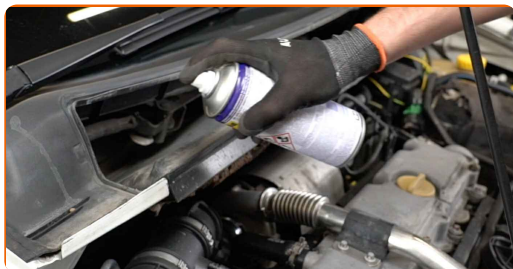


6 Unscrew the fasteners of the lower part of the scuttle panel. Use a drive socket #10. Use a ratchet wrench.



 
7 Remove the lower part of the scuttle panel.



 
8 Detach the fuel pressure sensor connector.



 
9 Clean the fuel filter housing and the cover. Use all-purpose cleaning spray.



 10 Unscrew the fasteners of the fuel filter housing cover. Use Torx T30. Use a ratchet wrench.



 
11 Remove the fuel filter housing cover.



AUTODOC recommends:

- Be careful! Fuel may leak from the filter housing and hoses.

 12 Prepare a container for fluids.



13 Remove the fuel filter.



14 Remove the old sealing ring.



15 Put the old filter cartridge in the container.

16 Install a new fuel filter.



 
Replacement: fuel filter – OPEL Sintra (APV). AUTODOC recommends:

- Make sure that the fuel filter is positioned correctly. Consider the fuel flow direction mark.
- During installation, take care to prevent dust and dirt from getting into the fuel filter housing.
- Take care to only use quality filters.


17 Install the new sealing ring.




18 Put the fuel filter cap back on.



 
19 Clean the fuel filter mounting bracket.



 
20 Tighten the fasteners of the fuel filter cover. Use Torx T30. Use a ratchet wrench.



21 Attach the fuel pressure sensor connector.

 

 22 Reinstall the lower part of the scuttle panel.




23 Screw in the fasteners of the lower part of the scuttle panel. Use a drive socket #10. Use a ratchet wrench.



24 Reinstall the upper part of the scuttle panel.



 25 Install the cowl grille seal.



Replacement: fuel filter – OPEL Sintra (APV). Tip:

- Before starting off, switch the ignition on and off several times. This should be done to activate the fuel pump to make it pump fuel through the fuel system.

- 26 Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.
- 27 Shut off the engine.
- 28 Remove the fender protection cover.
- 29 Close the hood.

Replacement: fuel filter – OPEL Sintra (APV). Tip from AUTODOC:

- To protect the environment from pollution, be sure to dispose of the used filters at special collection points.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
 **Google Play**

 **Download on the App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

FUEL FILTER: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.