+ AUTODOC CLUB

How to change air filter on **OPEL Vivaro A Van** (**X83**) – replacement guide







SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for:

OPEL Vivaro A Van (X83) 2.5 DTI (F7), OPEL Vivaro A Van (X83) 2.0 CDTI (F7), OPEL Vivaro A Van (X83) 2.5 CDTI (F7)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: OPEL Vivaro A Combi (X83) 2.5 CDTI (F7, J7, A07)


CLUB.AUTODOC.CO.UK 1-8







REPLACEMENT: AIR FILTER – OPEL VIVARO A VAN (X83). LIST OF THE TOOLS YOU'LL NEED:

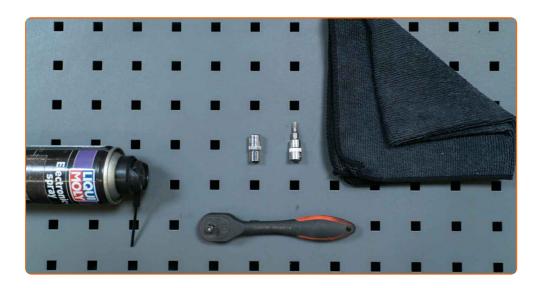

- Electronic spray
- 7 mm socket
- T25 Torx screwdriver

- Ratchet wrench
- Microfibre towel
- Fender cover

Buy tools

CLUB.AUTODOC.CO.UK 2-8







Replacement: air filter – OPEL Vivaro A Van (X83). Professionals recommend:

- Follow the maintenance intervals, recommendations, and requirements for using the part as specified by the manufacturer.
- All the work should be carried out with the ignition switched off.

REPLACEMENT: AIR FILTER - OPEL VIVARO A VAN (X83). TAKE THE FOLLOWING STEPS:

- 1 Open the bonnet.
- Use a fender protection cover to avoid damaging the paintwork and plastic parts of the car.
- Loosen the clamp of the air intake hose. Use a 7 mm socket. Use a ratchet wrench.



Detach the air intake hose from the MAF sensor.



CLUB.AUTODOC.CO.UK 3-8







- Plug the air intake hose with a microfibre towel to prevent dust and dirt from getting into the system.
- 6 Detach the connector from the MAF sensor.



Unscrew the air filter cover fasteners. Use a T25 Torx screwdriver.



8 Remove the air filter cover.



CLUB.AUTODOC.CO.UK 4-8







9 Remove the filter element from the filter housing.



10 Clean the air filter cover and housing.



Insert a new filter element into the filter housing.



Replacement: air filter – OPEL Vivaro A Van (X83). AUTODOC recommends:

- During installation, make sure to prevent dust and dirt from getting into the air filter housing.
- Take care to only use quality filters.

CLUB.AUTODOC.CO.UK 5-8







12 Install the air filter cover.



Tighten the air filter cover fasteners. Use a T25 Torx screwdriver.



Treat the connector of the MAF sensor. Use an electronic spray.



Reattach the connector to the MAF sensor.



Remove the microfibre towel from the air intake hose.



CLUB.AUTODOC.CO.UK 6-8







17 Attach the air intake hose to the MAF sensor.



Tighten the clamp of the air intake hose. Use a 7 mm socket. Use a ratchet wrench.



- 19 Remove the fender cover.
- Close the bonnet.



VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 7-8





AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

AIR FILTER: A WIDE SELECTION

① DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2025 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.

CLUB.AUTODOC.CO.UK 8-8