



How to change air filter
on **Peugeot 107 PM PN** –
replacement guide

VIDEO TUTORIAL



Important!

This replacement procedure can be used for:
PEUGEOT 107 Hatchback (PM, PN) 1.0

The steps may slightly vary depending on the car design.

REPLACEMENT: AIR FILTER – PEUGEOT 107 PM PN.
TOOLS YOU NEED:



- Clic-R collar pliers
- Microfibre towel

- Fender cover

BUY TOOLS

Replacement: air filter – Peugeot 107 PM PN. Tip from AUTODOC:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Warning! Shut down the engine before starting any work – Peugeot 107 PM PN.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1

Open the bonnet.




2

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.




3

Remove the fastening clamps of the air filter breather pipe and the air filter inlet pipe. Use clic-R collar pliers.

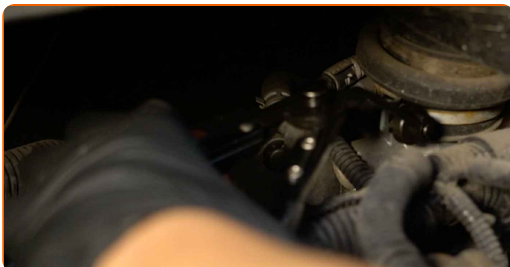

4 Release the air filter cover clips.

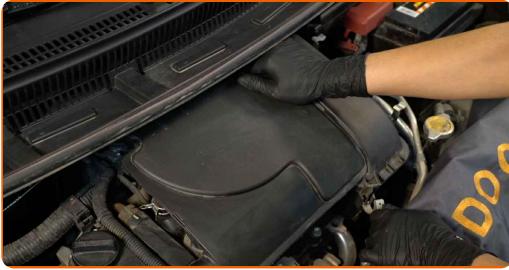


5 Take off the filter lid.




6 Cover the throttle body with a microfibre towel to prevent dust and dirt from getting into the system.



7 Remove the filter element from the filter housing.

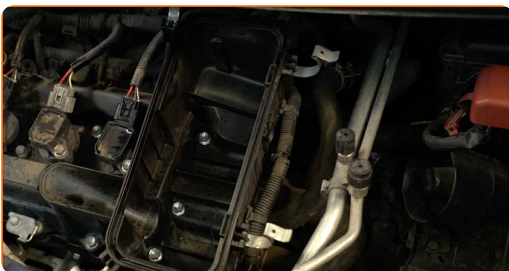

8 Clean the air filter cover and housing.

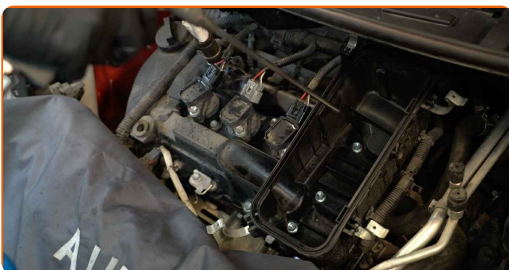


Replacement: air filter – Peugeot 107 PM PN. Tip from AUTODOC:

- Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

9

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.

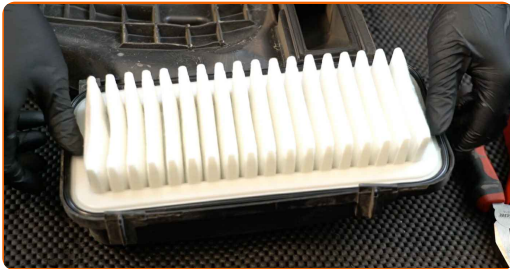

AUTODOC recommends:

- Replacement: air filter – Peugeot 107 PM PN. Be sure to position the filtering element correctly. Avoid misalignment.
- Take care to only use quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

10

Remove the microfibre towel from the throttle body.



 
11 Reinstall the air filter cover. Fasten it.



12 Press the air filter cover clips into place.



13 Install the fastening clamps of the air filter breather pipe and the air filter inlet pipe. Use clic-R collar pliers.




14 Remove the fender protection cover.



15

 Close the hood.



WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



AUTODOC

GET IT ON
 Google Play

Download on the
 App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR PEUGEOT

AIR FILTER: A WIDE SELECTION

CHOOSE CAR PARTS FOR PEUGEOT 107 PM PN

AIR FILTER FOR PEUGEOT: BUY NOW

AIR FILTER FOR PEUGEOT 107 PM PN: THE BEST DEALS & OFFERS

ⓘ DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.