


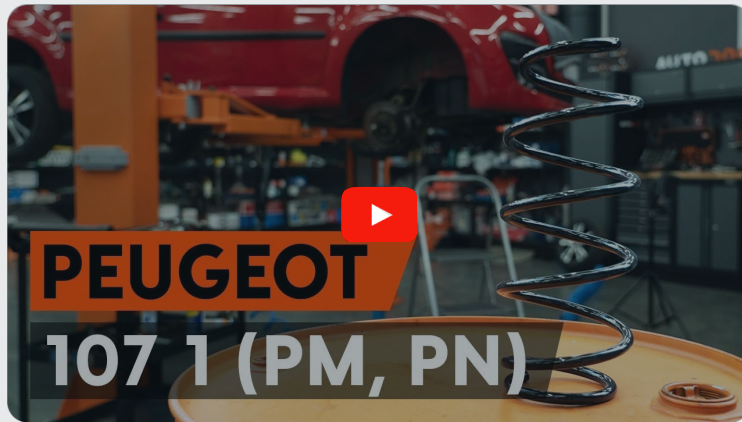

How to change front coil
springs on **Peugeot 107**
PM PN – replacement
guide

VIDEO TUTORIAL

** Important!**

This replacement procedure can be used for:
PEUGEOT 107 Hatchback (PM, PN) 1.4 HDi, PEUGEOT 108 Hatchback 1.0 VTi,
PEUGEOT 108 Hatchback 1.2, PEUGEOT 108 Hatchback 1.0 VTi 72

The steps may slightly vary depending on the car design.

**REPLACEMENT: COIL SPRINGS – PEUGEOT 107 PM PN.
TOOLS YOU NEED:**



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #10
- Combination spanner #17
- Combination spanner #19
- Drive socket # 10
- Drive socket # 12
- Drive socket # 14
- Drive socket # 17
- Drive socket # 30
- HEX bit no.H6.
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Tap wrench
- Hammer
- Pin punch
- Flat chisel
- Flat Screwdriver
- Crow bar
- Clip removal tool
- Chain wrench
- Ball joint puller
- Hydraulic transmission jack
- Hydraulic strut spring compressor
- Fender cover
- Wheel chock

 
BUY TOOLS

Replacement: coil springs – Peugeot 107 PM PN. Professionals recommend:

- Both coil springs of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the front suspension.
- Please note: all work on the car – Peugeot 107 PM PN – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the bonnet.




2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



3 Remove the windscreen wiper arm nut covers.



 
4 Unscrew the fasteners of the windscreen wiper arms. Use a drive socket #12. Use a ratchet wrench.




5 Remove the wiper arms.



 6 Remove the wiper cowl clips. Use a clip removal tool.



 7 Detach the windscreen washer nozzle hose.




8 Remove the wiper arm covers.




9

 Treat the fasteners of the windscreen wiper linkage panel. Use WD-40 spray.




10

 Unscrew the fasteners of the windscreen wiper linkage panel. Use a drive socket #10. Use a ratchet wrench.




11

 Detach the windscreen wiper connector. Use a flat screwdriver.




12

 
Remove the panel assembled with the windscreen wiper linkage.




13 Clean the fasteners of the shock strut upper mount. Use a wire brush. Use WD-40 spray.

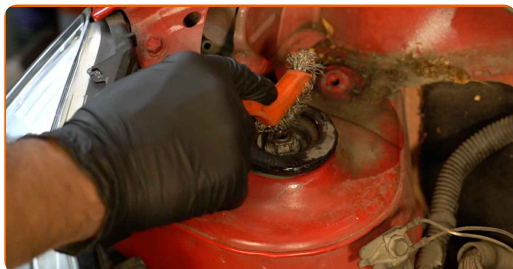

 
14 Loosen the upper fastener of the shock strut mount. Use HEX No.H6. Use a drive socket #17. Use a ratchet wrench.



15 Secure the wheels with chocks.

 

 
16 Loosen the wheel mounting bolts. Use wheel impact socket #17.



17 Raise the front of the car and secure on supports.




18 Unscrew the wheel bolts.

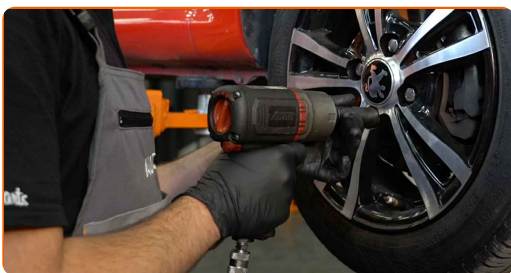


Replacement: coil springs – Peugeot 107 PM PN. AUTODOC recommends:

- To avoid injury, hold up the wheel when unscrewing the bolts.

19 Remove the wheel.

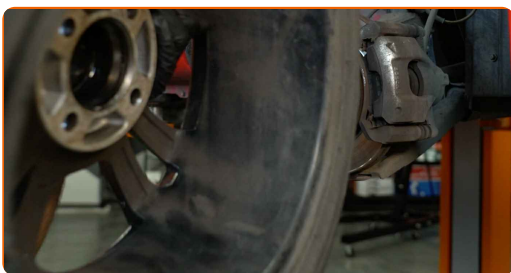


 20 Clean the fastener of the driveshaft. Use a wire brush. Use WD-40 spray.



21

 Unstake the fastener of the driveshaft. Use a flat metal-working chisel. Use a hammer.




22

Loosen the fastener of the driveshaft. Use a drive socket #30. Use a tap wrench.




23

 Remove the fastening nut. Use a drive socket #30.




24

 
Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.



 
25 Unscrew the brake hose fastening bracket from the shock strut. Use a drive socket #14. Use a ratchet wrench.



26 Disconnect the ABS sensor wiring.

 

 
27 Unscrew the lower fastener connecting the shock strut to the steering knuckle. Use a combination spanner #17. Use a drive socket #17. Use a ratchet wrench.




28 Remove the fastening bolt.



 
29 Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.



 
30 Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.



 
31 Unscrew the fastener connecting the stabilizer bar with the control arm. Use a combination spanner #10. Use a drive socket #12. Use a ratchet wrench.




32 Remove the stabilizer rod.

 

 
33 Remove the cotter pin. Use a crowbar.



 
34 Clean the fastener connecting the ball joint to the steering knuckle. Use a wire brush. Use WD-40 spray.



 35 Unscrew the ball joint fastening to the steering knuckle. Use a combination spanner #19.



 36 Disconnect the lower arm from the steering knuckle. Use a ball joint puller.



37 Remove the drive shaft. Use a pin punch. Use a hammer.




Replacement: coil springs – Peugeot 107 PM PN. Tip from AUTODOC experts:

- Make sure that the drive shaft is not unloaded (when the car is jacked).


38

Prop up the steering knuckle. Use a hydraulic transmission jack.

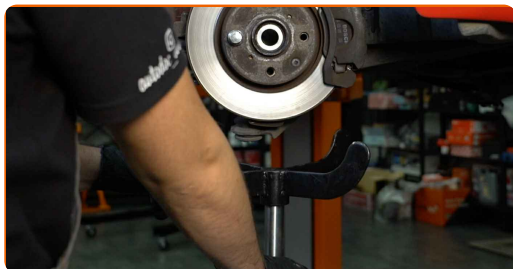


39

 Release the lower fastener connecting the shock strut to the steering knuckle. Use a flat metal-working chisel. Use a hammer.




40

 Disconnect the steering knuckle from the shock absorber strut.



41

 Unscrew the top fastening of the shock strut mount.




AUTODOC recommends:

- Peugeot 107 PM PN – To avoid injury, hold the suspension strut while unscrewing the fastening bolts.


42

Remove the suspension strut.

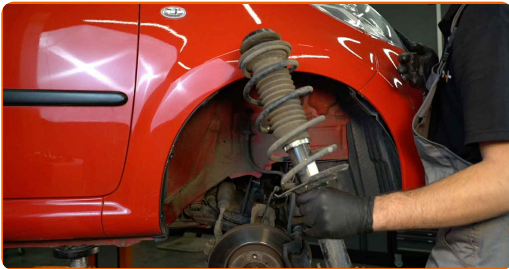

43

Set the shock absorber strut on the spring compressor tool.

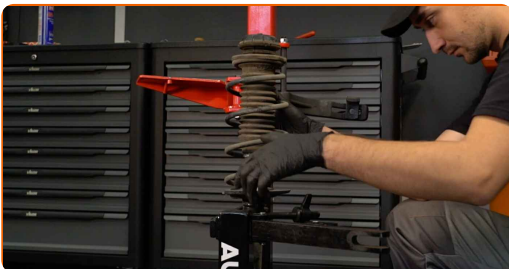


Replacement: coil springs – Peugeot 107 PM PN. AUTODOC experts recommend:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.


44 Compress the spring.



 
45 Treat the shock strut rod. Use a wire brush. Use WD-40 spray.



46 Remove the strut piston rod nut. Use HEX No.H6. Use a drive socket #17. Use a ratchet wrench.

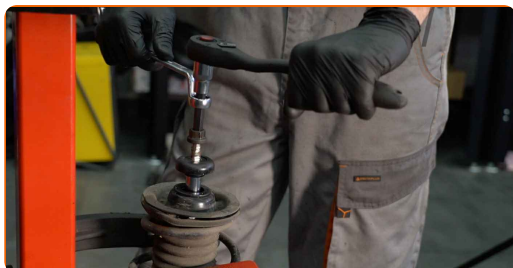

 
47 Remove the shock absorber mount, boot and bump stop.




AUTODOC recommends:

- Replacement: coil springs – Peugeot 107 PM PN. Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.

 48 Release the coil spring.



49 Remove the spring.

 

50 Install the spring on the shock absorber.




51 Compress the spring.



52 Install the mount, the boot and the bump stop on the shock absorber.



53 Tighten the shock strut piston rod nut. Use HEX No.H6. Use a drive socket #17. Use a chain wrench. Use a torque wrench. Tighten it to 55 Nm torque.

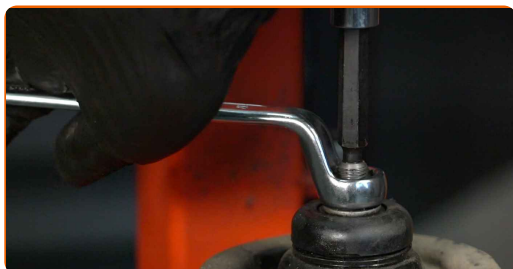


Replacement: coil springs – Peugeot 107 PM PN. Tip:

- Check to make sure the spring is positioned correctly. Avoid its misalignment.


54 Decompress the spring.



 55 Remove the assembled shock strut.




 56 Install the shock strut into the wheel arch.




57

Clean the mounting seats of the shock strut. Use a wire brush. Use WD-40 spray.

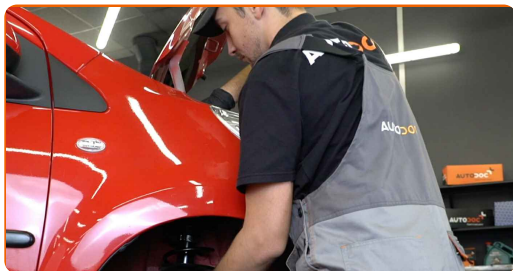

58

Screw the top fastening of the shock strut mount. Do not tighten it.

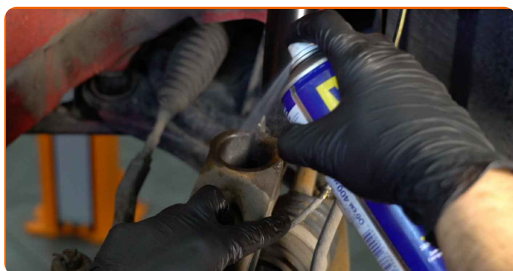


AUTODOC recommends:

- Important! Hold the suspension strut while screwing in the fastening bolts.
Peugeot 107 PM PN


59

 Fix the shock absorber strut on the steering knuckle.



60

 
Install the fastening bolt.



- 61 Screw in the fastener that connects the shock strut to the steering knuckle. Use a combination spanner #17. Use a drive socket #17. Use a ratchet wrench.



 
- 62 Clean the splines of the drive shaft CV joint. Use a wire brush. Use WD-40 spray.



- 63 Mount the drive shaft into the wheel hub.



 - 64 Remove the support from under the steering knuckle.



AUTODOC recommends:

- Replacement: coil springs – Peugeot 107 PM PN. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

 
65

Clean the fastener connecting the ball joint to the steering knuckle. Use a wire brush. Use WD-40 spray.




66

Connect the lower arm to the steering knuckle.




67

 
Install the transverse stabilizer link.




68 Tighten the brake hose fastening bracket to the shock strut. Use a drive socket #14. Use a ratchet wrench.

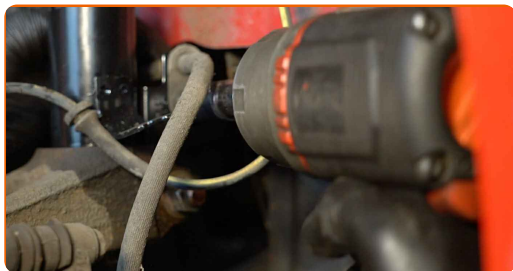


69 Connect the ABS sensor wiring.

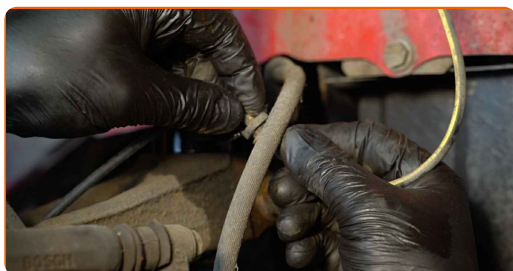

70 Tighten the lower fasteners connecting the shock strut to the steering knuckle. Use a combination spanner #17. Use a drive socket #17. Use a torque wrench. Tighten it to 52 Nm torque.

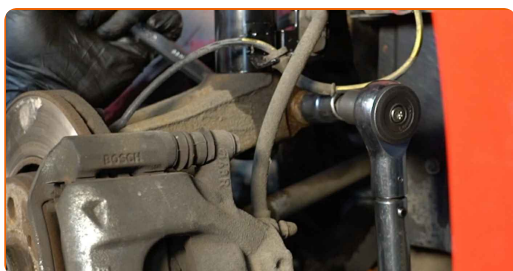


71 Install the fastening nut.

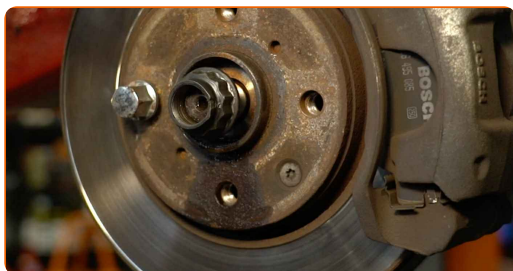


72

Tighten the drive shaft nut. Use a drive socket #30. Use a torque wrench. Tighten it to 216 Nm torque.

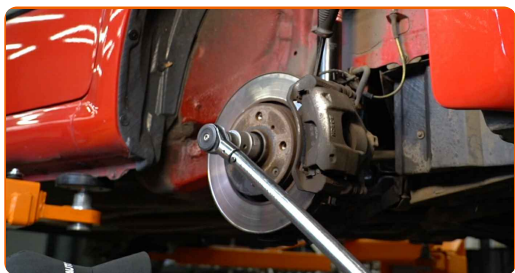


73

Restake the fastener of the driveshaft. Use a flat metal-working chisel. Use a hammer.

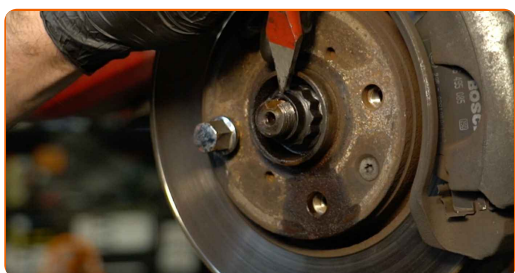

74

Tighten the ball joint fastener. Use a combination spanner #19. Use a torque wrench. Tighten it to 98 nm torque.

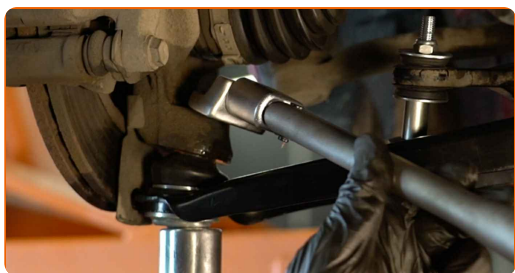


75


Install the cotter pin. Use a crowbar.




- 76** Tighten the fastener connecting the stabilizer bar with the control arm. Use a drive socket #12. Use a torque wrench. Tighten it to 18 Nm torque.

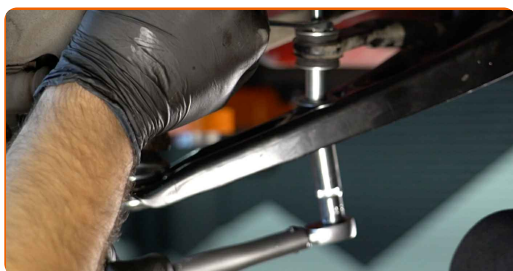


- 77** Treat the shock strut fasteners. Use copper grease.

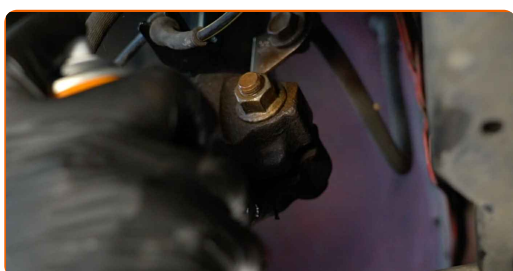

- 78** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

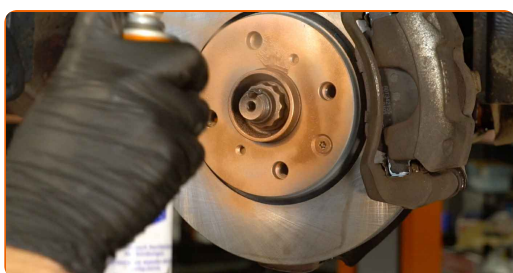

- 79** Clean the brake disk surface. Use a brake cleaner.

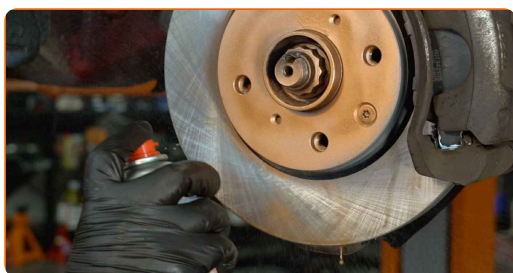

Replacement: coil springs – Peugeot 107 PM PN. AUTODOC recommends:

- After applying the spray, wait a few minutes.

80 Install the wheel.



 
AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Peugeot 107 PM PN


81 Screw in the wheel bolts. Use wheel impact socket #17.



82 Lower the car.



 
83 Tighten the upper fastener of the shock absorber strut mount. Use HEX No.H6. Use a drive socket #17. Use a torque wrench. Tighten it to 55 Nm torque.




84 Treat the fasteners of the shock strut mount. Use copper grease.



 
85 Install the panel assembled with the windscreen wiper linkage.



 
86 Screw in the fasteners of the windscreen wiper linkage panel. Use a drive socket #10. Use a ratchet wrench.



87 Attach the windscreen wiper connector.

 

88 Install the wiper arm covers.

 

89 Install the wiper cowl clips.



90 Attach the windscreen washer nozzle hose.




91 Reinstall the wiper arms.



Replacement: coil springs – Peugeot 107 PM PN. Tip from AUTODOC experts:

- Make sure not to mix up the wiper arms on the driver's and passenger's sides.

92 Tighten the fasteners of the wiper arms. Use a drive socket #12. Use a torque wrench. Tighten it to 18 Nm torque.

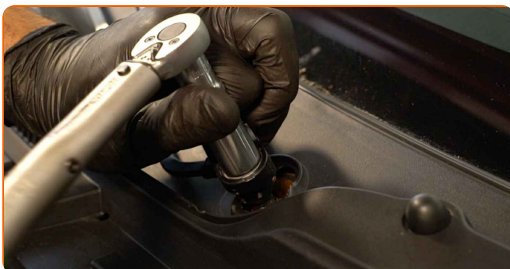

93 Install the nut covers of the windscreen wiper arms.



 
94 Remove the fender protection cover.



95 Close the hood.




96 Tighten the wheel bolts using a criss-cross pattern. Use wheel impact socket #17. Use a torque wrench. Tighten it to 100 nm torque.



97

 Remove the jacks and chocks.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR PEUGEOT

COIL SPRINGS: A WIDE SELECTION

CHOOSE CAR PARTS FOR PEUGEOT 107 PM PN

COIL SPRINGS FOR PEUGEOT: BUY NOW

**COIL SPRINGS FOR PEUGEOT 107 PM PN: THE BEST DEALS
& OFFERS**

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.