




How to change front
lower arm on **Peugeot**
107 PM PN –
replacement guide

VIDEO TUTORIAL

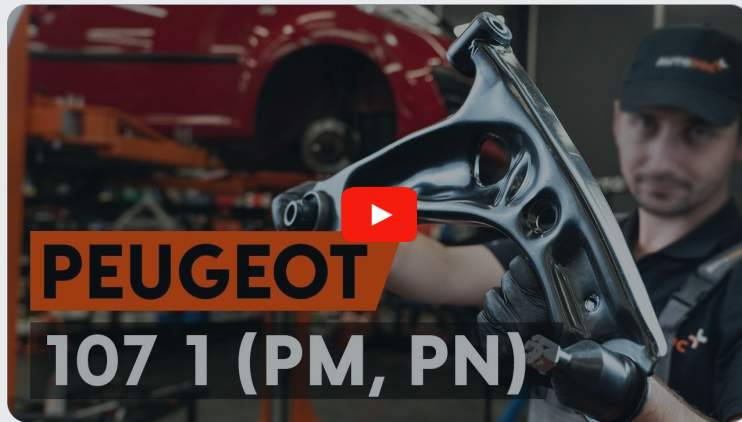

i Important!

This replacement procedure can be used for:
PEUGEOT 107 Hatchback (PM, PN) 1.4 HDi

The steps may slightly vary depending on the car design.

REPLACEMENT: FRONT LOWER ARM – PEUGEOT 107 PM PN. TOOLS YOU MIGHT NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #10
- Combination spanner #19
- Drive socket # 12
- Drive socket # 17
- Wheel impact socket #17
- Ratchet wrench
- Torque wrench
- Tap wrench
- Crow bar
- Ball joint puller
- Hydraulic transmission jack
- Wheel chock

BUY TOOLS

 
Replacement: front lower arm – Peugeot 107 PM PN. AUTODOC experts recommend:

- The replacement procedure is identical for the left and right lower control arms.
- Warning! Shut down the engine before starting any work – Peugeot 107 PM PN.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1

Secure the wheels with chocks.



2

Loosen the wheel mounting bolts. Use wheel impact socket #17.

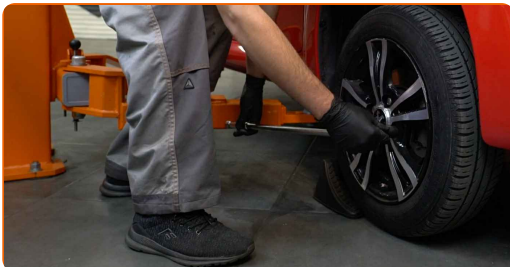


3

Raise the front of the car and secure on supports.



4

 Unscrew the wheel bolts.




Replacement: front lower arm – Peugeot 107 PM PN. Tip:

- To avoid injury, hold up the wheel when unscrewing the bolts.


5

 Remove the wheel.




6

 
Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.




- 7** Unscrew the fastener connecting the stabilizer bar with the control arm. Use a combination spanner #10. Use a drive socket #12. Use a ratchet wrench.

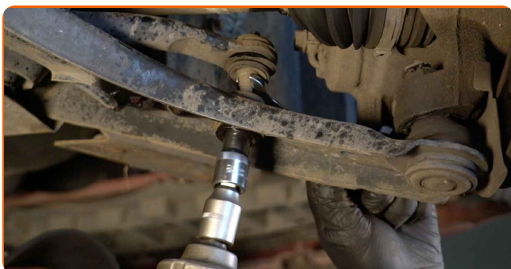

 - 8** Remove the stabilizer rod. Use a crowbar.



 - 9** Remove the cotter pin. Use a crowbar.




- 10** Clean the fastener connecting the ball joint to the steering knuckle. Use a wire brush. Use WD-40 spray.



11

 Unscrew the ball joint fastening to the steering knuckle. Use a combination spanner #19.




12

Disconnect the lower arm from the steering knuckle. Use a ball joint puller.



13

Clean all joints of the arm. Use a wire brush. Use WD-40 spray.

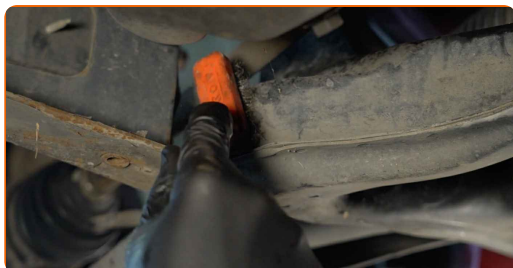


AUTODOC recommends:

- Replacement: front lower arm – Peugeot 107 PM PN. After applying the spray, wait a few minutes.


14

 Unscrew the front arm fastener. Use a drive socket #17. Use a tap wrench.




15

 Remove the front fastener of the control arm. Use a drive socket #17.




16

Unscrew the rear fastener connecting the control arm to the subframe. Use a drive socket #17. Use a tap wrench.

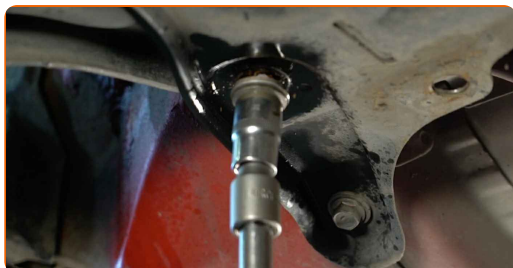


17


Remove the rear fastener of the control arm. Use a drive socket #17.

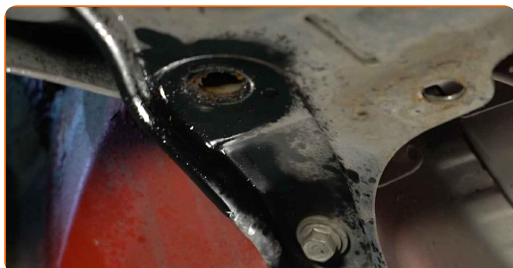


18 Remove the arm. Use a crowbar.

 

 19 Clean the mounting seats and the thread of the suspension arm. Use a wire brush. Use WD-40 spray.




20 Install a new arm.

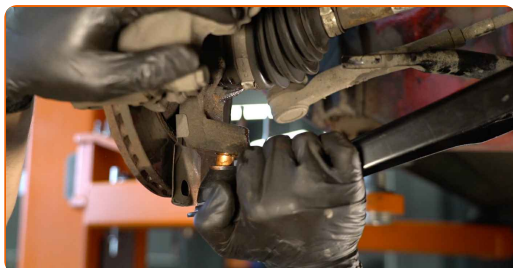


Replacement: front lower arm – Peugeot 107 PM PN. AUTODOC recommends:

- During the installation process, use only new bolts and nuts.
- Do not damage the ball joint cover.

 - 21** Install the control arm fasteners. Use a drive socket #17.



 - 22** Connect the lower arm to the steering knuckle.



- 23** Install the transverse stabilizer link.



- 24** Screw in the fastener connecting the stabilizer bar to the control arm. Use a combination spanner #10. Use a drive socket #12. Use a ratchet wrench.



- 25** Support the arm. Use a hydraulic transmission jack.



 
26

Screw the fastener connecting the ball joint to the steering knuckle. Use a combination spanner #19.




27

Tighten the rear fastener of the control arm. Use a drive socket #17. Use a torque wrench. Tighten it to 100 Nm torque.



28

Tighten the front fastener connecting the control arm to the subframe. Use a drive socket #17. Use a torque wrench. Tighten it to 116 Nm torque.

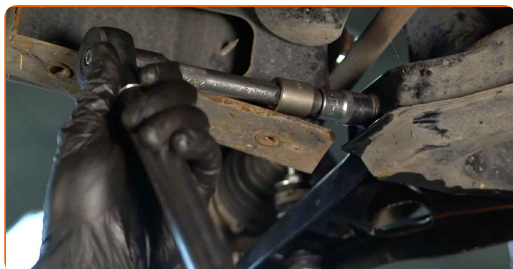


29

Tighten the ball joint fastener. Use a combination spanner #19. Use a torque wrench. Tighten it to 98 nm torque.



30

 Install the cotter pin. Use a crowbar.



31

Remove the support from under the arm.

 


AUTODOC recommends:

- Replacement: front lower arm – Peugeot 107 PM PN. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.


32

Tighten the fastener connecting the stabilizer bar with the control arm. Use a drive socket #12. Use a torque wrench. Tighten it to 18 Nm torque.




33

 Treat all joints of the arm. Use copper grease.




34

 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



35

 Clean the brake disk surface. Use a brake cleaner.




Replacement: front lower arm – Peugeot 107 PM PN. Professionals recommend:

- After applying the spray, wait a few minutes.

36

Install the wheel.

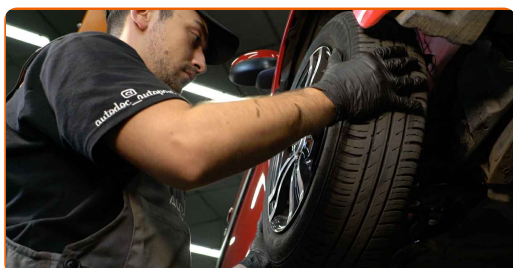

AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Peugeot 107 PM PN

37

Screw in the wheel bolts. Use wheel impact socket #17.



 
38

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 100 nm torque.



39

Remove the jacks and chocks.



WELL DONE!

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR PEUGEOT

CONTROL ARM: A WIDE SELECTION

CHOOSE CAR PARTS FOR PEUGEOT 107 PM PN

CONTROL ARM FOR PEUGEOT: BUY NOW

**CONTROL ARM FOR PEUGEOT 107 PM PN: THE BEST DEALS
& OFFERS**

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.