



How to change rear
brake pads on **PEUGEOT**
2008 Estate (CU_) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

PEUGEOT 2008 Estate (CU_) 1.2 VTi, PEUGEOT 2008 Estate (CU_) 1.6 VTi, PEUGEOT 2008 Estate (CU_) 1.6 HDi, PEUGEOT 2008 Estate (CU_) 1.4 HDi, PEUGEOT 2008 Estate (CU_) 1.6 BlueHdi 120, PEUGEOT 2008 Estate (CU_) 1.2 THP 110, PEUGEOT 2008 Estate (CU_) 1.2 THP 130, PEUGEOT 2008 Estate (CU_) 1.6 BlueHdi 100, PEUGEOT 2008 Estate (CU_) 1.6 BlueHdi 75, PEUGEOT 2008 Estate (CU_) 1.6 Griffé Flex, PEUGEOT 2008 Estate (CU_) 1.6 Flex, PEUGEOT 2008 Estate (CU_) 1.6 THP 165, PEUGEOT 2008 Estate (CU_) 1.2 PureTech 82, PEUGEOT 2008 Estate (CU_) 1.5 BlueHdi 120, PEUGEOT 2008 Estate (CU_) 1.5 BlueHdi 100

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: PEUGEOT 207 Hatchback 1.6 16V VTi

REPLACEMENT: BRAKE PADS – PEUGEOT 2008
ESTATE (CU_). TOOLS YOU NEED:



- Wire brush
- Nylon cleaning brush
- WD-40 spray
- All-purpose cleaning spray
- Brake cleaner
- Anti-squeal paste
- Copper grease
- Torque wrench
- Combination spanner #19
- Drive socket # 13
- Wheel impact socket #17
- Ratchet wrench
- Brake caliper wind back tool
- Pliers
- Water pump pliers
- Crow bar
- Wheel chock

[Buy tools](#)

Replacement: brake pads – PEUGEOT 2008 Estate (CU_). AUTODOC recommends:

 
- Perform the replacement of brake pads in complete set for each axis. This provides effective braking.
- The replacement procedure is identical for all brake pads on the same axle.
- Warning! Shut down the engine before starting any work – PEUGEOT 2008 Estate (CU_).

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the bonnet. Unscrew the brake fluid reservoir cap.

2 Secure the wheels with chocks.

3 Loosen the wheel mounting bolts. Use wheel impact socket #17.



4 Raise the rear of the car and secure on supports.

5 Unscrew the wheel bolts.



Replacement: brake pads – PEUGEOT 2008 Estate (CU_). Tip:

- To avoid injury, hold up the wheel when unscrewing the bolts.

6

Remove the wheel.




7

Clean the fastener of the parking brake cable. Use a wire brush. Use WD-40 spray.



8

Release the parking brake cable. Use water pump pliers. Use pliers. Use a crowbar.

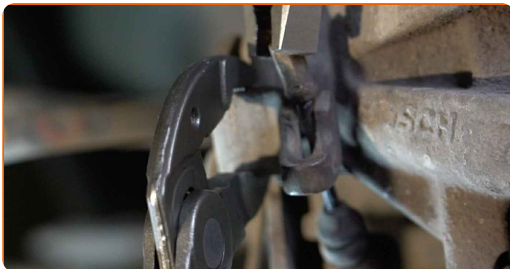


9

Clean the brake caliper fasteners. Use a wire brush. Use all-purpose cleaning spray.




10

Unscrew the brake caliper fastening. Use a combination spanner #19. Use a drive socket #13. Use a ratchet wrench.

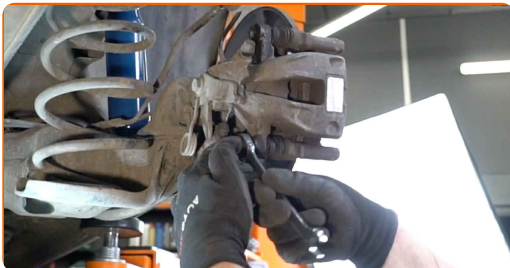

11

 Spread the brake pads. Use a crowbar.



12

Remove the brake caliper.



Replacement: brake pads – PEUGEOT 2008 Estate (CU_). Professionals recommend:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

13

Remove the brake pads. Use a crowbar.



AUTODOC recommends:

- Measure the brake disc thickness. Upon reaching the wear limit the part must be replaced.

14

Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.



AUTODOC recommends:

- After applying the spray, wait a few minutes.

15

Treat the brake caliper piston. Use a nylon cleaning brush. Use a brake cleaner.




Replacement: brake pads – PEUGEOT 2008 Estate (CU_). Tip from AUTODOC:

- After applying the spray, wait a few minutes.

16

Press in the brake caliper piston. Use brake caliper wind back tool.

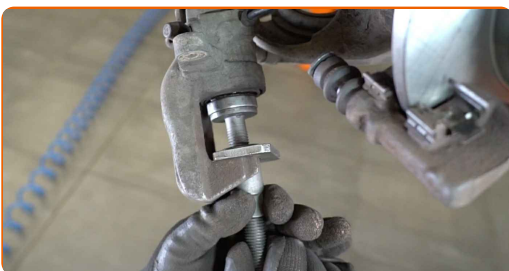

- 17** Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use anti-squeal paste.



AUTODOC recommends:

- Make sure the disc surface is clean before installing the pads.

- 18** Install new brake pads.



Replacement: brake pads – PEUGEOT 2008 Estate (CU_). AUTODOC experts recommend:

- Make sure the pads are installed with linings facing the disc.


19

Install the brake caliper and fix it. Use a combination spanner #19. Use a drive socket #13. Use a torque wrench. Tighten it to 30 Nm torque.




20

Install the parking brake cable into the brake caliper bracket. Use water pump pliers. Use pliers.

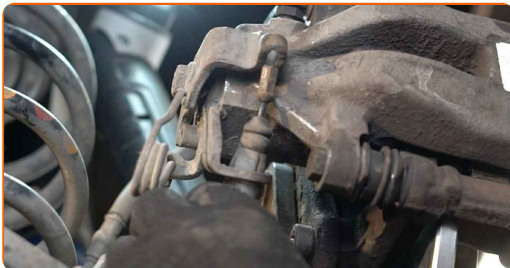


21

Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

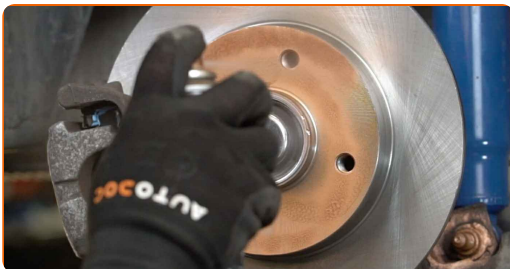

22

Clean the brake disk surface. Use a brake cleaner.

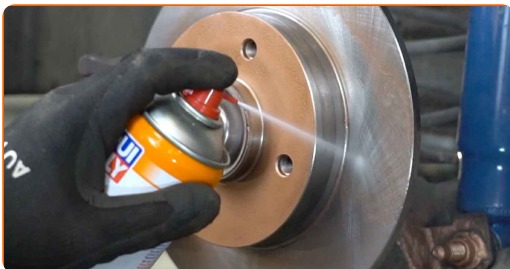

AUTODOC recommends:

- After applying the spray, wait a few minutes.

23 Install the wheel.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. PEUGEOT 2008 Estate (CU_)

24 Screw in the wheel bolts. Use wheel impact socket #17.



25 Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 100 Nm torque.



26 Remove the jacks and chocks.



AUTODOC recommends:

- Check the brake fluid level in the expansion tank and refill if necessary.

27 Tighten the brake fluid reservoir cap.

28 Close the hood.

Replacement: brake pads – PEUGEOT 2008 Estate (CU_). AUTODOC experts recommend:

- Without starting the engine, press the brake pedal several times until you feel significant resistance.
- Slow down smoothly for first 150-200 km after the brake pads replacement. Avoid unnecessary and sharp braking to a stop.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



AUTODOC

GET IT ON
 **Google Play**

Download on the
 **App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BRAKE PADS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.