



How to change rear
brake pads on **PEUGEOT
206 Hatchback (2A/C)** –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

PEUGEOT 206 Hatchback (2A/C) 2.0 S16, PEUGEOT 206 Hatchback (2A/C) 1.6 16V, PEUGEOT 206 Hatchback (2A/C) 2.0 RC, PEUGEOT 206 Hatchback (2A/C) 1.4 16V, PEUGEOT 206 Hatchback (2A/C) 1.6 HDi 110, PEUGEOT 206 Hatchback (2A/C) 1.6, PEUGEOT 206 Hatchback (2A/C) 1.6 BiFuel

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: PEUGEOT 206 Hatchback (2A/C) 1.6

REPLACEMENT: BRAKE PADS – PEUGEOT 206
HATCHBACK (2A/C). TOOLS YOU NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Anti-squeal paste
- Wheel impact socket #19
- Brake caliper wind back tool
- Torque wrench
- Rubber mallet
- Round-nose pliers
- Crow bar
- Wheel chock

Buy tools

Replacement: brake pads – PEUGEOT 206 Hatchback (2A/C). AUTODOC experts recommend:

- Perform the replacement of brake pads in complete set for each axis. This provides effective braking.
- The replacement procedure is identical for all brake pads on the same axle.
- Replacement: brake pads – PEUGEOT 206 Hatchback (2A/C). Use the following procedure:

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the bonnet. Unscrew the brake fluid reservoir cap.

2 Secure the wheels with chocks.



3 Loosen the wheel mounting bolts. Use wheel impact socket #19.



4 Raise the rear of the car and secure on supports.

5

Unscrew the wheel bolts.



Replacement: brake pads – PEUGEOT 206 Hatchback (2A/C). Tip:

- To avoid injury, hold up the wheel when unscrewing the bolts.

6

Remove the wheel.



7

Remove the retaining springs of the brake pads. Use a crowbar.



8

Remove the brake pad retaining pin. Use round-nose pliers.



9

Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.



10

Remove the retainer of the brake pads. Use a crowbar. Use a rubber mallet.



11

Remove the brake pads. Use a crowbar.



Replacement: brake pads – PEUGEOT 206 Hatchback (2A/C). Tip from AUTODOC experts:

- Measure the brake disc thickness. Upon reaching the wear limit the part must be replaced.


- 12** Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use anti-squeal paste.



Replacement: brake pads – PEUGEOT 206 Hatchback (2A/C). AUTODOC recommends:

- Make sure the disc surface is clean before installing the pads.

- 13** Install new brake pads.

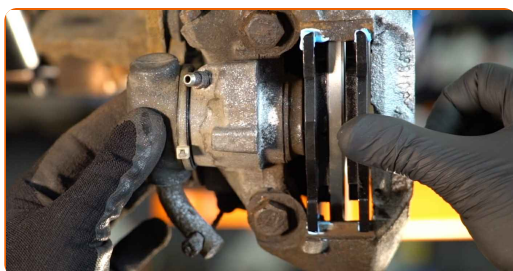


Replacement: brake pads – PEUGEOT 206 Hatchback (2A/C). Tip:

- Make sure the pads are installed with linings facing the disc.


- 14** Install the retainer of the brake pads. Use a crowbar.



 
15 Install the brake pad retaining pin.



 
16 Install the retaining springs of the brake pads.



 17 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



 18 Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: brake pads – PEUGEOT 206 Hatchback (2A/C). After applying the spray, wait a few minutes.

 
19 Install the wheel.



Replacement: brake pads – PEUGEOT 206 Hatchback (2A/C). AUTODOC experts recommend:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

20 Screw in the wheel bolts. Use wheel impact socket #19.



21 Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 100 Nm torque.



Replacement: brake pads – PEUGEOT 206 Hatchback (2A/C). Tip from AUTODOC:


- Check the brake fluid level in the expansion tank and refill if necessary.

22 Tighten the brake fluid reservoir cap. Close the hood.

AUTODOC recommends:

- PEUGEOT 206 Hatchback (2A/C) – Without starting the engine, press the brake pedal several times until it feels firm.

23 Remove the jacks and chocks.

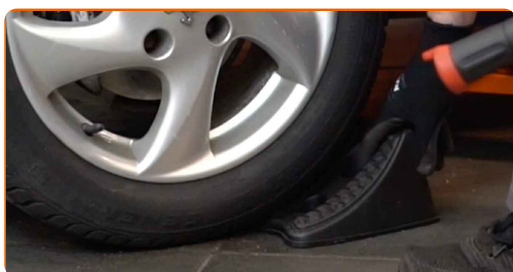

Replacement: brake pads – PEUGEOT 206 Hatchback (2A/C). Tip:

- Slow down smoothly for first 150-200 km after the brake pads replacement. Avoid unnecessary and sharp braking to a stop.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BRAKE PADS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.