



How to change right
engine mounts on

PEUGEOT 206

**Hatchback (2A/C) –
replacement guide**

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

PEUGEOT 206 Hatchback (2A/C) 2.0 S16, PEUGEOT 206 Hatchback (2A/C) 1.6 HDi 110

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: PEUGEOT 307 SW (3H) 2.0 HDi 135

REPLACEMENT: ENGINE MOUNTS – PEUGEOT 206 HATCHBACK (2A/C). TOOLS YOU MIGHT NEED:

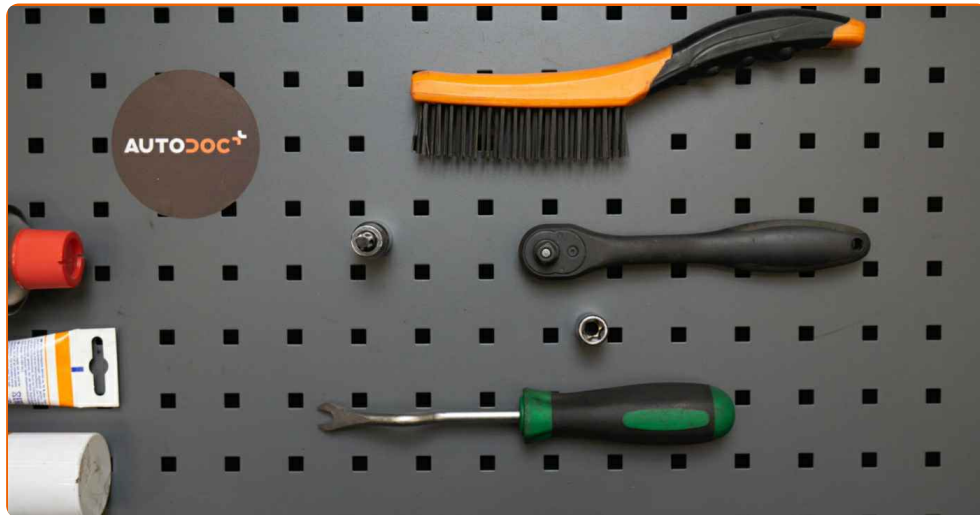

- Wire brush
- WD-40 spray
- Sealant
- Copper grease
- Torque wrench
- Drive socket # E14
- Torx bit T50
- Ratchet wrench
- Clip removal tool
- Jack
- Fender cover
- Wheel chock

Buy tools

Replacement: engine mounts – PEUGEOT 206 Hatchback (2A/C). AUTODOC experts recommend:


- All work should be done with the engine stopped.

REPLACEMENT: ENGINE MOUNTS – PEUGEOT 206 HATCHBACK (2A/C). RECOMMENDED SEQUENCE OF STEPS:


1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.


3 Release the coolant reservoir retainers. Use a clip removal tool.

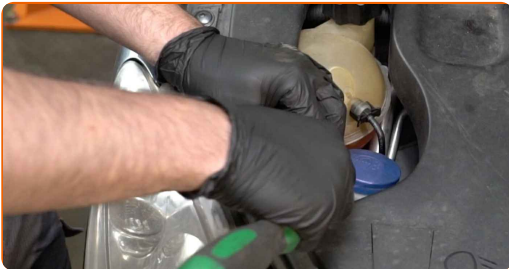

4 Remove the coolant reservoir cap.

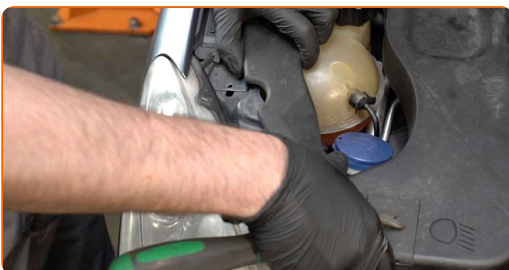

5 Remove the engine cover.

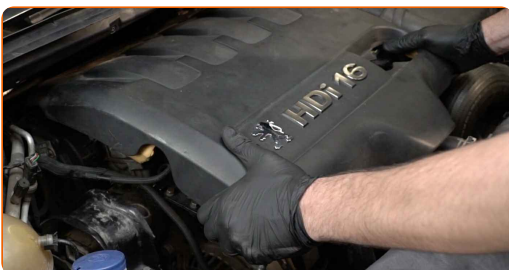

AUTODOC recommends:

- Replacement: engine mounts – PEUGEOT 206 Hatchback (2A/C). Do not use excessive force when removing the part as this may damage it.

6

Support the engine in the oil pan area. Use a jack.



7

Clean the engine mount fasteners. Use a wire brush. Use WD-40 spray.



8

Unscrew the fasteners that connect the engine mount to the car body. Use a drive socket #E14. Use a ratchet wrench.



9

Unscrew the engine mount fasteners. Use Torx T50. Use a ratchet wrench.



10

Remove the engine mount.



Replacement: engine mounts – PEUGEOT 206 Hatchback (2A/C). AUTODOC recommends:

- Carefully check the other engine mounts and replace them if necessary.

11

Remove the fastening bolts.



 
12

Clean the mounting seat of the engine mount. Use a wire brush. Use WD-40 spray.




13

Treat the engine mount fasteners. Use a sealant.



14

 Install the engine mount to its mounting seat.




15

Install the fastening bolts.




16

Screw in the engine mount fasteners. Use Torx T50. Use a ratchet wrench.

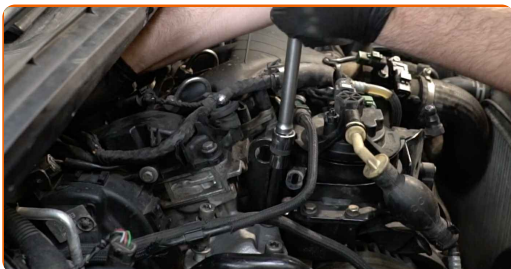


17

 Screw in the fasteners that connect the engine mount to the car body. Use a drive socket #E14. Use a ratchet wrench.




18

Tighten the fasteners that connect the engine mount to the car body. Use a drive socket #E14. Use a torque wrench. Tighten it to 60 nm torque.

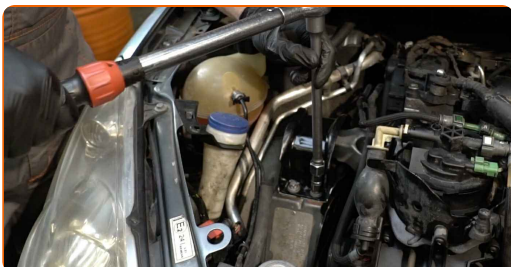

19

Tighten the engine mount fastening bolts. Use Torx T50. Use a torque wrench. Tighten it to 60 nm torque.

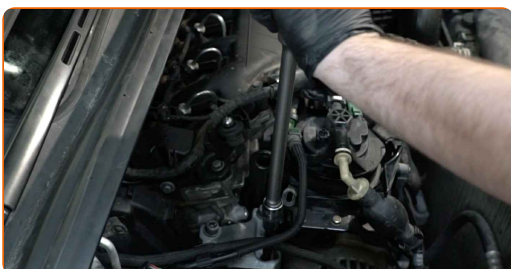

20 Remove the support from under the engine.



21 Treat the engine mount fasteners. Use copper grease.



22 Install the engine cover and secure it.



Replacement: engine mounts – PEUGEOT 206 Hatchback (2A/C).
Professionals recommend:


- When installing, do not use excessive force to avoid damage to the part.

23 Install the coolant reservoir cap.



24

Attach the coolant reservoir using its retainers.

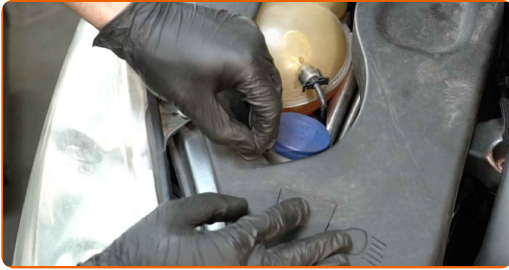

25

Remove the fender protection cover.

26

Close the hood.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

ENGINE MOUNTS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.