



How to change fuel filter  
on **PEUGEOT 206 SW**  
**(2E/K)** – replacement  
guide

## SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

### Important!

This replacement procedure can be used for:  
PEUGEOT 206 SW (2E/K) 2.0 HDi

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: CITROËN XSARA PICASSO (N68) 2.0 HDi

REPLACEMENT: FUEL FILTER – PEUGEOT 206 SW  
(2E/K). TOOLS YOU NEED:



- All-purpose cleaning spray
- Drive socket # 10
- Chain oil filter wrench
- Flat Screwdriver
- Crow bar
- Fender cover

**Buy tools**

Replacement: fuel filter – PEUGEOT 206 SW (2E/K). Tip from AUTODOC experts:


- Ensure adequate ventilation of the workplace. Fuel vapors are poisonous.
- Warning! Shut down the engine before starting any work – PEUGEOT 206 SW (2E/K)

## CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


**1** Open the bonnet.

**2** Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

**3** Unscrew the engine cover fastener. Use a drive socket #10.

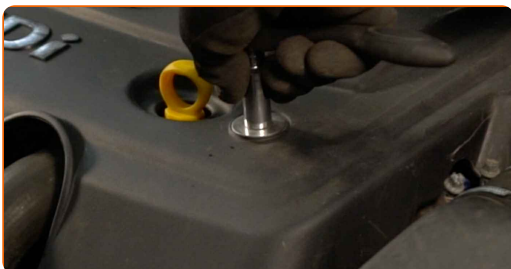

**4** Remove the engine cover.

 

**5** Clean the fuel filter. Use all-purpose cleaning spray.



**6** Detach the fuel pressure sensor connector. Use a crowbar.



**7** Disconnect the fuel supply lines from the fuel filter. Use a crowbar.




**Replacement: fuel filter – PEUGEOT 206 SW (2E/K). AUTODOC recommends:**

- Be careful! Fuel may leak from the filter housing and hoses.

**8** Loosen the fuel filter mounting. Use a chain oil filter wrench.



**9** Remove the fuel filter. Put the old filter cartridge in the container.

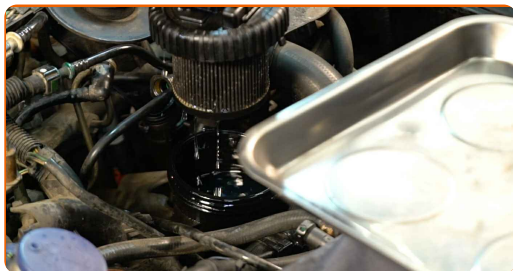


**10** Detach the old filter cartridge from the filter housing cover. Use a crowbar.



**11** Clean the fuel filter housing and the cover. Use all-purpose cleaning spray.



 **12** Fasten the fuel filter in the holder.



Replacement: fuel filter – PEUGEOT 206 SW (2E/K). Tip from AUTODOC experts:

- Make sure that the fuel filter is positioned correctly. Consider the fuel flow direction mark.
- During installation, take care to prevent dust and dirt from getting into the fuel filter housing.
- PEUGEOT 206 SW (2E/K) – It's important to only use high-quality filters.

 
13

Remove the rubber strip. Use a flat screwdriver.




14

Install the rubber strip.



15

 Install a new fuel filter.



**16** Tighten the fuel filter fasteners.



**17** Attach the fuel pressure sensor connector.



**18** Connect the fuel supply lines to the fuel filter.



Replacement: fuel filter – PEUGEOT 206 SW (2E/K). AUTODOC experts recommend:


- Before starting off, switch the ignition on and off several times. This should be done to activate the fuel pump to make it pump fuel through the fuel system.

**19** Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.

**20** Shut off the engine.



**21** Install the engine cover and secure it.

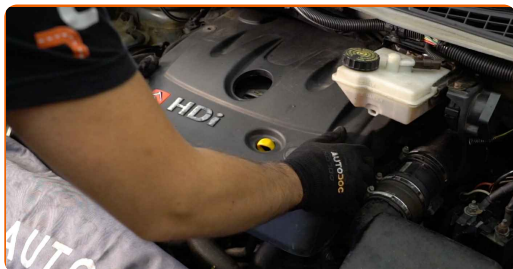

**AUTODOC recommends:**

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.
- Do not apply excessive force when installing the part. Otherwise you may damage the fasteners.

**22** Screw in the engine cover fasteners. Use a drive socket #10.



**23** Remove the fender protection cover.

**24** Close the hood.

Replacement: fuel filter – PEUGEOT 206 SW (2E/K). Professionals recommend:

- To protect the environment from pollution, be sure to dispose of the used filters at special collection points.

**WELL DONE!** 

[VIEW MORE TUTORIALS](#)

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
 **Google Play**

Download on the  
 **App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**FUEL FILTER: A WIDE SELECTION**

## **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.