- AUTODOC CLUB

How to change air filter on **PEUGEOT 207 Saloon** – replacement guide



SIMILAR VIDEO TUTORIAL




This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for: PEUGEOT 207 Saloon 1.4

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: CITROËN C3 I Hatchback (FC_, FN_) 1.4 i

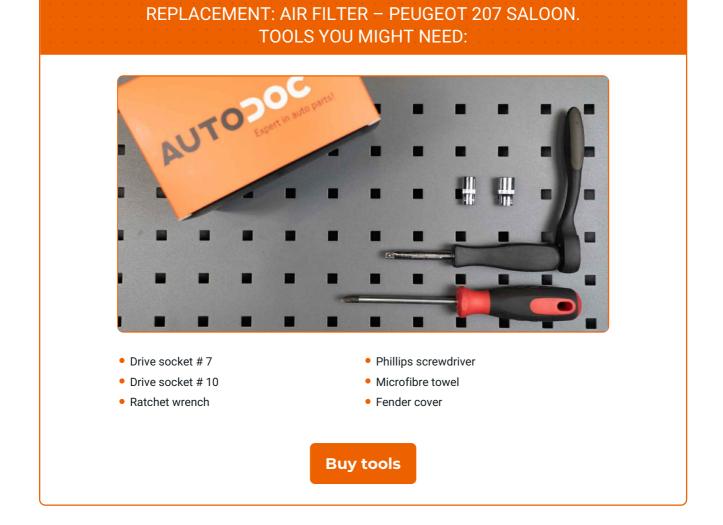

CLUB.AUTODOC.CO.UK

O

+ AUTODOC CLUB



Replacement: air filter – PEUGEOT 207 Saloon. AUTODOC recommends:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- All work should be done with the engine stopped.

REPLACEMENT: AIR FILTER – PEUGEOT 207 SALOON. RECOMMENDED SEQUENCE OF STEPS:

1 Open the bonnet.

2

3

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

Detach the air intake hose clamp. Use a drive socket #7. Use a ratchet wrench.





Disconnect the crankcase ventilation hose from the air duct.





5

Unscrew the filter housing fastening bolts. Use a drive socket #10. Use a ratchet wrench.



6

Remove the air filter housing.



7

Cover the air intake hose with a microfibre towel to prevent dust and dirt from getting into the system.



8

Undo the fastening screws of the air filter cover. Use a Phillips screwdriver.



+ AUTODOC CLUB



Take off the filter lid.



10

Remove the filter element from the filter housing.



11

Clean the air filter cover and housing.



AUTODOC recommends:

• Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

0)



12

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



Replacement: air filter – PEUGEOT 207 Saloon. AUTODOC experts recommend:

- Check out the correct location of the filter element. Do not skew.
- Take care to only use quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

13

Reinstall the air filter cover. Fasten it.



14

Screw in the fastening screws of the air filter cover. Use a Phillips screwdriver.



+ AUTODOC CLUB



15

Remove the microfibre towel from the air intake hose.



16

Reinstall the air filter housing.



17

Screw the filter housing fastening bolts. Use a drive socket #10. Use a ratchet wrench.



18

Connect the crankcase ventilation hose to the air duct.



19

Fasten the clamp on the air intake hose. Use a drive socket #7. Use a ratchet wrench.







Remove the fender protection cover.

Close the hood.



VIEW MORE TUTORIALS

ß

Ø



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

AIR FILTER: A WIDE SELECTION

(i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.