



How to change air filter
on **PEUGEOT 3008 I**
(0U_) – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:
PEUGEOT 308 I (0U_) 1.6 THP

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: PEUGEOT 308 I Hatchback (4A, 4C) 1.6 16V

REPLACEMENT: AIR FILTER – PEUGEOT 3008 I (0U_).
TOOLS YOU NEED:



- Combination spanner #7
- Torx bit T25
- Torx bit T20
- Ratchet wrench
- Fender cover

[Buy tools](#)

Replacement: air filter – PEUGEOT 3008 I (0U_). AUTODOC recommends:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Warning! Shut down the engine before starting any work – PEUGEOT 3008 I (0U_).

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

 
1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.


3 Unscrew the fasteners of the brake fluid reservoir (2 pieces). Use Torx T20.




4 Remove the brake fluid reservoir. Move it aside.



 5 Unscrew the clamp and fasteners on the air filter intake pipe. Use a combination spanner #7.



 6 Undo the fastening screws of the air filter cover (3 pieces). Use Torx T25. Use a ratchet wrench.




7 Disconnect the air intake pipe from the air filter housing.




8 Take off the filter lid.



 9 Remove the filter element from the filter housing.



 10 Clean the air filter cover and housing.



Replacement: air filter – PEUGEOT 3008 I (0U_). Tip from AUTODOC:

- Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

11 Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



Replacement: air filter – PEUGEOT 3008 I (0U_). Professionals recommend:

- Check out the correct location of the filter element. Do not skew.
- Take care to only use quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.


12 Reinstall the air filter cover. Fasten it.




13 Screw in the fastening screws of the air filter cover (3 pieces). Use Torx T25. Use a ratchet wrench.



14 Connect the air intake pipe to the air filter housing.

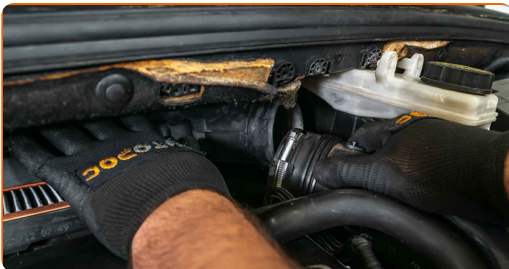

15 Tighten the clamp and fasteners on the air filter intake pipe. Use a combination spanner #7.

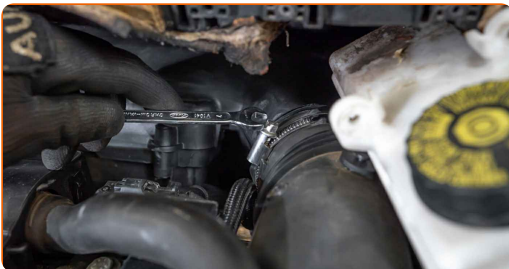


16 Install the brake fluid reservoir.



17

Tighten the brake fluid reservoir fasteners (2 pieces). Use Torx T20.

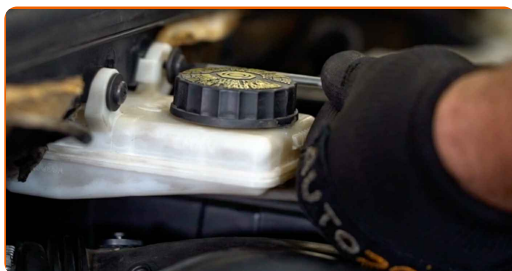

18

Remove the fender protection cover.

19

Close the hood.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



AUTODOC

GET IT ON
 **Google Play**

Download on the
 **App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

AIR FILTER: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.