



How to change air filter
on **PEUGEOT 306 Estate**
– replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

PEUGEOT 306 Estate 1.9 D, PEUGEOT 306 Estate 1.9 Td, PEUGEOT 306 Estate 1.8 D

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: CITROËN Berlingo / Berlingo First Van (M_) 1.9 D

REPLACEMENT: AIR FILTER – PEUGEOT 306 ESTATE.
 TOOLS YOU MIGHT NEED:



- Drive socket # 7
- Ratchet wrench
- Microfibre towel
- Fender cover

Buy tools

Replacement: air filter – PEUGEOT 306 Estate. AUTODOC experts recommend:


- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Please note: all work on the car – PEUGEOT 306 Estate – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Remove the air intake hose.

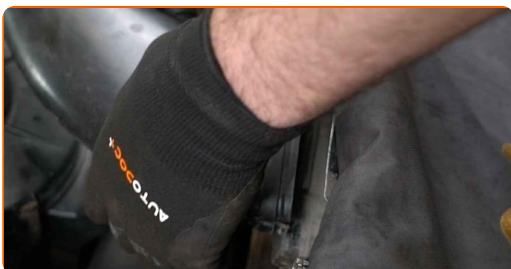

4 Loosen the fastening clamp connecting the air duct to the air filter housing. Use a drive socket #7. Use a ratchet wrench.

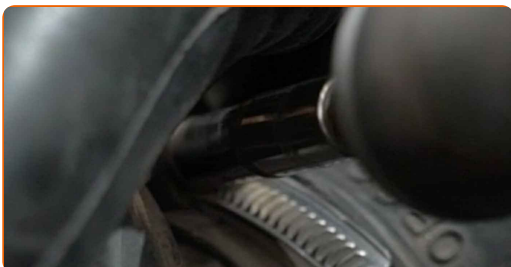

5 Disconnect the air intake pipe from the air filter housing.



6 Release the air filter cover clips.



 
7 Take off the filter lid.



8 Remove the filter element from the filter housing.



9 Cover the air intake hose with a microfibre towel to prevent dust and dirt from getting into the system.



10 Clean the air filter cover and housing.



11 Remove the microfibre towel from the air intake hose.



12 Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



AUTODOC recommends:

- Check out the correct location of the filter element. Do not skew.
- Attention! Use quality filters – PEUGEOT 306 Estate.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

13 Reinstall the air filter cover. Fasten it.



14 Press the air filter cover clips into place.



15 Install the air intake hose and secure it.



16 Screw the fastening clamp connecting the air duct to the air filter housing. Use a drive socket #7. Use a ratchet wrench.



17 Remove the fender protection cover.

18

Close the hood.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

AIR FILTER: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.