



How to change front
strut mount on
PEUGEOT 406 Coupe –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:
 PEUGEOT 406 Coupe 2.0 16V, PEUGEOT 406 Coupe 3.0 V6 24V, PEUGEOT 406 Coupe 3.0 V6, PEUGEOT 406 Coupe 2.2 HDI, PEUGEOT 406 Coupe 2.2

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: PEUGEOT 406 Saloon 2.2

**REPLACEMENT: STRUT MOUNT – PEUGEOT 406
COUPE. LIST OF THE TOOLS YOU'LL NEED:**



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- High-temperature ceramic grease
- Torque wrench
- Combination spanner #19
- Combination spanner #21
- HEX bit no.H6.
- Torx bit T50
- Drive socket # 10
- Drive socket # 16
- Drive socket # 17
- Drive socket # 21
- Drive socket # 36
- Wheel impact socket #19
- Ratchet wrench
- Flat chisel
- Hammer
- Pin punch
- Crow bar
- Flat Screwdriver
- Round-nose pliers
- Ball joint puller
- Hydraulic strut spring compressor
- Fender cover
- Wheel chock

Buy tools

Replacement: strut mount – PEUGEOT 406 Coupe. AUTODOC recommends:

 
- The replacement procedure is identical for the mounts of the left and right shock struts of the front suspension.
- All mounts of the front shock struts should be replaced simultaneously.
- All work should be done with the engine stopped.

REPLACEMENT: STRUT MOUNT – PEUGEOT 406 COUPE. USE THE FOLLOWING PROCEDURE:

1 Secure the wheels with chocks.



2 Loosen the wheel mounting bolts. Use wheel impact socket #19.



3 Raise the front of the car and secure on supports.

 
4 Unscrew the wheel bolts.




Replacement: strut mount – PEUGEOT 406 Coupe. Tip:

- To avoid injury, hold up the wheel when unscrewing the bolts.


5 Remove the wheel.



 
6 Clean the fastener that connects the sway bar link to the suspension strut. Use a wire brush. Use WD-40 spray.



 
- 7 Unscrew the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #19. Use HEX No.H6. Use a ratchet wrench.




- 8 Remove the stabilizer rod.

 

 - 9 Unscrew the ABS sensor wiring bracket. Use a drive socket #10. Use a ratchet wrench.




 - 10 Remove the bracket from the suspension strut.




11

 Clean the fastener connecting the tie rod end to the steering knuckle. Use a wire brush. Use WD-40 spray.




12

 Unscrew the end fastening nut to the steering knuckle. Use a drive socket #17. Use a ratchet wrench.



13

 Disconnect the tie rod end from the steering knuckle. Use a ball joint puller.




14

Clean the fastener that connects the suspension arm to the ball joint. Use a wire brush. Use WD-40 spray.

15

 Unscrew the fastener connecting the ball joint to the suspension control arm. Use a drive socket #21. Use a ratchet wrench.



16 Disconnect the ball joint from the control arm. Use a ball joint puller. Use a crowbar.



17 Remove the cotter pin securing the hub nut. Use round-nose pliers. Use a flat screwdriver.



18 Clean the wheel hub fastener. Use a wire brush. Use WD-40 spray.



 
19 Unscrew the wheel hub axle nut. Use a drive socket #36. Use a ratchet wrench.




20 Remove the fastening nut.




21 Detach the driveshaft from the steering knuckle. Use a pin punch. Use a hammer.



 
22 Clean the lower fastener connecting the suspension strut to the steering knuckle. Use a wire brush. Use WD-40 spray.



 
23 Unscrew the lower fastener connecting the shock strut to the steering knuckle. Use a drive socket #16. Use a ratchet wrench.




24 Remove the fastening bolt.

 

25 Release the lower fastener connecting the shock strut to the steering knuckle. Use a flat metal-working chisel. Use a hammer.

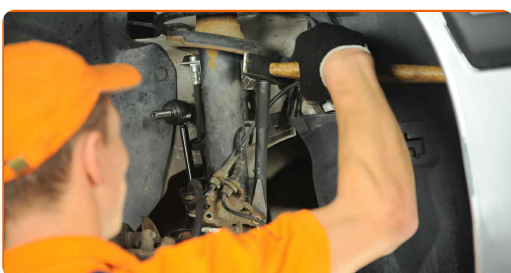

26 Disconnect the steering knuckle from the shock absorber strut.

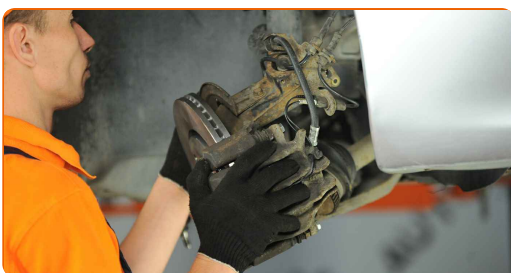

Replacement: strut mount – PEUGEOT 406 Coupe. Tip from AUTODOC experts:

- Make sure that the steering knuckle is supported.

27 Lower the car.

28 Open the bonnet.

29 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

30 Clean the fasteners of the shock strut upper mount. Use a wire brush. Use WD-40 spray.

 
31 Unscrew the upper fasteners of the shock strut. Use Torx T50. Use a ratchet wrench.




AUTODOC recommends:

- Important! Hold the suspension strut while unscrewing the fastening bolts.
PEUGEOT 406 Coupe

32 Remove the suspension strut.



 33 Set the shock absorber strut on the spring compressor tool.




Replacement: strut mount – PEUGEOT 406 Coupe. AUTODOC experts recommend:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.


34

 Compress the spring.



35

 Treat the shock strut rod. Use a wire brush. Use WD-40 spray.



36

 
Remove the strut piston rod nut. Use a combination spanner #21. Use HEX No.H6. Use a ratchet wrench.




37 Remove the top strut mount. Use a crowbar.



38 Install a new top shock strut mount.



 39 Tighten the shock strut piston rod nut. Use a combination spanner #21. Use HEX No.H6. Use a torque wrench. Tighten it to 65 Nm torque.




Replacement: strut mount – PEUGEOT 406 Coupe. Professionals recommend:

- Check to make sure the spring is positioned correctly. Avoid its misalignment.

40 Decompress the spring.

41 Remove the assembled shock strut.

42 Install the shock strut into the wheel arch.

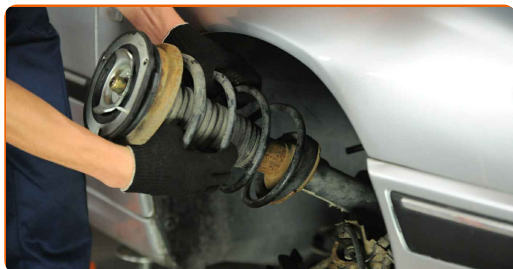


43 Secure the upper fasteners of the shock strut.

Replacement: strut mount – PEUGEOT 406 Coupe. Tip from AUTODOC:

- To avoid injuries, hold the shock strut when screwing the fastening bolts in.

 44 Tighten the upper fasteners of the shock strut. Use Torx T50. Use a torque wrench. Tighten it to 40 Nm torque.




45 Remove the fender protection cover.

46 Close the hood.

47 Raise the front of the car and secure on supports.

48

 Treat the shock strut mounting seat on the steering knuckle. Use a wire brush. Use WD-40 spray.



49

Release the lower fastener connecting the shock strut to the steering knuckle. Use a flat metal-working chisel. Use a hammer.


50

Fix the shock absorber strut on the steering knuckle.




51

Install the fastening bolt.

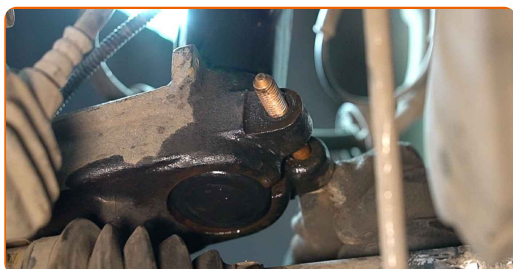


52

 
Tighten the lower fasteners of the suspension strut. Use a drive socket #16. Use a torque wrench. Tighten it to 55 Nm torque.



 53 Treat the splines of the driveshaft CV joint. Use a wire brush. Use WD-40 spray.



 54 Install the steering knuckle on the CV axle.




55 Attach the ball joint to the control arm.

56 Tighten the fastener that connects the suspension arm to the ball joint. Use a drive socket #21. Use a ratchet wrench. Tighten it to 45 Nm torque.



 
57 Install the fastening nut.



58 Tighten the hub. Use a drive socket #36. Use a torque wrench. Tighten it to 325 Nm torque.




 59 Install a new hub nut cotter pin. Use a hammer. Use a crowbar.




60 Install the bracket on the suspension strut.

 61 Tighten the ABS sensor wiring bracket. Use a drive socket #10. Use a ratchet wrench.




62 Install the transverse stabilizer link.

 63 Tighten the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #19. Use HEX No.H6. Use a torque wrench. Tighten it to 65 Nm torque.




64

 Connect the tie rod end to the steering knuckle.




65

 Tighten the fastening nut connecting the tie rod end to the steering knuckle. Use a drive socket #17. Use a torque wrench. Tighten it to 35 nm torque.



66

Treat the shock strut fasteners. Treat the fastener connecting the tie rod end to the steering knuckle. Treat all joints of the stabiliser link. Treat the ball joint fastener. Use copper grease.

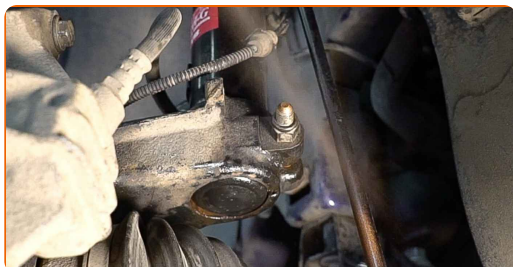


67

Treat the surface where the brake disc contacts the wheel rim. Use high-temperature ceramic grease.



68

 Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: strut mount – PEUGEOT 406 Coupe. After applying the spray, wait a few minutes.

69

Install the wheel.



Replacement: strut mount – PEUGEOT 406 Coupe. Tip:


- To avoid injury, hold up the wheel when screwing in the fastening bolts.

70


Screw in the wheel bolts. Use wheel impact socket #19.



- 71** Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 90 nm torque.

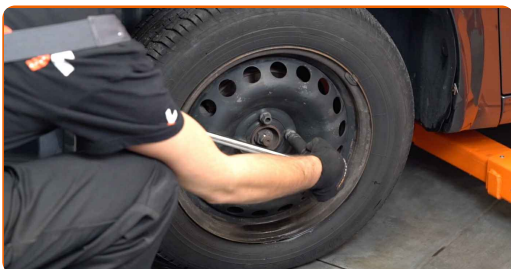

- 72** Remove the jacks and chocks.

 

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

STRUT MOUNT: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.