



How to change spark
plugs on **PEUGEOT 5008**
I (0U_, 0E_) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

PEUGEOT 5008 I (0U_, 0E_) 1.6 16V

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: PEUGEOT 308 I Hatchback (4A, 4C) 1.6 16V

REPLACEMENT: SPARK PLUGS – PEUGEOT 5008 I (0U_, 0E_). TOOLS YOU'LL NEED:

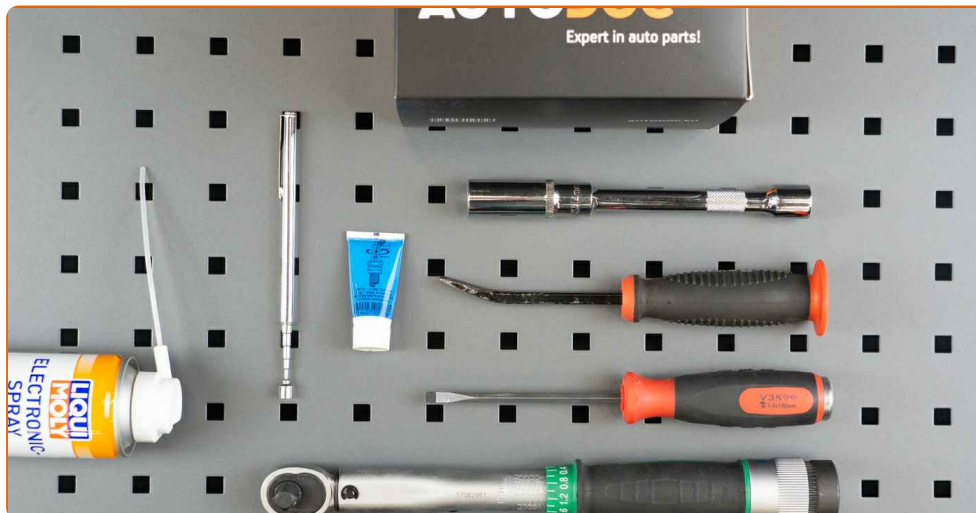

- Electronic spray
- Crow bar
- Spark plug socket # 14
- High-temperature anti-seize lubricant
- Torque wrench
- Fender cover
- Ignition coil removal tool
- Telescoping magnet

Buy tools

Replacement: spark plugs – PEUGEOT 5008 I (0U_, 0E_). AUTODOC experts recommend:


- The replacement procedure is the same for all spark plugs.
- All work should be done with the engine stopped.

REPLACEMENT: SPARK PLUGS – PEUGEOT 5008 I (0U_, 0E_). RECOMMENDED SEQUENCE OF STEPS:


1 Open the hood.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Unplug the connectors from the ignition coils. Use an ignition coil remover.

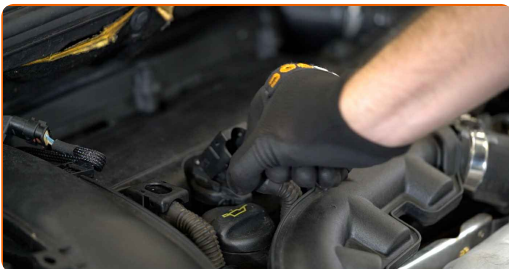

4 Pry up the ignition coil. Use a crowbar. Take out the ignition coil from the spark plug well.

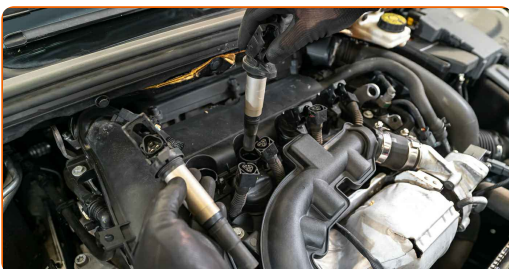

Replacement: spark plugs – PEUGEOT 5008 I (0U_, 0E_). Tip:

- Remember the sequence of steps for ignition coil demounting.

5 Clean dirt, dust and debris from inside the spark plug well.



6 Unscrew the spark plugs. Use the 12-point spark plug socket #14.



 
7 Take out the spark plugs. Use a telescoping magnet.




8 Apply a thin layer of a special high temperature anti-seize lubricant to the threads of the new spark plugs.



9 Install the new spark plugs into their mounting seats.



 
10 Screw new spark plugs and tighten them. Use the 12-point spark plug socket #14. Use a torque wrench. Tighten it to 23 nm torque.



Replacement: spark plugs – PEUGEOT 5008 I (0U_, 0E_). Tip from AUTODOC:

- Be careful when working with a spark plug wrench. Its skewing can cause damage to the threaded connection.
- Don't tighten the plugs with excessive force. Exceeding tightening torque can damage the thread connection.

 11 Install the ignition coil to the spark plug well. Make sure you hear a click indicating that it is locked in place.




AUTODOC recommends:

- Replacement: spark plugs – PEUGEOT 5008 I (0U_, 0E_). Follow the installation steps.


12

 Treat the ignition coil connector with electronic spray. The spray will protect the electrical contacts from corrosion, oxidation, and will reduce the contact resistance.




13

Plug in the connectors of the ignition coils.

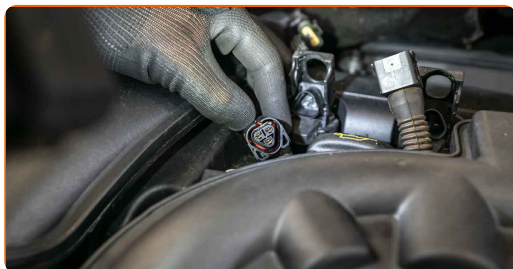

14

 Lock the connector.



15

Remove the fender protection cover.

16

Close the hood.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

SPARK PLUGS: A WIDE SELECTION

(i) DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.