



How to change fuel filter
on **PEUGEOT PARTNER**
Combispace (5F) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:
PEUGEOT PARTNER Combispace (5F) 1.9 D

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: CITROËN Berlingo / Berlingo First Van (M_) 1.9 D

REPLACEMENT: FUEL FILTER – PEUGEOT PARTNER
COMBISPACE (5F). TOOLS YOU MIGHT NEED:



- All-purpose cleaning spray
- Torque wrench
- HEX bit No.H4
- Ratchet wrench
- Hand-operated fluid syringe
- Fender cover

Buy tools

Replacement: fuel filter – PEUGEOT PARTNER Combispace (5F). Tip from AUTODOC:

- Ensure adequate ventilation of the workplace. Fuel vapors are poisonous.
- Please note: all work on the car – PEUGEOT PARTNER Combispace (5F) – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1 Open the hood.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Clean the fuel filter housing and the cover. Use all-purpose cleaning spray.



4 Unscrew the fasteners of the fuel filter cover. Use HEX No.H4. Use a ratchet wrench.

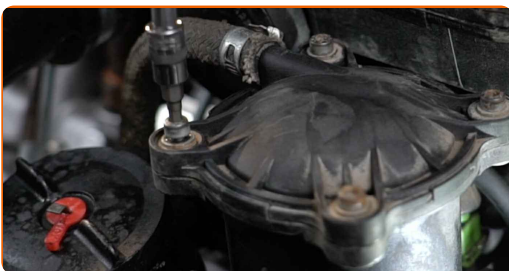

5 Remove the fuel filter housing cover.



6 Remove the fuel filter.



Replacement: fuel filter – PEUGEOT PARTNER Combispace (5F). AUTODOC recommends:

- Be careful! Fuel may leak from the filter housing and hoses.

7 Put the old filter cartridge in the container.



8 Pump the fuel out of the fuel filter housing. Use a hand-operated fluid syringe.




9 Install a new fuel filter.



AUTODOC recommends:

- Make sure that the fuel filter is positioned correctly. Consider the fuel flow direction mark.
- During installation, take care to prevent dust and dirt from getting into the fuel filter housing.
- PEUGEOT PARTNER Combispac (5F) – It's important to only use high-quality car parts.

10 Install and tighten the cap of the fuel filter housing.

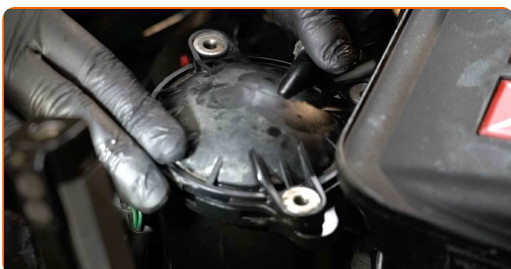

11 Tighten the fasteners of the fuel filter housing cover. Use HEX No.H4. Use a torque wrench. Tighten it to 9 Nm torque.



12 Clean the fuel filter housing and the cover. Use all-purpose cleaning spray.



13 Prime the fuel system manually.



14 Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.

**Replacement: fuel filter – PEUGEOT PARTNER Combispace (5F).
Professionals recommend:**

- To protect the environment from pollution, be sure to dispose of the used filters at special collection points.

15 Shut off the engine.

16 Remove the fender protection cover.

17 Close the hood.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

FUEL FILTER: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.