



How to change engine oil  
and filter on **Mini R50,**  
**R53** – replacement guide

## VIDEO TUTORIAL



### Important!

This replacement procedure can be used for:

MINI Hatchback (R50, R53) 1.6 One, MINI Hatchback (R50, R53) 1.6 Cooper, MINI Hatchback (R50, R53) 1.6 Cooper S, MINI Convertible (R52) 1.6 One, MINI Convertible (R52) 1.6 Cooper, MINI Convertible (R52) 1.6 Cooper S, MINI Convertible (R52) 1.6 John Cooper Works, MINI Hatchback (R56) 1.6 Cooper, MINI Hatchback (R50, R53) One, MINI Hatchback (R50, R53) 1.6 John Cooper Works

---

The steps may slightly vary depending on the car design.

REPLACEMENT: ENGINE OIL AND FILTER – MINI R50,  
R53. TOOLS YOU'LL NEED:



- Drive socket # 13
- Oil filter cup socket 76-14F
- Ratchet wrench
- Torque wrench
- Funnel
- Oil drain pan
- Microfibre towel
- Fender cover

**BUY TOOLS**

**AUTODOC recommends:**


- Replace the oil filter every time when changing motor oil.
- Wear gloves to prevent contact with hot liquid.
- Please note: all work on the car – Mini R50, R53 – should be done with the engine switched off.

**CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:**


**1** Open the hood. Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



**2** Clean the oil filter housing cap.

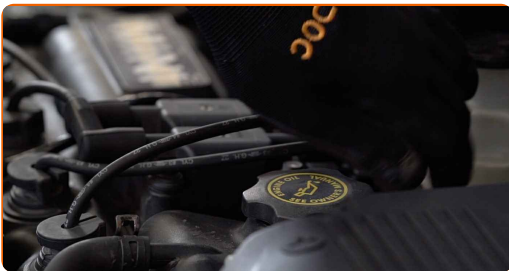

**3** Unscrew the filter housing cap together with the old filter element. Use the 76-14F socket. Use a ratchet wrench.

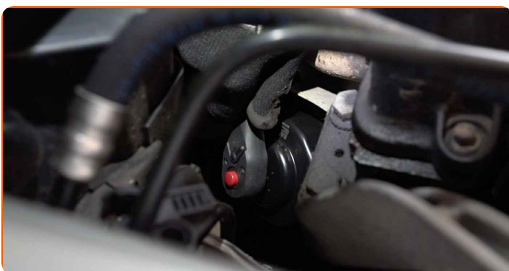

4 Prepare a container for the old oil filter.



 
5 Remove the filter element from the filter housing. Put the old filter cartridge in the container.



6 Cover the oil filter housing with a microfibre towel to prevent dirt and foreign objects from getting into the system.



7 Unscrew the oil filler plug.




8 Lift the car using a jack or place it over an inspection pit.

Replacement: engine oil and filter – Mini R50, R53. Tip:

- The vehicle must be on even keel, and if it is at an angle, the drain plug must be at the lowest point.

9

Put a waste oil container with at least 5 l capacity under the drainage hole.

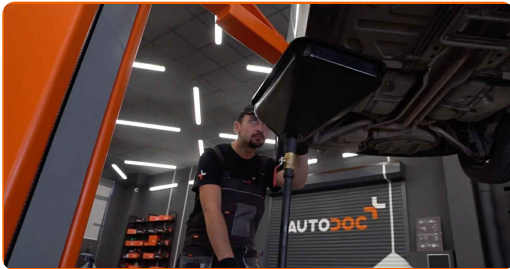


10

Unscrew the drain plug. Use a drive socket #13. Use a ratchet wrench.



11


Drain the used oil.

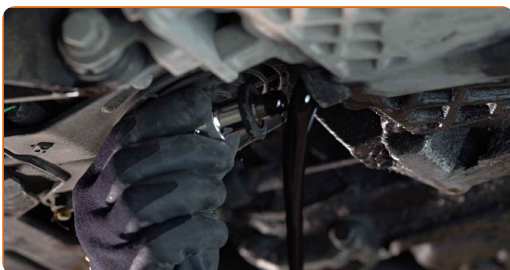


Replacement: engine oil and filter – Mini R50, R53. Professionals recommend:

- Caution! The oil may be hot.

12 Detach the oil filter from the filter cover.

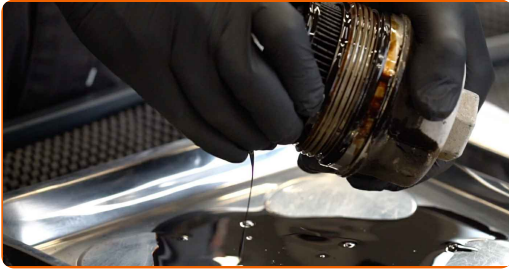

13 Remove the oil filter cover O-ring.

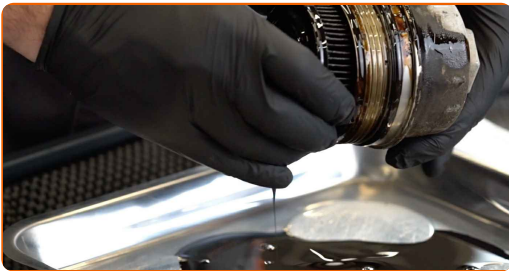

14 Install a new O-ring to its mounting seat on the filter cover.



15 Install the new oil filter to the mounting seat on the filter cover.



Please note!

- Make sure to install the filter correctly. Don't mix up the sides of the part.
- Wait until the oil has completely drained from the drainage hole.

16 Clean the area of the oil pan drainage hole.




17 Screw in the new drainage plug and tighten it. Use a drive socket #13. Use a torque wrench. Tighten it to 25 Nm torque.




18 Lower the car.

19 Remove the microfibre towel from the oil filter housing.

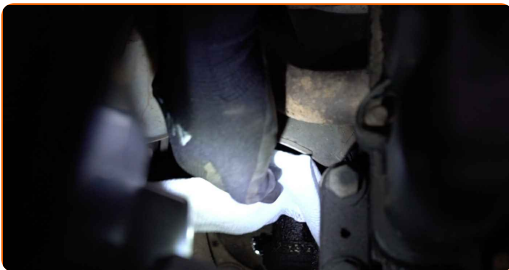


20 Lubricate the rubber seal of the new filter with a little amount of fresh oil.

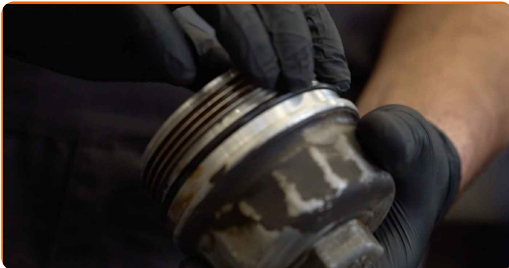




21

 Screw the new filter into its place.



22

 Screw the cap. Use the 76-14F socket. Use a torque wrench. Tighten it to 25 Nm torque.



23

Remove the oil filler cap.



24

Insert the funnel.



25

Pour oil into the engine through the filler. Required amount of oil: 4.8 l.



Replacement: engine oil and filter – Mini R50, R53. AUTODOC experts recommend:

- Use the oil recommended by the manufacturer.

26

Check the oil level using the dipstick. Top up oil if necessary.

 


Please note!

- The oil level should be between the Min and Max marks.


27

Tighten the oil filler cap.



28

 Run the engine for a few minutes. After the oil pressure warning light goes out, stop the engine.




**29** Check the oil level 5 minutes after the stop of the engine operation using a dipstick and add oil if necessary.



Please note!

- The oil level should be between the Min and Max marks.
- Make sure that the oil filler cap is properly tightened.
- Check the threaded plug of the drainage hole and the oil filter seal for tightness. If necessary, carefully tighten them up.

 **30** Remove the fender protection cover. Close the hood.



Replacement: engine oil and filter – Mini R50, R53. AUTODOC recommends:

- Note that oil pressure warning light, which indicates insufficient pressure in the lubrication system, may be on for a longer time than usual. After a few seconds, the oil will fill all the channels, and the light will go out.
- To protect the environment from pollution, be sure to dispose of the used filters at special collection points.

**WELL DONE!** 

[VIEW MORE TUTORIALS](#)

## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

**AUTODOC+**

GET IT ON  
Google Play

Download on the  
App Store

Download

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR MINI**

**OIL FILTER: A WIDE SELECTION**

**CHOOSE CAR PARTS FOR MINI R50, R53**

**OIL FILTER FOR MINI: BUY NOW**

**OIL FILTER FOR MINI R50, R53: THE BEST DEALS & OFFERS**

### **ⓘ DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.