



How to change air filter  
on **Toyota RAV4 II** –  
replacement guide

## VIDEO TUTORIAL

** Important!**

This replacement procedure can be used for:

TOYOTA PREVIA (MCR3\_, ACR3\_, CLR3\_) 2.4 (ACR30), TOYOTA Alphard (\_H1\_) 2.4 Hybrid 4WD, TOYOTA Alphard (\_H1\_) 2.4, TOYOTA Alphard (\_H1\_) 2.4 4WD, TOYOTA RAV 4 II (CLA2\_, XA2\_, ZCA2\_, ACA2\_) 2.4 4WD (ACA23, ACA22)

The steps may slightly vary depending on the car design.

REPLACEMENT: AIR FILTER – TOYOTA RAV4 II. LIST OF THE TOOLS YOU'LL NEED:



• Microfibre towel

• Fender cover

**BUY TOOLS**


Replacement: air filter – Toyota RAV4 II. Tip from AUTODOC experts:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Please note: all work on the car – Toyota RAV4 II – should be done with the engine switched off.

**CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:**


1

Open the hood.

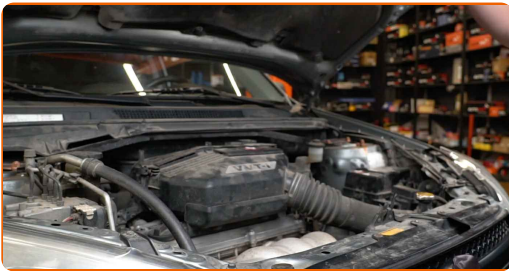


2

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

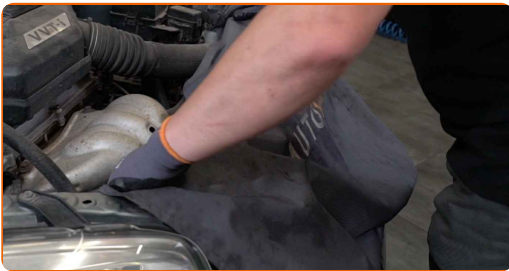

3

Release the air filter cover clips.

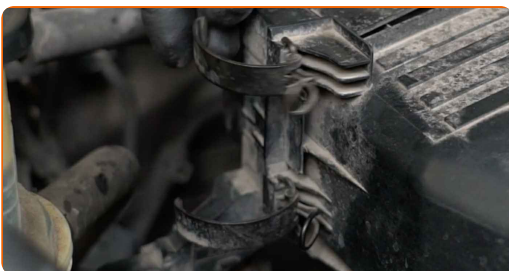

**4** Take off the filter lid.




**AUTODOC recommends:**

 - Replacement: air filter – Toyota RAV4 II. Do not use excessive force when removing the part as this may damage it.

**5** Remove the filter element from the filter housing.



**6** Cover the air intake hose with a microfibre towel to prevent dust and dirt from getting into the system.



**7** Clean the air filter cover and housing.



**8** Remove the microfibre towel from the air intake hose.




**9** Insert a new filter element into the filter housing.



**Replacement: air filter – Toyota RAV4 II. AUTODOC experts recommend:**

 - During installation, make sure to prevent dust and dirt from getting into the air filter housing.
- Take care to only use quality filters.

**10** Reinstall the air filter cover. Fasten it.




**AUTODOC recommends:**

- Replacement: air filter – Toyota RAV4 II. To avoid damaging the part during installation, do not use excessive force.


**11**

Press the air filter cover clips into place.

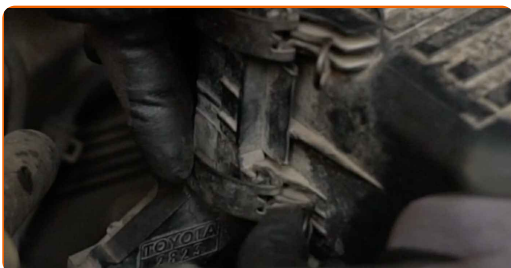


**12**

Remove the fender protection cover.

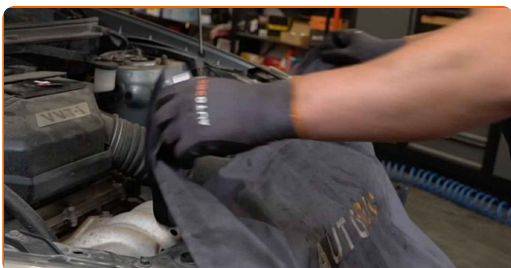

**13**

 Close the hood.



**WELL DONE!** 

**VIEW MORE TUTORIALS**

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  **Google Play**

 **Download on the App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR TOYOTA**

**AIR FILTER: A WIDE SELECTION**



**CHOOSE CAR PARTS FOR TOYOTA RAV4 II**

**AIR FILTER FOR TOYOTA: BUY NOW**

**AIR FILTER FOR TOYOTA RAV4 II: THE BEST DEALS &  
OFFERS**

### **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.