# - AUTODOC CLUB

How to change front anti roll bar links on **Toyota RAV4 II** – replacement guide



#### **VIDEO TUTORIAL**




(i) Important!

This replacement procedure can be used for:

TOYOTA COROLLA (ZZE12\_, NDE12\_, ZDE12\_) 1.8 VVTL-i TS (ZZE123\_), TOYOTA RAV 4 II (CLA2\_, XA2\_, ZCA2\_, ACA2\_) 1.8 (ZCA25\_, ZCA26\_), TOYOTA RAV 4 II (CLA2\_, XA2\_, ZCA2\_, ACA2\_) 2.0 D 4WD (CLA20\_, CLA21\_), TOYOTA COROLLA Saloon (\_E12J\_, \_E12T\_) 1.4 D-4D (NDE120\_), TOYOTA RAV 4 II (CLA2\_, XA2\_, ZCA2\_, ACA2\_) 2.4 4WD, TOYOTA COROLLA (ZZE12\_, NDE12\_, ZDE12\_) 1.8 VVTi (ZZE122), TOYOTA COROLLA Saloon (\_E12J\_, \_E12T\_) 2.0 D-4D (CDE120\_), TOYOTA COROLLA (ZZE12\_, NDE12\_, ZDE12\_) 1.8 4WD, TOYOTA CELICA (ZZT23\_) 1.8, TOYOTA RAV 4 II (CLA2\_, XA2\_, ZCA2\_, ACA2\_) 2.0, TOYOTA RAV 4 II (CLA2\_, XA2\_, ZCA2\_, ACA2\_) 2.4, TOYOTA COROLLA (ZZE12\_, NDE12\_, ZDE12\_) 1.8 VVTL-i TS

The steps may slightly vary depending on the car design.

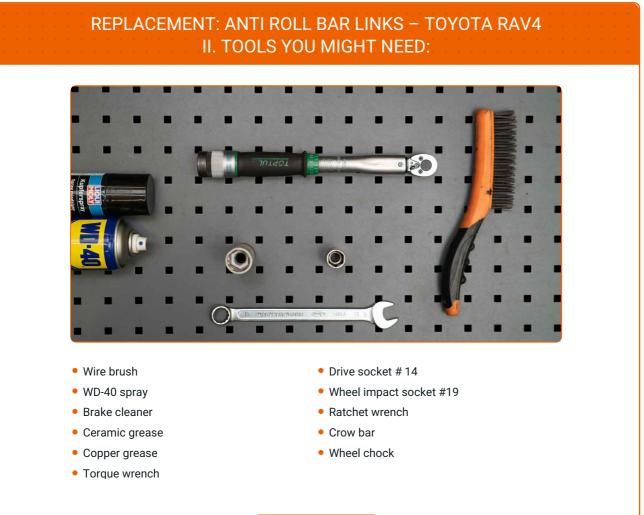

**BUY TOOLS** 

4

O



#### AUTODOC recommends:

- Replace the stabiliser links on Toyota RAV4 II in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- Please note: all work on the car Toyota RAV4 II should be done with the engine switched off.

## CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:



Secure the wheels with chocks.

2

Loosen the wheel mounting bolts. Use wheel impact socket #19.



3

Raise the car.



# + AUTODOC CLUB



ဂြာ



6

Clean the sway bar link fastener. Use a wire brush. Use WD-40 spray.



7

Unscrew the fastener connecting the stabilizer link to the shock strut. Use a drive socket #14. Use a ratchet wrench.



8

Clean the sway bar link fastener. Use a wire brush. Use WD-40 spray.



9

Unscrew the fastener connecting the stabilizer link to the stabilizer bar. Use a drive socket #14. Use a ratchet wrench.



# + AUTODOC CLUB



10

Remove the stabilizer rod. Use a crowbar.



# Replacement: anti roll bar links – Toyota RAV4 II. AUTODOC experts recommend:

• Examine stabiliser bushes. Replace them if needed.

11

Clean the mounting seats of the stabiliser link. Use a wire brush. Use WD-40 spray.



12

Install the transverse stabilizer link. Use a crowbar.





13

Screw in the sway bar link fasteners. Use a drive socket #14. Use a ratchet wrench.



#### 14

Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a drive socket #14. Use a torque wrench. Tighten it to 44 Nm torque.



15

Tighten the fastener connecting the stabilizer link to the shock strut. Use a drive socket #14. Use a torque wrench. Tighten it to 44 Nm torque.



16

Treat all joints of the stabiliser link. Use copper grease.



# + AUTODOC CLUB



17

Clean the wheel rim mounting seat. Use a wire brush.



18

Treat the surface where the brake disc contacts the wheel rim. Use ceramic grease.



19

Clean the brake disk surface. Use a brake cleaner.



#### AUTODOC recommends:

 Replacement: anti roll bar links – Toyota RAV4 II. After applying the spray, wait a few minutes.

20

Install the wheel.





#### AUTODOC recommends:

• Important! Hold the wheel while screwing in the fastening bolts. Toyota RAV4 II

21

Screw in the wheel bolts. Use wheel impact socket #19.



22

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 103 Nm torque.



23

Remove the jacks and chocks.





**VIEW MORE TUTORIALS** 



## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

#### **BUY SPARE PARTS FOR TOYOTA**

**ANTI ROLL BAR LINKS: A WIDE SELECTION** 



#### **CHOOSE CAR PARTS FOR TOYOTA RAV4 II**

#### ANTI ROLL BAR LINKS FOR TOYOTA: BUY NOW

#### ANTI ROLL BAR LINKS FOR TOYOTA RAV4 II: THE BEST DEALS & OFFERS

# (i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.