



How to change rear anti  
roll bar links on **Toyota**  
**RAV4 II** – replacement  
guide

## VIDEO TUTORIAL



### Important!

This replacement procedure can be used for:

TOYOTA RAV 4 II (CLA2\_, XA2\_, ZCA2\_, ACA2\_) 1.8 (ZCA25\_, ZCA26\_), TOYOTA RAV 4 II (CLA2\_, XA2\_, ZCA2\_, ACA2\_) 2.0 D 4WD (CLA20\_, CLA21\_), TOYOTA RAV 4 II (CLA2\_, XA2\_, ZCA2\_, ACA2\_) 2.4 4WD, TOYOTA RAV 4 II (CLA2\_, XA2\_, ZCA2\_, ACA2\_) 2.0, TOYOTA RAV 4 II (CLA2\_, XA2\_, ZCA2\_, ACA2\_) 2.4

---

The steps may slightly vary depending on the car design.

REPLACEMENT: ANTI ROLL BAR LINKS – TOYOTA RAV4  
 II. LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Ceramic grease
- Copper grease
- Torque wrench
- Combination spanner #14
- Combination spanner #17
- Drive socket # 17
- HEX bit no.H5
- Wheel impact socket #19
- Ratchet wrench
- Wheel chock

**BUY TOOLS**

**AUTODOC recommends:**

- Replace the stabiliser links on Toyota RAV4 II in pairs.
- The replacement procedure is identical for both stabiliser links on the same axle.
- Please note: all work on the car – Toyota RAV4 II – should be done with the engine switched off.

**CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:**


**1** Open the bonnet. Unscrew the brake fluid reservoir cap.

**2** Secure the wheels with chocks.

**3** Loosen the wheel mounting bolts. Use wheel impact socket #19.



**4** Raise the car.

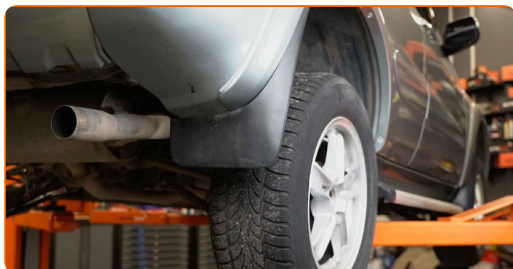

Replacement: anti roll bar links – Toyota RAV4 II. AUTODOC experts recommend:

- If you are using a jack, make sure it rests on a flat surface without any unevenness.
- Be sure to additionally secure the car with jack stands.

5

Unscrew the wheel bolts.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.  
Toyota RAV4 II


6

Remove the wheel.




7

Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.

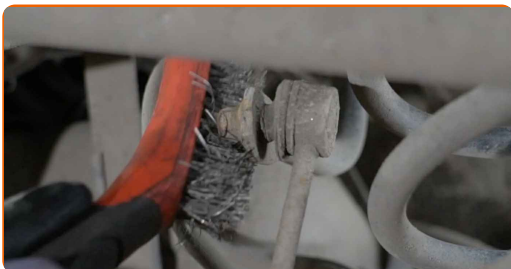


8

Unscrew the fastener connecting the stabilizer link to the control arm. Use a combination spanner #14. Use HEX No.H5. Use a ratchet wrench.

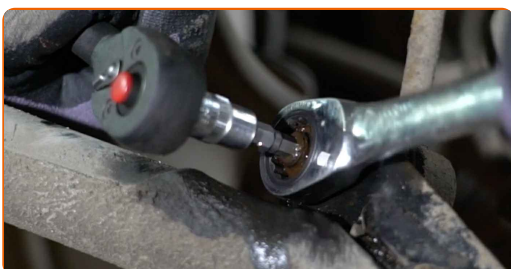


9

Unscrew the fastener connecting the stabilizer link to the stabilizer bar. Use a combination spanner #14. Use HEX No.H5. Use a ratchet wrench.

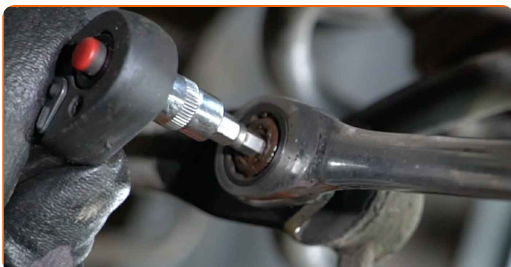

10

Remove the stabilizer rod.

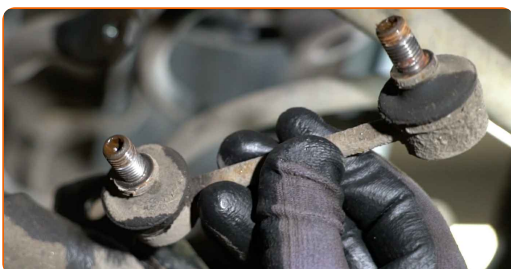


Replacement: anti roll bar links – Toyota RAV4 II. AUTODOC experts recommend:

- Examine stabiliser bushes. Replace them if needed.

11

 Clean the mounting seats of the stabiliser link. Use a wire brush. Use WD-40 spray.




12

Install the transverse stabilizer link.



13

 
Screw in the sway bar link fasteners. Use a combination spanner #17. Use HEX No.H5. Use a ratchet wrench.




- 14** Tighten the fastener connecting the stabilizer link to the stabilizer bar. Use a drive socket #17. Use a torque wrench. Tighten it to 44 Nm torque.




- 15** Tighten the fastener connecting the sway bar link to the suspension arm. Use a drive socket #17. Use a torque wrench. Tighten it to 44 Nm torque.

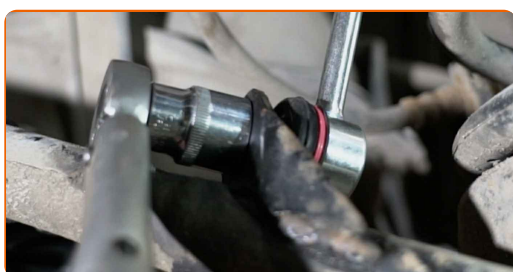

- 16** Treat all joints of the stabiliser link. Use copper grease.

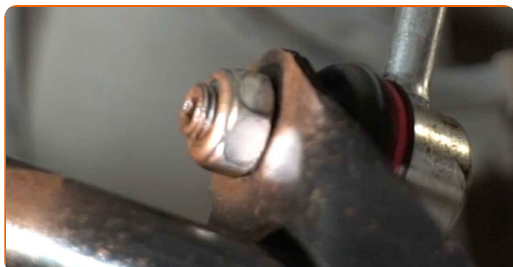

- 17** Clean the wheel rim mounting seat. Use a wire brush.

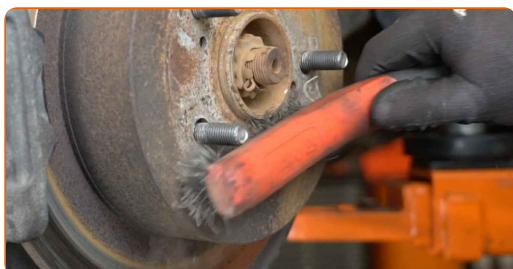



**18** Treat the surface where the brake disc contacts the wheel rim. Use ceramic grease.



**19** Clean the brake disk surface. Use a brake cleaner.



**AUTODOC recommends:**

- Replacement: anti roll bar links – Toyota RAV4 II. After applying the spray, wait a few minutes.

**20** Install the wheel.



**AUTODOC recommends:**

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. Toyota RAV4 II

**21** Screw in the wheel bolts. Use wheel impact socket #19.



**22** Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #19. Use a torque wrench. Tighten it to 103 Nm torque.



**23** Remove the jacks and chocks.



**WELL DONE!** 

**VIEW MORE TUTORIALS**

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON **Google Play**

Download on the **App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BUY SPARE PARTS FOR TOYOTA**

**ANTI ROLL BAR LINKS: A WIDE SELECTION**

**CHOOSE CAR PARTS FOR TOYOTA RAV4 II**

**ANTI ROLL BAR LINKS FOR TOYOTA: BUY NOW**

**ANTI ROLL BAR LINKS FOR TOYOTA RAV4 II: THE BEST  
DEALS & OFFERS**

### **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.