

# How to change air filter on **RENAULT Symbol / Thalia I (LB)** – replacement guide





### SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

## (i) Important!


This replacement procedure can be used for: RENAULT Symbol / Thalia I (LB) 1.2 16V

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: RENAULT Kangoo I (KC) 1.2 16V





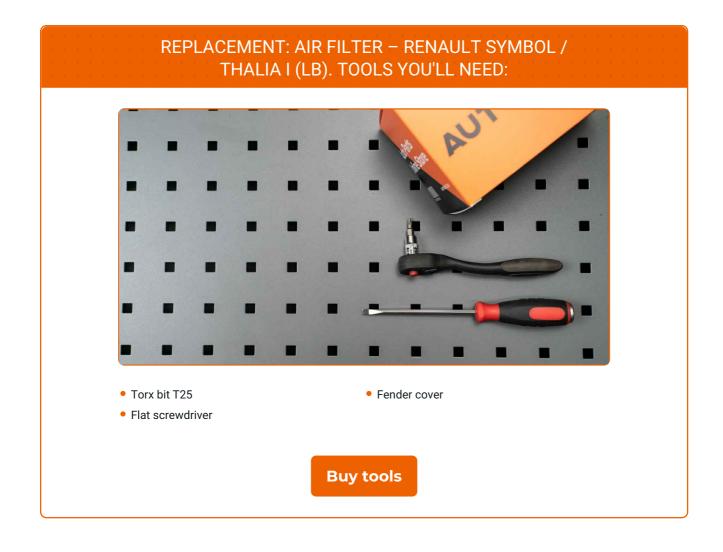





### AUTODOC recommends:

- Replacement: air filter RENAULT Symbol / Thalia I (LB). Follow the maintenance schedule, recommendations, and requirements specified by the manufacturer.
- All work should be done with the engine stopped.

## **REPLACEMENT: AIR FILTER - RENAULT SYMBOL / THALIA I (LB). RECOMMENDED SEQUENCE OF STEPS:**



Open the bonnet.

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



Disconnect the breather hose.





Unscrew the clamp fastening the engine air filter housing to the throttle body. Use a flat screwdriver.







5

Remove the air filter housing.



6

Disconnect the air intake pipe from the air filter housing.



7

Undo the fastening screws of the air filter cover. Use Torx T25.



8

Take off the filter lid.



9

Remove the filter element from the filter housing.







10

Clean the air filter cover and housing.



### Replacement: air filter – RENAULT Symbol / Thalia I (LB). Tip:

• Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

11

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



## Replacement: air filter – RENAULT Symbol / Thalia I (LB). AUTODOC recommends:

- Check out the correct location of the filter element. Do not skew.
- Attention! Use quality filters RENAULT Symbol / Thalia I (LB).
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.





12

Reinstall the air filter cover. Fasten it.



13

Screw in the fastening screws of the air filter cover. Use Torx T25.



14

Reinstall the air filter housing.

15

Connect the air intake pipe to the air filter housing.



16

Tighten the clamp fastening the engine air filter housing to the throttle body. Use a flat screwdriver.









Connect the breather hose.





Remove the fender protection cover.

19

Close the hood.



**VIEW MORE TUTORIALS** 





## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



### A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

#### **AIR FILTER: A WIDE SELECTION**

## (i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.