



How to change air filter
on **RENAULT Trafic II**
Van (FL) – replacement
guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!


This replacement procedure can be used for:

RENAULT Trafic II Van (FL) 2.0, RENAULT Trafic II Van (FL) 2.0 16V

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: RENAULT Megane II Saloon (LM) 1.4

REPLACEMENT: AIR FILTER – RENAULT TRAFIC II VAN (FL). TOOLS YOU MIGHT NEED:

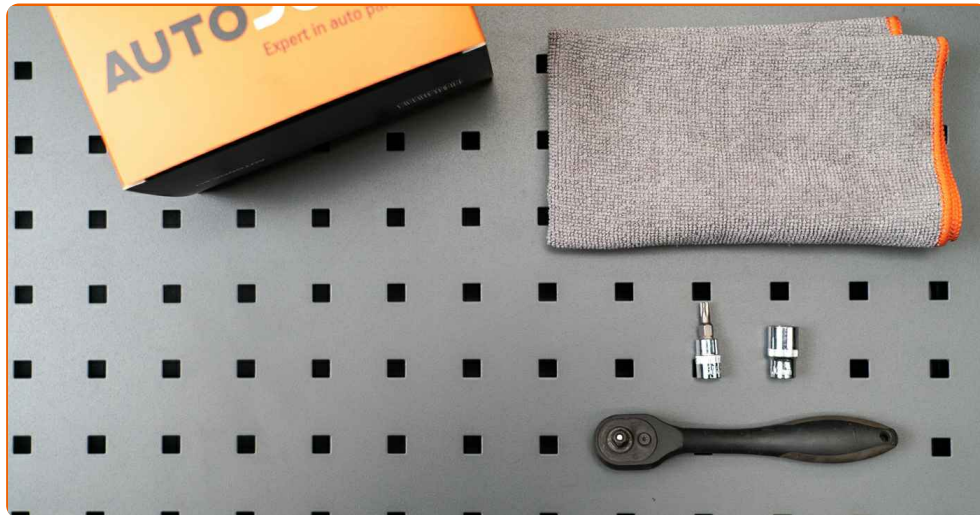

- Drive socket # 10
- Torx bit T25
- Microfibre towel
- Fender cover

[Buy tools](#)

Replacement: air filter – RENAULT Trafic II Van (FL). AUTODOC recommends:


- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Please note: all work on the car – RENAULT Trafic II Van (FL) – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.


3 Unscrew the air filter box fasteners. Use a drive socket #10.

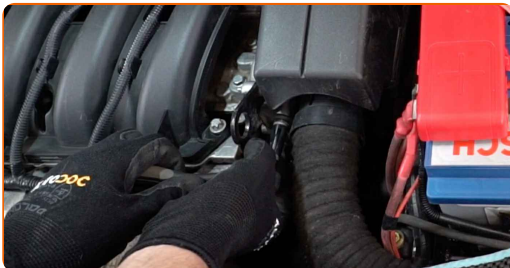

 
4 Disconnect the air intake pipe from the air filter box.



5 Remove the air filter box.

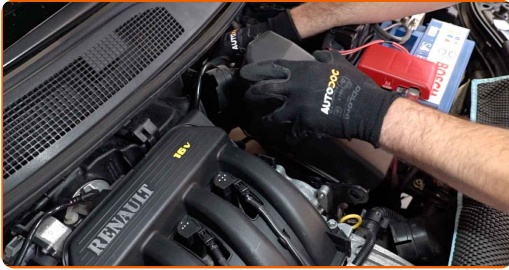

6 Disconnect the crankcase ventilation hose from the intake manifold.

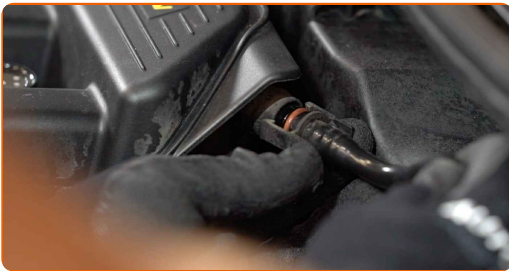

7 Unscrew the filter housing fastening bolts. Use Torx T25.



8 Remove the air filter housing.



9 Remove the filter element from the filter housing.



10

Clean the air filter cover and housing.



Replacement: air filter – RENAULT Trafic II Van (FL). Tip from AUTODOC:

- Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

11

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



AUTODOC recommends:

- Replacement: air filter – RENAULT Trafic II Van (FL). Be sure to position the filtering element correctly. Avoid misalignment.
- Take care to only use quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

12 Reinstall the air filter housing.



13 Screw the filter housing fastening bolts. Use Torx T25.



 
14 Connect the crankcase ventilation hose to the intake manifold.



15 Install the air filter box.




16 Screw in the air filter box fasteners. Use a drive socket #10.



17

Connect the air intake pipe to the air filter box.

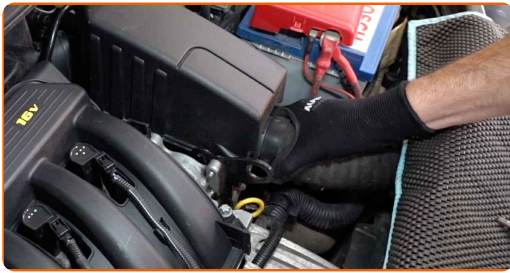

18

Remove the fender protection cover.

19

Close the hood.

WELL DONE! 👍

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



AUTODOC

GET IT ON
 **Google Play**

Download on the
 **App Store**

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

AIR FILTER: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.