+ AUTODOC CLUB

How to change rear coil springs on **Lexus RX XU30** – replacement guide







VIDEO TUTORIAL



i Important!

This replacement procedure can be used for: LEXUS RX II (XU30) 330 (MCU38_)

The steps may slightly vary depending on the car design.


CLUB.AUTODOC.CO.UK 1–21







REPLACEMENT: COIL SPRINGS – LEXUS RX XU30. TOOLS YOU MIGHT NEED:

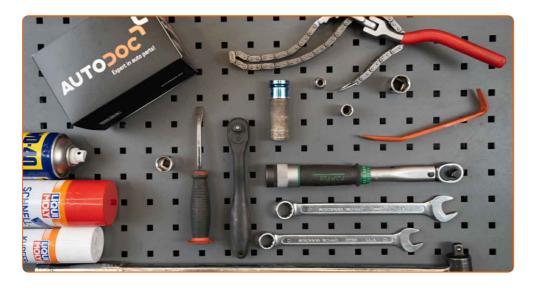

- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #17
- Combination spanner #19
- Drive socket # 10
- Drive socket # 12
- Drive socket # 14
- Drive socket # 17

- Drive socket #19
- Wheel impact socket #21
- Ratchet wrench
- Torque wrench
- Plastic trim tool
- Chain wrench
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Wheel chock

BUY TOOLS

CLUB.AUTODOC.CO.UK 2-21







Replacement: coil springs – Lexus RX XU30. AUTODOC recommends:

- Both coil springs of the rear suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the rear suspension.
- All work should be done with the engine stopped.

REPLACEMENT: COIL SPRINGS – LEXUS RX XU30. TAKE THE FOLLOWING STEPS:

1

Open the boot lid.



2

Move the folding shelf and detach it from the retainers. By doing this, you will get access to the side trim plastic panels.



CLUB.AUTODOC.CO.UK 3-21







Remove the suspension strut mount cap. Use a plastic trim tool.



Loosen the upper fastener of the shock strut mount. Use a drive socket #14. Use a ratchet wrench.



Secure the wheels with chocks.

6



Loosen the wheel mounting bolts. Use wheel impact socket #21.



CLUB.AUTODOC.CO.UK 4-21







Raise the rear of the car and secure on supports.



8 Unscrew the wheel bolts.



AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. Lexus RX XU30
- Remove the wheel.



Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.



CLUB.AUTODOC.CO.UK 5-21







Unscrew the fastener connecting the stabilizer link to the shock strut. Use a drive socket #17. Use a ratchet wrench.



Remove the stabilizer rod.

14



Clean the ABS sensor fastener. Use a wire brush. Use WD-40 spray.



Unscrew the ABS sensor fastener. Use a drive socket #10. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 6-21







Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.



Clean the fastener of the bracket that connects the brake hose to the shock strut. Use a wire brush. Use WD-40 spray.



Unscrew the brake hose fastening bracket from the shock strut. Use a drive socket #12. Use a ratchet wrench.



Loosen the fastener that connects the suspension strut to the rear knuckle. Use a combination spanner #19. Use a drive socket #19. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 7-21







Support the stub axle. Use a hydraulic transmission jack.



- Unscrew the fastener that connects the suspension strut to the rear knuckle. Use a combination spanner #19. Use a drive socket #19. Use a ratchet wrench.
- Remove the fastening bolts.



Clean the ABS sensor fastener. Use WD-40 spray.



Unscrew the ABS sensor fastener. Use a drive socket #10. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 8-21







Unscrew the top fastening of the shock strut mount. Use a drive socket #14. Use a ratchet wrench.



Remove the suspension strut.



Set the shock absorber strut on the spring compressor tool.



Replacement: coil springs – Lexus RX XU30. Professionals recommend:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

CLUB.AUTODOC.CO.UK 9-21







Compress the spring.



Remove the strut piston rod nut. Use a chain wrench. Use a drive socket #19. Use a ratchet wrench.



Release the coil spring.



Remove the top strut mount.



Remove the shock absorber dust cap and the bump stop.



CLUB.AUTODOC.CO.UK 10-21








AUTODOC recommends:

• Replacement: coil springs – Lexus RX XU30. Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.

Remove the spring.

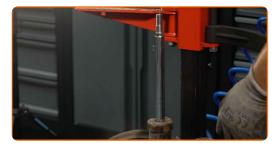

Install the spring on the shock absorber.



- Install the boot and a bump stop onto the shock absorber.
- Compress the spring.



CLUB.AUTODOC.CO.UK 11-21







Install the upper strut mount and the strut mount bearing.



Tighten the shock strut piston rod nut. Use a chain wrench. Use a drive socket #19. Use a torque wrench. Tighten it to 60 Nm torque.



Replacement: coil springs – Lexus RX XU30. Tip from AUTODOC:

• Check to make sure the spring is positioned correctly. Avoid its misalignment.

Treat the shock strut rod. Use copper grease.

38



CLUB.AUTODOC.CO.UK 12-21







Decompress the spring.



Remove the assembled shock strut.



Clean the mounting seats of the shock strut. Use a wire brush. Use WD-40 spray.



Install the shock strut into the wheel arch.

43



Screw the top fastening of the shock strut mount. Use a drive socket #14. Do not tighten it.



CLUB.AUTODOC.CO.UK 13-21







AUTODOC recommends:

 Lexus RX XU30 – To avoid injury, hold the suspension strut while screwing in the fastening bolts.

Install the fastening bolts.



Tighten the fastener that connects the suspension strut to the rear knuckle. Use a drive socket #19. Use a torque wrench. Tighten it to 180 Nm torque.



Screw in the ABS sensor fastener. Use a drive socket #10. Use a ratchet wrench.



Install the transverse stabilizer link.



CLUB.AUTODOC.CO.UK 14-21







Tighten the stabiliser link fastener. Use a combination spanner #17. Use a drive socket #17. Use a ratchet wrench.



Remove the support from under the stub axle.



Replacement: coil springs – Lexus RX XU30. AUTODOC experts recommend:

- Lower the hydraulic transmission jack smoothly, without jerks, to avoid damaging assemblies and mechanisms.
- Tighten the fastener connecting the stabilizer link to the shock strut. Use a drive socket #17. Use a torque wrench. Tighten it to 39 Nm torque.



CLUB.AUTODOC.CO.UK 15-21







Tighten the brake hose fastening bracket to the shock strut. Use a drive socket #12. Use a ratchet wrench.



Treat the shock strut fasteners. Use copper grease.



Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

 Replacement: coil springs – Lexus RX XU30. After applying the spray, wait a few minutes.

CLUB.AUTODOC.CO.UK 16-21







55 Install the wheel.



Replacement: coil springs – Lexus RX XU30. Tip:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.
- Screw in the wheel bolts. Use wheel impact socket #21.



Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #21. Use a torque wrench. Tighten it to 103 nm torque.



CLUB.AUTODOC.CO.UK 17-21







Tighten the upper fastener of the shock absorber strut mount. Use a drive socket #14. Use a torque wrench. Tighten it to 55 Nm torque.



Install the suspesion strut mount cap.



Install the folding shelf to its mounting seat.



Close the lid of the luggage compartment.



CLUB.AUTODOC.CO.UK 18-21







62

Remove the jacks and chocks.






VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 19-21



AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

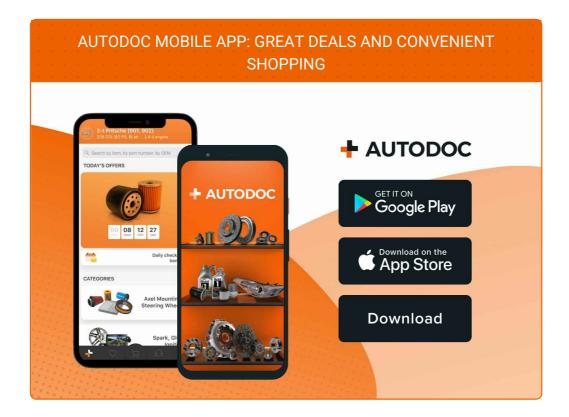

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR LEXUS

COIL SPRINGS: A WIDE SELECTION

CLUB.AUTODOC.CO.UK 20-21





CHOOSE CAR PARTS FOR LEXUS RX XU30

COIL SPRINGS FOR LEXUS: BUY NOW

COIL SPRINGS FOR LEXUS RX XU30: THE BEST DEALS & OFFERS

① DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.

CLUB.AUTODOC.CO.UK 21-21