



How to change rear
brake caliper on **SEAT**
Altea XL (5P5, 5P8) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for:

SEAT Altea XL (5P5, 5P8) 1.6, SEAT Altea XL (5P5, 5P8) 2.0 FSI, SEAT Altea XL (5P5, 5P8) 1.9 TDI, SEAT Altea XL (5P5, 5P8) 2.0 TDI 16V, SEAT Altea XL (5P5, 5P8) 2.0 TDI, SEAT Altea XL (5P5, 5P8) 1.8 TFSI, SEAT Altea XL (5P5, 5P8) 1.4 TSI, SEAT Altea XL (5P5, 5P8) 2.0 TFSI 4x4, SEAT Altea XL (5P5, 5P8) 2.0 TDI 4x4, SEAT Altea XL (5P5, 5P8) 1.4 16V, SEAT Altea XL (5P5, 5P8) 1.6 Multifuel, SEAT Altea XL (5P5, 5P8) 1.6 TDI, SEAT Altea XL (5P5, 5P8) 1.2 TSI, SEAT Altea XL (5P5, 5P8) 1.6 LPG, SEAT Altea XL (5P5, 5P8) 2.0 TFSI, (+ 2)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: AUDI A3 Sportback (8PA) 1.2 TSI

REPLACEMENT: BRAKE CALIPER – SEAT ALTEA XL
(5P5, 5P8). TOOLS YOU NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #11
- Combination spanner #13
- Combination spanner #15
- Drive socket # 11
- Drive socket # 13
- Wheel impact socket #17
- Torque wrench
- Crow bar
- Rubber mallet
- Fluid container
- Brake hose clip
- Water pump pliers
- Brake bleeder kit
- Wheel chock

Buy tools

Replacement: brake caliper – SEAT Altea XL (5P5, 5P8). AUTODOC experts recommend:

- The replacement procedure is identical for the left and right brake calipers on the same axle.
- All work should be done with the engine stopped.

REPLACEMENT: BRAKE CALIPER – SEAT ALTEA XL (5P5, 5P8). TAKE THE FOLLOWING STEPS:

 
1 Open the bonnet. Unscrew the brake fluid reservoir cap.



2 Secure the wheels with chocks.



3 Loosen the wheel mounting bolts. Use wheel impact socket #17.



4 Raise the rear of the car and secure on supports.

5 Unscrew the wheel bolts.



 
Replacement: brake caliper – SEAT Altea XL (5P5, 5P8). AUTODOC recommends:

- To avoid injury, hold up the wheel when unscrewing the bolts.

6 Remove the wheel.



7 Clean the parking brake bracket. Use a wire brush. Use WD-40 spray.




8 Press the parking brake actuator lever on the brake caliper.




9 Release the parking brake cable. Use water pump pliers.



 10 Clean the area where the brake hose is connected to the brake caliper and to the brake circuit pipe. Use a wire brush. Use WD-40 spray.



 
11 Clamp the brake hose off using a brake hose clamp.




12 Put a container for gathering brake fluid beneath.



 
13 Unscrew the brake pipe from the brake hose. Use a combination spanner #11.



14 Loosen the fastener connecting the brake pipe to the brake caliper. Use a combination spanner #11.

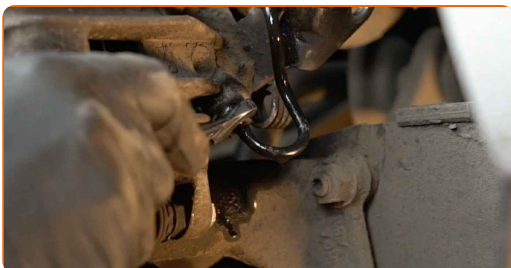

 15 Remove the brake hose retaining clip. Use a crowbar.



16

Detach the brake pipe from the brake hose.



 
17

Unscrew the brake caliper fastening. Use a combination spanner #13. Use a combination spanner #15.



18

Remove the brake caliper.



Replacement: brake caliper – SEAT Altea XL (5P5, 5P8). Professionals recommend:

- When replacing the brake caliper, it is recommended to check the brake hose for damages and, if necessary, to replace it with a new one.
- When replacing a brake caliper it is recommended to replace brake pads, check the state of the brake discs and replace them with new ones if necessary.
- If no new guide pins were supplied in a kit with the new brake calipers, use the old pins.

19

Unscrew the fastener connecting the brake pipe to the brake caliper. Use a combination spanner #11.

 


20

Detach the brake pipe from the brake caliper.

21

Treat the brake pipe. Use a brake cleaner.




AUTODOC recommends:

- Replacement: brake caliper – SEAT Altea XL (5P5, 5P8). After applying the spray, wait a few minutes.

22

Reattach the brake pipe to the brake caliper.

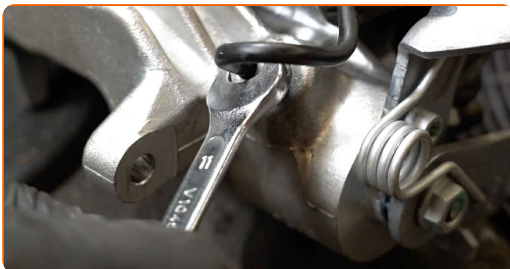

23

Screw in the fastener connecting the brake pipe to the brake caliper. Use a combination spanner #11.



24

Install the brake caliper and fix it. Use a combination spanner #13. Use a combination spanner #15.



25

Treat the brake hose. Treat the brake pipe. Use a brake cleaner.



 
Replacement: brake caliper – SEAT Altea XL (5P5, 5P8). Tip from AUTODOC experts:

- After applying the spray, wait a few minutes.


26 Reattach the brake pipe to the brake hose.




27 Screw in the fastener connecting the brake pipe to the brake hose. Use a combination spanner #11.



 
28 Install the brake hose retaining clip. Use a rubber mallet.




29 Remove the brake hose clamp.

 

 30 Connect the brake bleeder kit to the brake bleeder screw.



 31 Undo the brake bleeder screw. Use a combination spanner #11.



32 Bleed the brake caliper system. Without starting the engine, press the brake pedal several times until you feel significant resistance.




33 Tighten the brake bleeder screw. Use a combination spanner #11.



34 Disconnect the brake bleeder kit.



35 Clean dirt from the brake hose bolt. Use a brake cleaner.

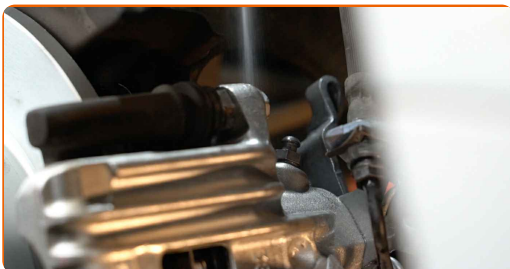


AUTODOC recommends:

- Replacement: brake caliper – SEAT Altea XL (5P5, 5P8). After applying the spray, wait a few minutes.

36 Tighten the brake caliper bleed screw. Use a drive socket #11. Use a torque wrench. Tighten it to 9 Nm torque.

 
37 Install the parking brake cable into the brake caliper bracket. Use water pump pliers.



38 Tighten the brake caliper fasteners. Use a drive socket #13. Use a torque wrench. Tighten it to 35 Nm torque.



 39 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



40

Clean the brake disk surface. Use a brake cleaner.



Replacement: brake caliper – SEAT Altea XL (5P5, 5P8). Tip from AUTODOC experts:

- After applying the spray, wait a few minutes.

41

Install the wheel.



Replacement: brake caliper – SEAT Altea XL (5P5, 5P8). Tip from AUTODOC:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

 
42

Screw in the wheel bolts. Use wheel impact socket #17.




43

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



44

Remove the jacks and chocks.

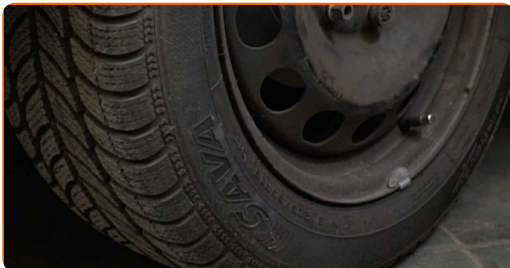

AUTODOC recommends:

- Important! Replacement: brake caliper – SEAT Altea XL (5P5, 5P8). Check the brake fluid level in the reservoir and top up if necessary.

45

Tighten the brake fluid reservoir cap. Close the hood.



WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BRAKE CALIPER: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.