



How to change rear
brake discs on **SEAT**
Altea XL (5P5, 5P8) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

SEAT Altea XL (5P5, 5P8) 1.6, SEAT Altea XL (5P5, 5P8) 2.0 FSI, SEAT Altea XL (5P5, 5P8) 1.9 TDI, SEAT Altea XL (5P5, 5P8) 2.0 TDI, SEAT Altea XL (5P5, 5P8) 1.8 TFSI, SEAT Altea XL (5P5, 5P8) 1.4 TSI, SEAT Altea XL (5P5, 5P8) 2.0 TFSI 4x4, SEAT Altea XL (5P5, 5P8) 2.0 TDI 4x4, SEAT Altea XL (5P5, 5P8) 1.4 16V, SEAT Altea XL (5P5, 5P8) 1.6 Multifuel, SEAT Altea XL (5P5, 5P8) 1.6 TDI, SEAT Altea XL (5P5, 5P8) 1.2 TSI, SEAT Altea XL (5P5, 5P8) 1.6 LPG, SEAT Altea XL (5P5, 5P8) 2.0 TFSI, SEAT Altea XL (5P5, 5P8) 1.9 TDI 4x4

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW Passat Saloon (362) 2.0 TDI

REPLACEMENT: BRAKE DISCS – SEAT ALTEA XL (5P5, 5P8). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- Nylon cleaning brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Torque wrench
- Combination spanner #13
- Combination spanner #15
- Drive socket # 13
- XZN socket bit # 14
- Torx bit T27
- Torx bit T30
- Wheel impact socket #17
- Ratchet wrench
- Tap wrench
- Rubber mallet
- Impact screwdriver
- Brake caliper wind back tool
- Crow bar
- Wheel chock

 
Buy tools

AUTODOC recommends:

- Replace the brake disks on the car SEAT Altea XL (5P5, 5P8) in complete set for each axis. Regardless of the state of components. This will ensure even braking.
- The replacement procedure is identical for both brake disks on the same axle.
- When changing the brake discs, always replace the brake pads.
- Please note: all work on the car – SEAT Altea XL (5P5, 5P8) – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Connect the scan and service tool.



2 Put the parking brake system into service mode.

3 Open the hood.


4 Clean the brake fluid reservoir cap. Use a brake cleaner.

AUTODOC recommends:

- Replacement: brake discs – SEAT Altea XL (5P5, 5P8). After applying the spray, wait a few minutes.


5

Unscrew the engine solenoid valve bracket. Use Torx T27. Use a ratchet wrench.

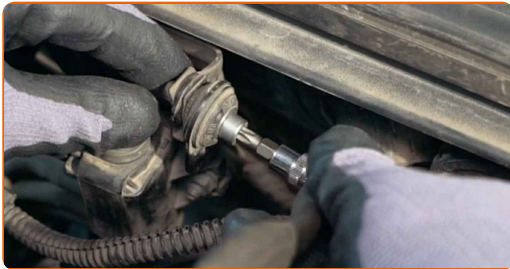

6

 Unscrew the brake fluid reservoir cap.



7

Secure the wheels with chocks.

8

 
Loosen the wheel mounting bolts. Use wheel impact socket #17.



9

Raise the rear of the car and secure on supports.

10 Unscrew the wheel bolts.




AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
SEAT Altea XL (5P5, 5P8)


11 Remove the wheel.



 12 Spread the brake pads. Use a crowbar.



 13 Clean the brake caliper fasteners. Use a wire brush. Use WD-40 spray.




14

Unscrew the brake caliper fastening. Use a combination spanner #13. Use a combination spanner #15. Use a drive socket #13. Use a ratchet wrench.



15

 Remove the brake caliper.



Replacement: brake discs – SEAT Altea XL (5P5, 5P8). Tip:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

16 Remove the brake pads.



17 Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.



 
18 Unscrew the caliper bracket fastening. Use XZN #14. Use a tap wrench.



19 Remove the caliper bracket.



20 Clean the brake disc fastener. Use a wire brush. Use WD-40 spray.



21 Unscrew the brake disc fastening. Use Torx T30. Use an impact screwdriver.



22 Remove the brake disc. Use a rubber mallet.



23 Clean the hub. Use a wire brush.



24 Treat the contacting surface. Use copper grease.




25 Install the brake disc.



26 Tighten the brake disc fastening. Use Torx T30. Use a torque wrench. Tighten it to 4 Nm torque.



27 Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.

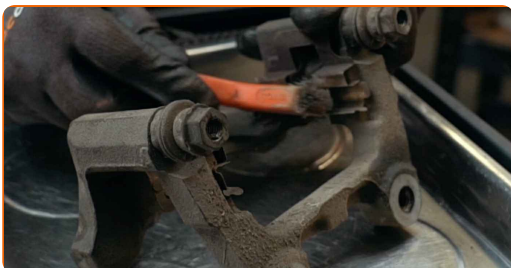

AUTODOC recommends:

 
- Replacement: brake discs – SEAT Altea XL (5P5, 5P8). After applying the spray, wait a few minutes.

28 Install the brake caliper bracket.



29

Tighten the brake caliper bracket. Use XZN #14. Use a torque wrench. Tighten it to 90 Nm torque. +90°




AUTODOC recommends:

- Important! Be sure to use new fasteners.


30

 Install the brake pads.



31

 
Treat the brake caliper piston. Use a nylon cleaning brush. Use a brake cleaner.




Replacement: brake discs – SEAT Altea XL (5P5, 5P8). AUTODOC experts recommend:

- After applying the spray, wait a few minutes.

 32 Press in the brake caliper piston. Use brake caliper wind back tool.



 33 Install the brake caliper and fix it. Use a combination spanner #15. Use a drive socket #13. Use a torque wrench. Tighten it to 35 Nm torque.



34 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



35 Clean the brake disc surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: brake discs – SEAT Altea XL (5P5, 5P8). After applying the spray, wait a few minutes.

 
36 Install the wheel.




AUTODOC recommends:

- Important! Hold the wheel while screwing in the fastening bolts. SEAT Altea XL (5P5, 5P8)

37 Screw in the wheel bolts. Use wheel impact socket #17.



 38 Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.




39 Remove the jacks and chocks.



40

 Deactivate the service mode of the parking brake system. Disconnect the scan and service tool.




Replacement: brake discs – SEAT Altea XL (5P5, 5P8). AUTODOC recommends:

- Check the brake fluid level in the expansion tank and refill if necessary.

41

Tighten the brake fluid reservoir cap.

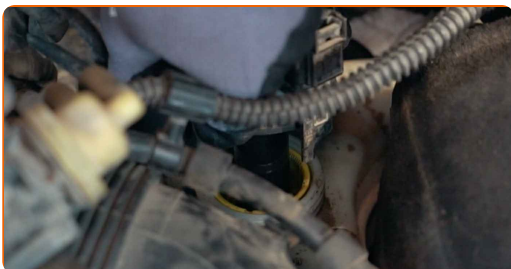

42

Install the engine solenoid valve bracket. Use Torx T27. Use a ratchet wrench.



43

Close the hood.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BRAKE DISCS: A WIDE SELECTION

(i) DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.