




How to change water pump & timing belt kit on **SEAT Altea XL (5P5, 5P8)** – replacement guide

SIMILAR VIDEO TUTORIAL

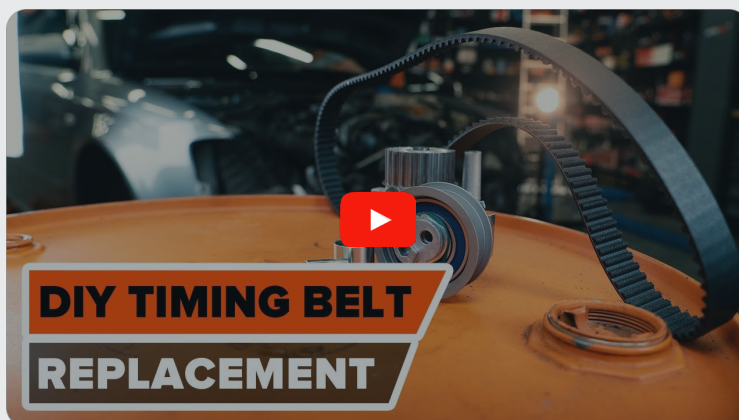

This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

SEAT Altea XL (5P5, 5P8) 2.0 TFSI 4x4, SEAT Altea XL (5P5, 5P8) 2.0 TFSI

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: AUDI A4 Saloon (8EC, B7) 2.0 TFSI

REPLACEMENT: WATER PUMP & TIMING BELT KIT – SEAT ALTEA XL (5P5, 5P8). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- All-purpose cleaning spray
- Sealant
- Torque wrench
- Combination spanner #13
- Combination spanner #17
- Combination spanner #19
- Combination spanner #22
- Torx bit T20
- Torx bit T25
- Torx bit T27
- 12-point socket # 19
- Drive socket # 7
- Drive socket # 10
- Drive socket # 12
- Drive socket # 13
- HEX bit No.H6
- HEX bit No.H8
- Wheel impact socket #17
- Ratchet wrench
- Tap wrench
- Clip removal tool
- Flat Screwdriver
- Phillips screwdriver
- Crow bar
- Water pump pliers
- Clic-R collar pliers
- Round-nose pliers
- Seal scraper
- Funnel
- Fluid container
- Hydraulic transmission jack
- Jack
- Painter's tape
- Microfibre towel
- Fender cover

Buy tools

Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8). Tip from AUTODOC experts:

 
- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Warning! Shut down the engine before starting any work – SEAT Altea XL (5P5, 5P8).

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:


1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Unscrew the fasteners of the car battery terminals. Use a drive socket #10. Use a ratchet wrench.




4 Remove the battery terminals.

 

5 Unscrew the coolant reservoir cap.



 6 Loosen the bumper upper fasteners. Use Torx T27. Use a drive socket #10. Use a ratchet wrench.



7 Lift the car using a jack or place it over an inspection pit.

8 Unscrew the wheel bolts. Use wheel impact socket #17.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
SEAT Altea XL (5P5, 5P8)

9 Remove the wheel.



 
10 Unscrew and remove the wheel arch cover fasteners. Use Torx T25. Use a ratchet wrench.



11 Remove the wheel arch cover.




12 Unscrew the fastener of the spacer under the bumper reinforcement bar. Use Torx T25. Use a drive socket #10. Use a ratchet wrench.



13 Unscrew the fastener connecting the bumper to the fenders. Use a drive socket #10. Use a ratchet wrench.




 14 Release the side clips of the bumper. Carefully release the bumper from the fasteners.




15 Lower the car.

16 Unscrew the upper fasteners of the bumper and remove it. Use Torx T27. Use a drive socket #10. Use a ratchet wrench.

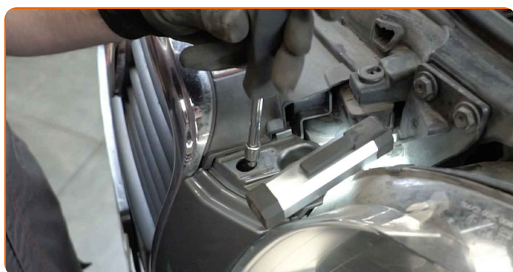

 17 Detach the connectors of the fog lights.




18 Detach the headlamp washer hose.



19 Unscrew the headlight fasteners. Use Torx T27. Use a ratchet wrench.



20 Remove the headlight.

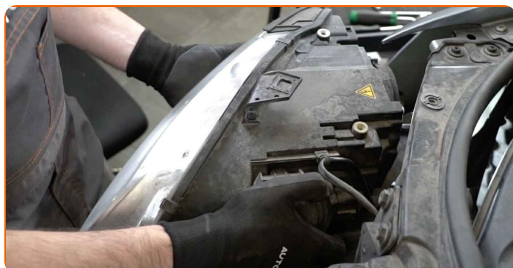

Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8). Tip from AUTODOC:

- Do not apply excessive force when removing the part. Otherwise you may damage it.

21

Unplug the connectors of the headlight bulbs. Use a clip removal tool.



22

Unscrew the headlight fasteners. Use Torx T27. Use a ratchet wrench.



23

 
Remove the headlight.




Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8).
AUTODOC recommends:

- Do not apply excessive force when removing the part. Otherwise you may damage it.

24 Unplug the connectors of the headlight bulbs. Use a clip removal tool.




25 Unplug the horn connector.

 

26 Detach the air duct.



 27 Unplug the horn connector.



28 Remove the air duct.



Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8). Tip:

- Do not apply excessive force when removing the part. Otherwise you may damage it.

29

Unplug the connector of the coolant temperature sensor.



30

Detach the wiring of the coolant temperature sensor. Use a flat screwdriver.



 
31

Unscrew the fasteners of the bumper reinforcement bar. Use a drive socket #13. Use a ratchet wrench.



32

Remove the bumper reinforcement bar.




33 Unscrew the fasteners of the radiator air guides. Use Torx T20. Use a ratchet wrench.



34 Remove the radiator air guides.




 35 Unscrew the fasteners of the hydraulic power steering hoses. Use Torx T20. Use Torx T27. Use a ratchet wrench.




36 Detach the hydraulic power steering hoses.

 37 Prepare a container for fluids.



38 Open the coolant drain tap. Use water pump pliers.

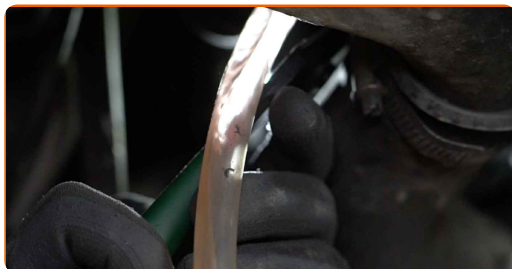

39 Drain the coolant from the engine.



Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8).
Professionals recommend:

- Caution! The coolant can be very hot.
- Wear gloves to prevent contact with hot liquid.
- All work should be done with the engine stopped.

 
40 Close the coolant drain tap.

41 Detach the clip of the lower coolant hose. Use a clip removal tool.


42 Detach the lower coolant pipe. Use a crowbar.




43 Detach the air intake hose clamp. Use a drive socket #7. Use a ratchet wrench.




44 Remove the air intake pipe.

 

 45 Cover the intercooler air guide with a microfibre cloth to prevent dirt and foreign objects from getting into the system.



 46 Detach the air intake hose clamp. Use a drive socket #7. Use a ratchet wrench.




47 Clean the air hose fastener. Use all-purpose cleaning spray.



48 Detach the air intake hose clamp. Use a drive socket #7. Use a ratchet wrench.



 49 Remove the air intake pipe.



50 Cover the intercooler air guide with a microfibre cloth to prevent dirt and foreign objects from getting into the system.



51 Prepare a container for fluids.



 
52 Loosen the fastener of the hose of the automatic transmission fluid cooling line. Use a combination spanner #19. Use a combination spanner #22.




53 Detach the hose of the automatic transmission fluid cooling line.




54 Clean the hose of the automatic transmission fluid cooling line. Use a wire brush. Use all-purpose cleaning spray.



 55 Detach the clamps of the pipes of the automatic transmission fluid cooling line. Use a flat screwdriver.



 56 Remove the pipes of the automatic transmission fluid cooling line.



57 Close the pipes of the automatic transmission fluid cooling line with caps.



58 Clean the pipes of the automatic transmission fluid cooling line. Use all-purpose cleaning spray.



59 Unscrew the fasteners of the air intake duct. Use a Phillips screwdriver.



60 Remove the air intake duct.



61 Unplug the connector of the engine cooling fans.



62 Remove the wiring harness holder.



63 Unplug the connector of the engine cooling fans.



64 Detach the clip of the upper coolant hose. Use round-nose pliers.



65 Detach the upper coolant hose.



 
66 Remove the bonnet weather strip.




67 Unscrew the fasteners of the air conditioning radiator. Use Torx T27. Use a ratchet wrench.




68 Remove the air conditioning radiator.



 
69 Unscrew the fasteners of the engine cooling radiator support panel. Use Torx T27. Use a ratchet wrench.



70 Remove the bonnet latch cable.

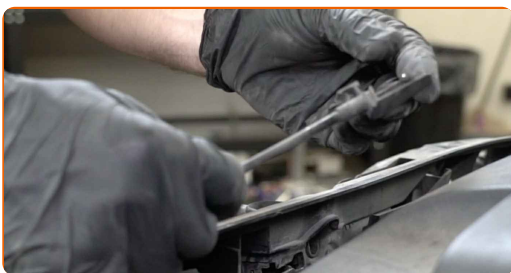

 71 Support the engine in the oil pan area. Use a jack.



72 Remove the support panel together with the engine cooling radiator.



AUTODOC recommends:

- Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8). Do not use excessive force when removing the part as this may damage it.

73

Remove the support from under the engine.



74

Remove the engine cover.



Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8).
AUTODOC recommends:

- Raise the engine cover, holding it on two sides simultaneously.
- Do not apply excessive force when removing the part. Otherwise you may damage it.

75

Unscrew the fasteners of the front upper timing belt cover. Use a flat screwdriver.



76 Remove the front upper timing belt cover.



77 Pull aside the V-ribbed belt tensioner pulley. Use a combination spanner #17.



78 Remove the V-ribbed belt.



 
79 Return the tensioner pulley to its initial position. Use a combination spanner #17.




80 Unscrew the fastener of the serpentine belt tensioner pulley. Use a drive socket #13. Use a ratchet wrench.




81 Remove the serpentine belt tensioner pulley.



 82 Unscrew the fastener of the coolant hose clamp. Use HEX No.H6. Use a ratchet wrench.



 
83 Loosen the coolant hose clamp. Use clic-R collar pliers.




84 Detach the coolant hose.



 
85 Unscrew the fasteners of the timing belt cover. Use a drive socket #10. Use Torx T27. Use a ratchet wrench.



86 Remove the timing belt cover.

 

 87 Clean the crankshaft pulley fasteners. Use a wire brush. Use WD-40 spray.



88

Unscrew the crankshaft pulley fastener. Use HEX No.H6. Use a ratchet wrench.



89

Turn the crankshaft gear. Use 12-point socket No.19. Use a tap wrench.



90

Lock the crankshaft. Use a crowbar.



 
91

Remove the crankshaft pulley.



92

Unscrew the fasteners of the lower timing cover. Use a drive socket #10. Use a ratchet wrench.



93

Remove the lower timing cover.

 
94

Make a mark on the crankshaft gear.




95

Make a mark on the camshaft gear.



96

 Make a mark on the timing belt.




97

Loosen the fastener of the timing belt tensioner pulley. Use a combination spanner #13. Use HEX No.H8.



98

 Unscrew the fastener of the timing belt idler pulley. Use a drive socket #13. Use a ratchet wrench.




99

Remove the timing belt idler pulley from its mounting seat.



100

 Unscrew the fastener of the timing belt idler pulley. Use a drive socket #12. Use a ratchet wrench.



101 Remove the timing belt idler pulley from its mounting seat.



102 Remove the timing belt tensioner pulley.



103 Remove the timing belt.



104 Clean the water pump fasteners. Use a wire brush. Use all-purpose cleaning spray.



105 Unscrew the water pump fasteners. Use a drive socket #10. Use a ratchet wrench.



 
106 Remove the water pump.



Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8).
AUTODOC experts recommend:

- Caution! Coolant may come out from the water pump channels and body.

107 Clean the water pump mounting seat. Use a seal scraper. Use all-purpose cleaning spray.



108 Clean the water pump. Use all-purpose cleaning spray.



109 Treat the water pump mounting seat. Use a sealant.

 
110 Install the new water pump.




111 Screw in the water pump fasteners. Use a drive socket #10. Use a ratchet wrench.



112 Tighten the water pump fasteners. Use a drive socket #10. Use a torque wrench. Tighten it to 15 Nm torque.



 113 Install the new timing belt according to the factory marks.



Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8). Tip:

- Be careful not to damage the timing belt.

 
114 Install the timing belt tensioner pulley.




115 Treat the fastening bolt. Use a sealant.




116 Screw in the fastener of the timing belt tensioner pulley. Use a drive socket #13. Use a ratchet wrench.



 117 Treat the fastening bolt. Use a sealant.




 118 Install the timing belt idler pulley.



119

Screw in the fastener of the timing belt idler pulley. Use a drive socket #12. Use a ratchet wrench.

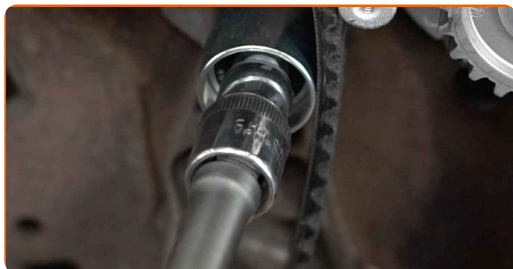


120

Treat the fastening bolt. Use a sealant.




121

 Install the timing belt idler pulley.



122

 Screw in the fastener of the timing belt idler pulley. Use a drive socket #13. Use a ratchet wrench.



123

Tighten the fastener of the timing belt idler pulley. Use a drive socket #13. Use a torque wrench. Tighten it to 25 Nm torque.




124

Tighten the fastener of the timing belt idler pulley. Use a drive socket #12. Use a torque wrench. Tighten it to 25 Nm torque.



125

Adjust the timing belt tension by moving the tensioner pulley. Use a combination spanner #13. Use HEX No.H6.

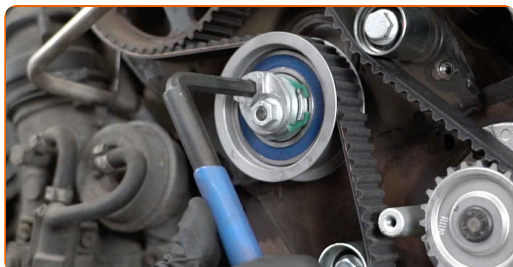

Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8). Tip from AUTODOC:

- Make sure that the timing belt is properly tensioned.

126

Remove the crankshaft locking tool.



127

Turn the crankshaft gear. Use 12-point socket No.19. Use a ratchet wrench.



Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8).
AUTODOC recommends:

- Make sure all the timing belt components are mounted correctly.

128

Tighten the fastener of the timing belt tensioner pulley. Use a drive socket #13. Use a torque wrench. Tighten it to 27 Nm torque.



 
129

Install the lower timing cover.




130

Tighten the fasteners of the lower timing cover. Use a drive socket #10. Use a torque wrench. Tighten it to 10 Nm torque.




131

 Install the timing belt cover.



132

 Tighten the timing belt cover fasteners. Use a drive socket #10. Use Torx T27. Use a torque wrench. Tighten it to 10 Nm torque.




133 Attach the coolant hose.



134 Secure the coolant hose clamp. Use clic-R collar pliers.




135 Screw in the fastener of the coolant hose clamp. Use HEX No.H6. Use a ratchet wrench.

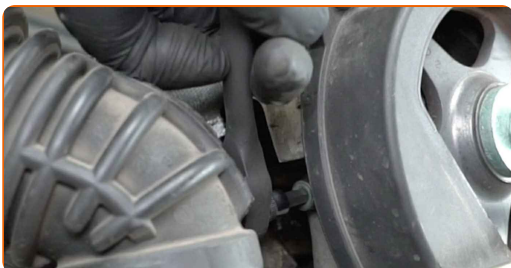

136 Treat the fastening bolts. Use a sealant.




137 Install the crankshaft pulley according to the factory marks.

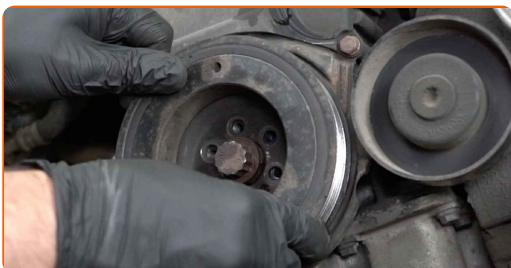

138

Tighten the crankshaft pulley fastener. Use HEX No.H6. Use a torque wrench. Tighten it to 10 Nm torque.+90°

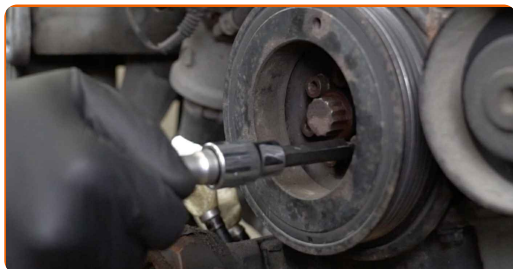

AUTODOC recommends:

- Important! Be sure to use new fasteners.

 
139

Treat the fastening bolts. Use a sealant.




140

Install the serpentine belt tensioner pulley.



141

 Tighten the fastener of the serpentine belt tensioner pulley. Use a drive socket #13. Use a torque wrench. Tighten it to 23 Nm torque.



142

Pull aside the V-ribbed belt tensioner pulley. Use a combination spanner #17.



143

Install the V-ribbed belt.



Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8). Tip:

 
- Make sure that the V-ribbed belt fits all pulleys snugly.

144


Return the tensioner pulley to its initial position. Use a combination spanner #17.



145 Support the engine in the oil pan area. Use a jack.



 
146 Install the support panel together with the engine cooling radiator.




AUTODOC recommends:

- Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8). Do not use excessive force during installation. This may damage the fasteners.

 147 Screw in the fasteners of the engine cooling radiator support panel. Use Torx T27. Use a ratchet wrench.




148 Install the air conditioning radiator.

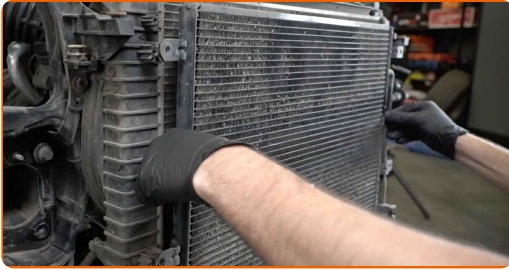

149 Tighten the fasteners of the air conditioning radiator. Use Torx T27. Use a torque wrench. Tighten it to 13 Nm torque.



150 Remove the support from under the engine.

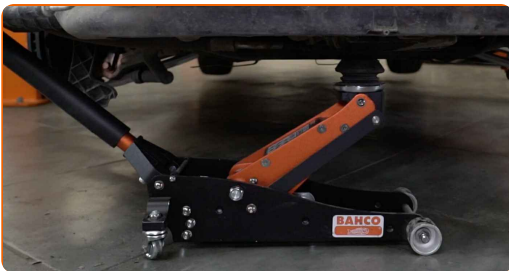

151 Attach the lower coolant pipe.




152 Attach the clip of the lower coolant hose.

153 Install the pipes of the automatic transmission fluid cooling line.

154 Attach the clamps of the pipes of the automatic transmission fluid cooling line.


155

 Prepare a container for fluids.



156

 Remove the caps from the pipes of the automatic transmission fluid cooling line.




157

Attach the hydraulic power steering hoses.




158

 Screw in the fasteners of the hydraulic power steering hoses. Use Torx T20. Use Torx T27. Use a ratchet wrench.



159

 Remove the microfibre cloth from the intercooler air guide.



160 Install the air intake pipe and secure it.



161 Fasten the clamp on the air intake hose. Use a drive socket #7. Use a ratchet wrench.



162 Clean the pipes of the automatic transmission fluid cooling line. Use all-purpose cleaning spray.




163 Attach the hose of the automatic transmission fluid cooling line.




164

 Tighten the fastener of the hose of the automatic transmission fluid cooling line. Use a combination spanner #19. Use a combination spanner #22. Use a torque wrench. Observe the recommended tightening torque.




165

 Remove the microfibre cloth from the intercooler air guide.




166

 Install the air intake pipe and secure it.



167

 Fasten the clamp on the air intake hose. Use a drive socket #7. Use a ratchet wrench.



168 Plug in the connector of the engine cooling fans.



 
169 Fasten the clamp on the air intake hose. Use a drive socket #7. Use a ratchet wrench.



170 Install the bonnet latch cable.




171 Install the wiring harness holder.



172 Attach the upper coolant hose.



173 Attach the clip of the upper coolant hose.

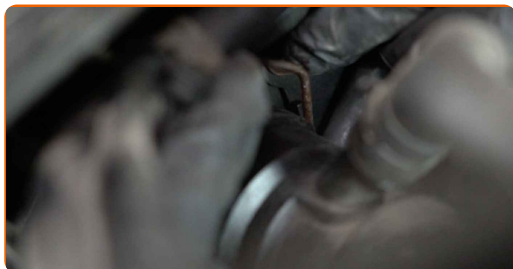

174 Plug in the connector of the engine cooling fans.



175 Install the radiator air guides.

176 Screw in the fasteners of the radiator air guides. Use Torx T20. Use a ratchet wrench.



177 Install the bonnet weather strip.



178 Install the bumper reinforcement bar.



179 Screw in the fasteners of the bumper reinforcement bar. Use a drive socket #13. Use a ratchet wrench.



180 Lift the car using a jack or place it over an inspection pit.

181 Support the bumper reinforcement bar. Use a hydraulic transmission jack.



182 Tighten the fastener of the bumper reinforcement bar. Use a drive socket #13. Use a torque wrench. Observe the recommended tightening torque.



183 Remove the support from under the bumper reinforcement bar.



AUTODOC recommends:

- Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

184 Plug in the horn connector.

185 Attach the air duct.

186 Plug in the horn connector.

187 Install the air duct.



188 Plug in the connector of the coolant temperature sensor.




189 Attach the wiring of the coolant temperature sensor.




190 Plug in the connectors of the headlight bulbs.



 
191 Install the headlamp.



 192 Screw in the headlight fasteners. Use Torx T27. Use a ratchet wrench.



 193 Plug in the connectors of the headlight bulbs.



194 Install the headlamp.



195 Screw in the headlight fasteners. Use Torx T27. Use a ratchet wrench.



196 Tighten the headlamp fasteners. Use Torx T27. Use a torque wrench. Observe the recommended tightening torque.



197 Install the front upper timing belt cover.



198

Screw in the fasteners of the front upper timing belt cover. Use a flat screwdriver.



199

Install the air intake duct.



200

Screw in the fasteners of the air intake duct. Use a Phillips screwdriver.



201

Stick painter's tape to the car fenders to protect the paintwork from damage when demounting the bumper.



202 Attach the connectors of the fog lights.



203 Attach the headlamp washer hose.



204 Install the bumper to the mounting seat. Make sure you hear a click indicating that it is locked in place.



205 Screw in the bumper upper fasteners. Use Torx T27. Use a drive socket #10. Use a ratchet wrench.




Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8). Tip:

- To prevent damage to the components, hold the bumper when screwing in the upper fasteners.


206

Snap the bumper side clips into place. Make sure you hear a click indicating that it is locked in place.

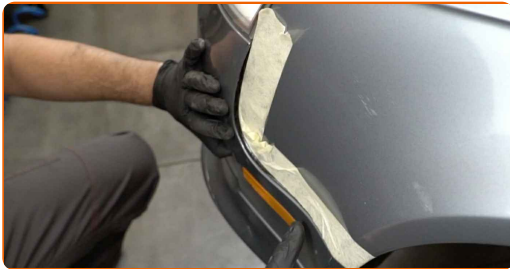

207

Remove the masking tape.

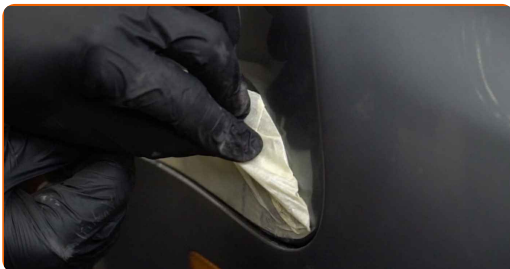

208

Screw in the fasteners connecting the bumper to the wings. Use a drive socket #10. Use a ratchet wrench.



209

Screw in the fastener of the spacer under the bumper reinforcement bar. Use Torx T25. Use a drive socket #10. Use a ratchet wrench.



 
210

Install the wheel arch cover to its mounting seat.



211

Install and tighten the wheel arch cover fasteners. Use Torx T25. Use a ratchet wrench.



212

Install the wheel.



AUTODOC recommends:

- Important! Hold the wheel while screwing in the fastening bolts. SEAT Altea XL (5P5, 5P8)

213 Screw in the wheel bolts. Use wheel impact socket #17.



214 Lower the car.

215 Secure the wheels with chocks.

216 Tighten the wheel bolts using a criss-cross pattern. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



217 Remove the jacks and chocks.

218 Remove the coolant reservoir cap.



219 Insert the funnel.



220

Pour coolant in the coolant reservoir.




Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8).
Professionals recommend:

- Only use the coolant recommended by the manufacturer.
- The coolant level should be at the MAX mark.
- Wait until the air goes out of the system.


221

Open the coolant system bleed screw. Use a drive socket #10. Use a ratchet wrench. Wait until the air goes out of the system.

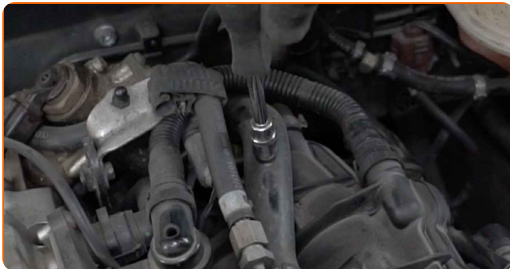

222

Unscrew the cap of the hydraulic power steering reservoir. Remove the cap from the hydraulic power steering reservoir.

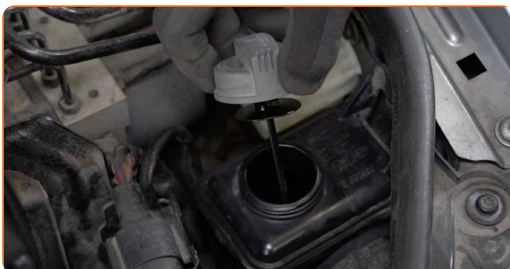

223

Fill the hydraulic power steering reservoir with fluid.



Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8). Tip from AUTODOC:

- Use the hydraulic power steering fluid recommended by the car manufacturer.
- The hydraulic power steering fluid level should be at the MAX mark on the reservoir.

224

Attach the terminals to the battery.



 
Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8). AUTODOC recommends:

- Be careful! Do not mix up the positive and the negative terminals of the car battery.

225 Screw in the fasteners of the battery terminals. Use a drive socket #10. Use a ratchet wrench.




226 Run the engine for a few minutes. This should be done in order to remove residual air from the cooling system and to check if the components are operating correctly.



227 Shut off the engine.


228 Check the coolant level. If necessary, top up to the required level.

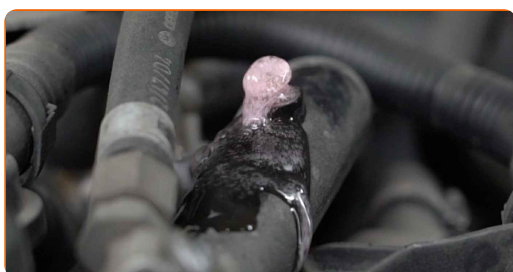


Please note!

- The coolant level should be at the MAX mark.

 229 Close the coolant system bleed screw. Use a drive socket #10. Use a ratchet wrench.



 230 Place the cap on the hydraulic power steering reservoir.



231 Screw on the cap of the hydraulic power steering reservoir.

232 Install the coolant reservoir cap.

233 Screw on the coolant reservoir cap.



234 Install the engine cover and secure it.

AUTODOC recommends:

- Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8). Do not use excessive force during installation. This may damage the part.
- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners.

235

Remove the fender protection cover.

236

Close the hood.

Replacement: water pump & timing belt kit – SEAT Altea XL (5P5, 5P8).
AUTODOC experts recommend:

- Be sure to record the mileage at which you replaced the timing belt and water pump kits.

WELL DONE! [VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

WATER PUMP & TIMING BELT KIT: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.