
- AUTODOC CLUB

How to change ignition leads on **SEAT AROSA** (6H) – replacement guide



SIMILAR VIDEO TUTORIAL

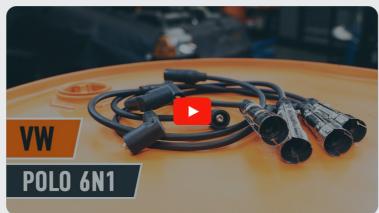


This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for: SEAT AROSA (6H) 1.0, SEAT AROSA (6H) 1.4

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW Polo Hatchback (6N1) 1.0

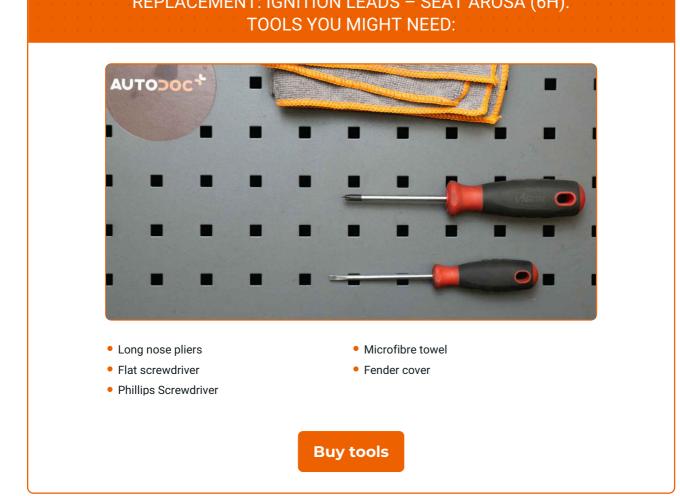

REPLACEMENT: IGNITION LEADS - SEAT AROSA (6H).

ß

O

Open the hood.



Replacement: ignition leads - SEAT AROSA (6H). Tip from AUTODOC:

• All work should be done with the engine stopped.

REPLACEMENT: IGNITION LEADS – SEAT AROSA (6H). RECOMMENDED SEQUENCE OF STEPS:



Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



Unscrew the air filter housing fasteners. Use a Phillips screwdriver.





Remove the air filter housing.



5

Cover the throttle body with a microfibre towel to prevent dust and dirt from getting into the system.



+ AUTODOC CLUB



6

Detach the spark plug wire bracket. Use a flat screwdriver.



7

Make marks on the distributor cap to indicate the installation order of the spark plug wires.



8

Disconnect the spark plug wires from the distributor cap.



Replacement: ignition leads - SEAT AROSA (6H). Tip:

• Be careful to avoid damaging spark plug wires.



Disconnect the spark plug wires from the spark plugs. Use long nose pliers.





Replacement: ignition leads - SEAT AROSA (6H). Tip from AUTODOC experts:

• Be careful to avoid damaging spark plug wires.



Disconnect the high voltage wire.



11

Connect new spark plug wires to the distributor cap.



Replacement: ignition leads - SEAT AROSA (6H). AUTODOC recommends:

• Follow the installation sequence.



Connect the new spark plug wires to the spark plugs. Use long nose pliers.



+ AUTODOC CLUB



Replacement: ignition leads – SEAT AROSA (6H). AUTODOC experts recommend:

• Follow the installation sequence.



Connect the high voltage wire.



14

Attach the spark plug wire bracket.



15

Remove the microfibre towel from the throttle body.



16

Install the air filter housing and fasten it. Use a Phillips screwdriver.







Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.



Shut off the engine. 18 Remove the fender protection cover. 19 20


Close the hood.



VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

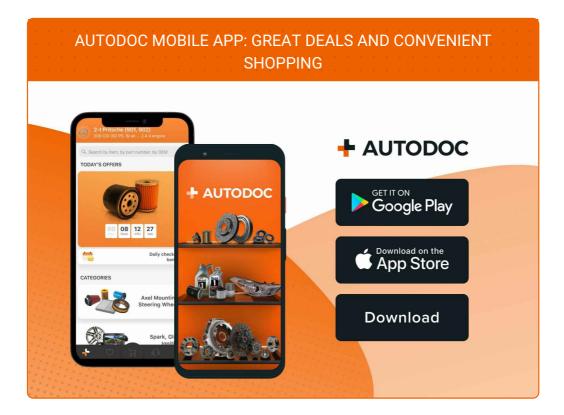

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

IGNITION LEADS: A WIDE SELECTION

(i) **DISCLAIMER**:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.