



How to change
distributor cap on **SEAT**
Ibiza II (6K1) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

 
Important!

This replacement procedure can be used for:
SEAT Ibiza II (6K1) 1.8 i, SEAT Ibiza II (6K1) 1.6 i

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW GOLF II (19E, 1G1) 1.6

REPLACEMENT: DISTRIBUTOR CAP – SEAT IBIZA II
(6K1). TOOLS YOU NEED:

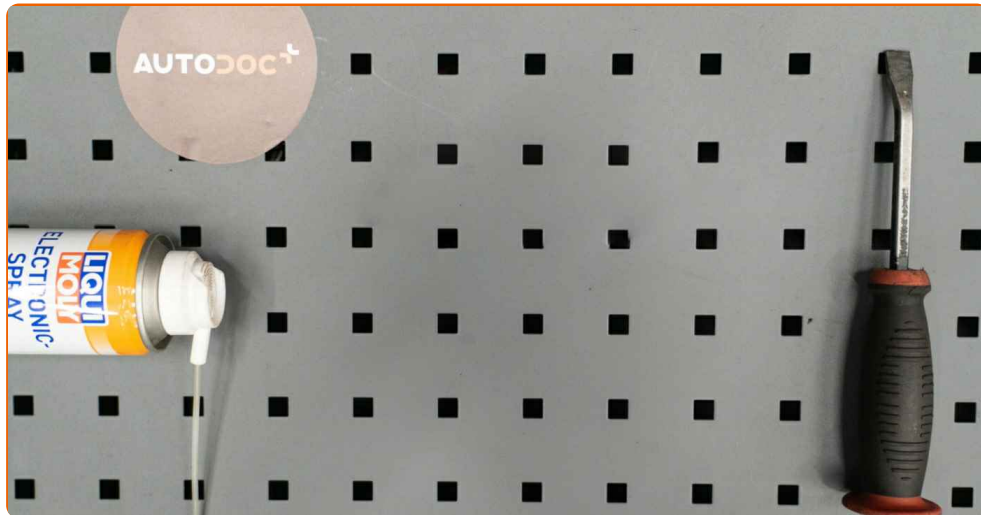

- Electronic spray
- Fender cover
- Crow bar

Buy tools

Replacement: distributor cap – SEAT Ibiza II (6K1). Tip from AUTODOC experts:


- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Thoroughly inspect the ignition distributor assembly. Replace any worn parts.
- All work should be done with the engine stopped.

REPLACEMENT: DISTRIBUTOR CAP – SEAT IBIZA II (6K1). USE THE FOLLOWING PROCEDURE:


1 Open the hood.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Make marks on the distributor cap to indicate the installation order of the spark plug wires.

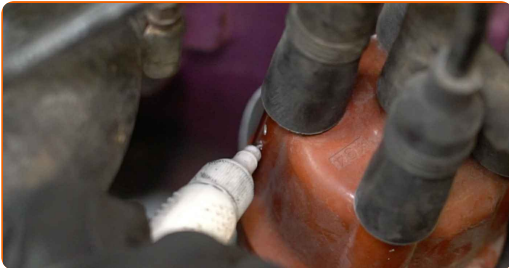

4 Disconnect the spark plug wires from the distributor cap.

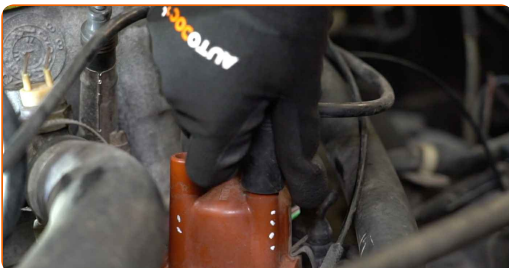

Replacement: distributor cap – SEAT Ibiza II (6K1). Tip from AUTODOC experts:

- Be careful to avoid damaging spark plug wires.

 
5

Release the distributor cap clips. Use a crowbar.



6

Remove the distributor cap.

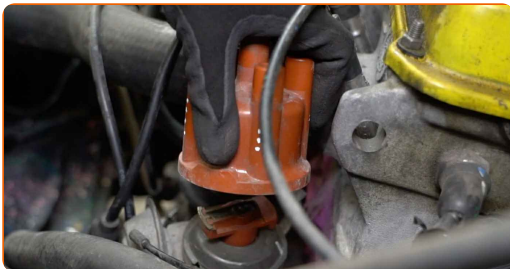

AUTODOC recommends:

- Replacement: distributor cap – SEAT Ibiza II (6K1). Do not use excessive force when removing the part as this may damage it.

7

Install a new distributor cap.



AUTODOC recommends:

- Replacement: distributor cap – SEAT Ibiza II (6K1). Do not use excessive force during installation. This may damage the part.

8

Fasten the distributor cap clips.




9

Treat the spark plug wire connectors. Use dielectric grease.



10

Connect the spark plug wires to the distributor cap.

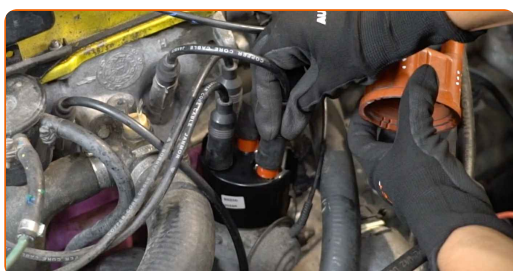

Replacement: distributor cap – SEAT Ibiza II (6K1). Tip:

- Follow the installation sequence.

11 Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.

12 Shut off the engine.

13 Remove the fender protection cover.

14 Close the hood.

WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

DISTRIBUTOR CAP: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.