



How to change air filter
on **SEAT Ibiza IV**
Hatchback (6J5, 6P1) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

SEAT Ibiza IV Hatchback (6J5, 6P1) 1.2, SEAT Ibiza IV Hatchback (6J5, 6P1) 1.2 LPG

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: SKODA Fabia I Combi (6Y5) 1.2

REPLACEMENT: AIR FILTER – SEAT IBIZA IV
HATCHBACK (6J5, 6P1). TOOLS YOU MIGHT NEED:



- Phillips screwdriver
- Microfibre towel
- Fender cover

Buy tools

Replacement: air filter – SEAT Ibiza IV Hatchback (6J5, 6P1). Tip from AUTODOC:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- All work should be done with the engine stopped.

REPLACEMENT: AIR FILTER – SEAT IBIZA IV HATCHBACK (6J5, 6P1). RECOMMENDED SEQUENCE OF STEPS:

 
1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.


3 Remove the engine cover. The air filter housing is integrated into the engine cover.




4 Cover the throttle body with a microfibre towel to prevent dust and dirt from getting into the system.




5 Undo the fastening screws of the air filter cover. Use a Phillips screwdriver.

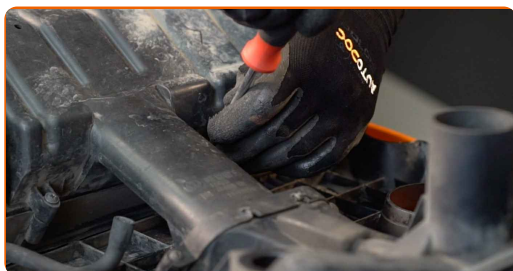


6 Take off the filter lid.

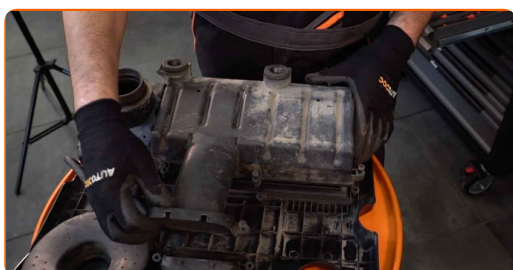


7 Remove the filter element from the filter housing.

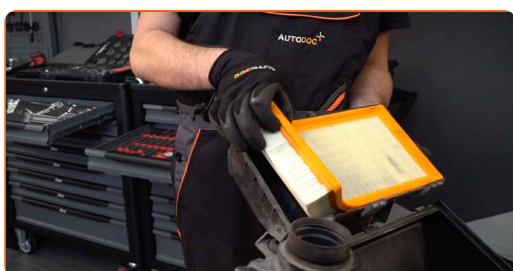

8 Clean the air filter cover and housing.

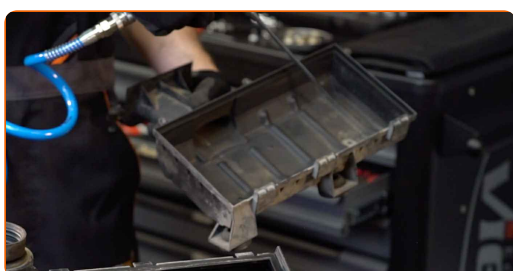

9 Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.

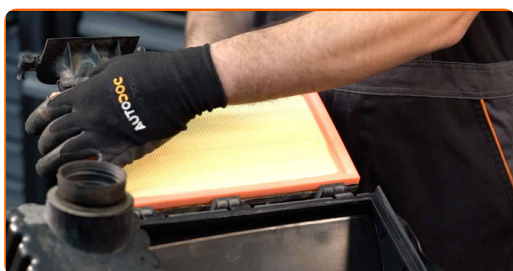

Replacement: air filter – SEAT Ibiza IV Hatchback (6J5, 6P1). AUTODOC experts recommend:

- Check out the correct location of the filter element. Do not skew.
- Attention! Use quality filters – SEAT Ibiza IV Hatchback (6J5, 6P1).
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

10

Reinstall the air filter cover. Fasten it.



11

Screw in the fastening screws of the air filter cover. Use a Phillips screwdriver.



12

Remove the microfibre towel from the throttle body.



13 Install the engine cover and secure it. Make sure you hear a click indicating that it is locked in place.



Replacement: air filter – SEAT Ibiza IV Hatchback (6J5, 6P1). Professionals recommend:

- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners and the throttle body air intake hose.

14 Remove the fender protection cover.

15 Close the hood.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

AIR FILTER: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.