

How to change ignition coil on **SEAT Ibiza IV Sportcoupe (6J, 6P)** – replacement guide





#### SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

## (i) Important!

This replacement procedure can be used for:

SEAT Ibiza IV Sportcoupe (6J, 6P) 1.6 LPG, SEAT Ibiza IV Sportcoupe (6J, 6P) 1.2, SEAT Ibiza IV Sportcoupe (6J, 6P) 1.4, SEAT Ibiza IV Sportcoupe (6J, 6P) 1.6, SEAT Ibiza IV Sportcoupe (6J, 6P) 1.4 TSI, SEAT Ibiza IV Sportcoupe (6J, 6P) 1.4 TSI Cupra

The steps may slightly vary depending on the car design.


This tutorial was created based on the replacement procedure for a similar car part on: SEAT Ibiza III Hatchback (6L) 1.4 16V

CLUB.AUTODOC.CO.UK 1-8





## REPLACEMENT: IGNITION COIL – SEAT IBIZA IV SPORTCOUPE (6J, 6P). TOOLS YOU'LL NEED:

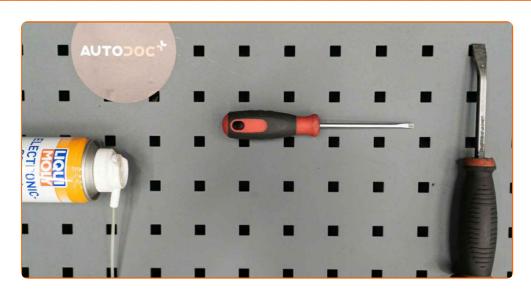

- Electronic spray
- Crow bar

- Microfibre towel
- Fender cover

**Buy tools** 

CLUB.AUTODOC.CO.UK 2-8





## Replacement: ignition coil – SEAT Ibiza IV Sportcoupe (6J, 6P). AUTODOC experts recommend:

- The replacement procedure is the same for the ignition coils of all cylinders.
- All work should be done with the engine stopped.

# REPLACEMENT: IGNITION COIL – SEAT IBIZA IV SPORTCOUPE (6J, 6P). RECOMMENDED SEQUENCE OF STEPS:

- Open the hood.
- Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.
- On the right side, detach the PCV valve hose from the engine cover.



Remove the engine cover assembled with the air filter housing.



CLUB.AUTODOC.CO.UK 3-8







#### Replacement: ignition coil – SEAT Ibiza IV Sportcoupe (6J, 6P). Tip:

• Do not apply excessive force when removing the part. Otherwise you may damage it.





Take out the ignition coil from the spark plug well. Use a crowbar.



#### **AUTODOC** recommends:

• Remember the sequence of steps for ignition coil demounting.





CLUB.AUTODOC.CO.UK 4-8



10





Treat the ignition coil connector with electronic spray. The spray will protect the electrical contacts from corrosion, oxidation, and will reduce the contact resistance.



9 Plug in the connectors of the ignition coils.



Install the ignition coils to the spark plug wells. Make sure you hear a click indicating that it is locked in place.



#### AUTODOC recommends:

 Replacement: ignition coil – SEAT Ibiza IV Sportcoupe (6J, 6P). Follow the installation steps.

CLUB.AUTODOC.CO.UK 5-8





Remove the microfibre towel from the throttle body.



12 Install the engine cover and secure it.



#### **AUTODOC** recommends:

- Caution! Do not use excessive force during installation. This may damage the fasteners of the car. SEAT Ibiza IV Sportcoupe (6J, 6P)
- Make sure the engine cover is properly seated. It should not be displaced with respect to the guiding fasteners and the throttle body air intake hose.
- On the right side, attach the PCV valve hose to the engine cover.



- Remove the fender protection cover.
- 15 Close the hood.

13

CLUB.AUTODOC.CO.UK 6-8







- Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.
- Shut off the engine.




**VIEW MORE TUTORIALS** 

CLUB.AUTODOC.CO.UK 7-8





# AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

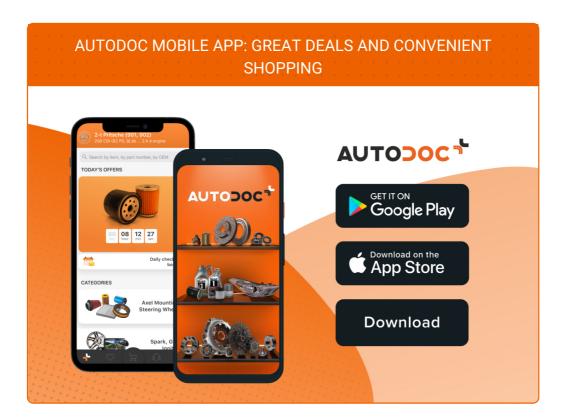

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

**IGNITION COIL: A WIDE SELECTION** 

### (i) DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.

CLUB.AUTODOC.CO.UK 8-8