How to change fuel filter on **SEAT Inca (6K9)** – replacement guide



SIMILAR VIDEO TUTORIAL




This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for: SEAT Inca (6K9) 1.9 D, SEAT Inca (6K9) 1.9 SDI

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: AUDI A4 Avant (8E5, B6) 1.9 TDI

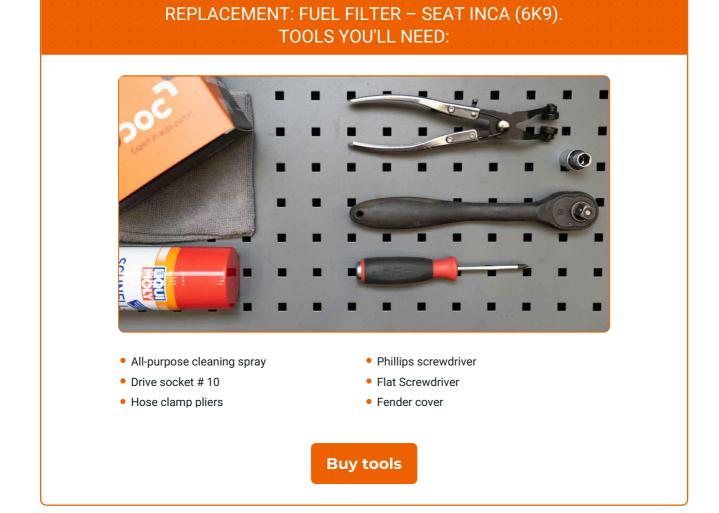

ß

O



Replacement: fuel filter – SEAT Inca (6K9). Tip from AUTODOC:

• Ensure adequate ventilation of the workplace. Fuel vapors are poisonous.

 Please note: all work on the car – SEAT Inca (6K9) – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:



4

Open the bonnet.

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

Remove the engine cover caps. Use a flat screwdriver.

Unscrew the engine cover fastener. Use a drive socket #10.



5

Remove the engine cover.





Replacement: fuel filter – SEAT Inca (6K9). AUTODOC experts recommend:

• Raise the engine cover, holding it on two sides simultaneously.



Clean the fuel filter. Use all-purpose cleaning spray.



7

Loosen the fastening clamps of the fuel filter pipes. Use hose clamp pliers with retainer.



8

Detach the tubes from the fuel filter.



Replacement: fuel filter – SEAT Inca (6K9). Tip from AUTODOC experts:

• Be careful! Fuel may leak from the filter housing and hoses.



9

Loosen the fuel filter mounting. Use a Phillips screwdriver.



10

Remove the fuel filter pipe retainer.



11

Disconnect the pipe from the fuel filter.



12

Remove the fuel filter. Put the old filter cartridge in the container.



13

Install a new fuel filter.





Replacement: fuel filter – SEAT Inca (6K9). Tip from AUTODOC:

- Make sure that the fuel filter is positioned correctly. Consider the fuel flow direction mark.
- During installation, take care to prevent dust and dirt from getting into the fuel filter housing.
- SEAT Inca (6K9) It's important to only use high-quality filters.

14

Tighten the fuel filter fasteners. Use a Phillips screwdriver.



15

Remove the o-rings. Use a flat screwdriver.





Install new o-rings.





17

Attach the pipe to the fuel filter.



18

Install the fuel filter pipe retainer.



19

Attach the tubes to the fuel filter.



20

Tighten the fastening clamps of the fuel filter pipes. Use hose clamp pliers with retainer.



21

Install the engine cover and secure it.









27

Close the hood.

Replacement: fuel filter – SEAT Inca (6K9). Tip:

• To protect the environment from pollution, be sure to dispose of the used filters at special collection points.



VIEW MORE TUTORIALS



AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

FUEL FILTER: A WIDE SELECTION

i DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.