



How to change front
brake discs on **SEAT**
Leon ST (5F8) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

Important!

This replacement procedure can be used for:

SEAT Leon ST (5F8) 1.4 TSI, SEAT Leon ST (5F8) 2.0 TDI, SEAT Leon ST (5F8) 1.8 TSI, SEAT Leon ST (5F8) 1.2 TSI, SEAT Leon ST (5F8) 1.6 TDI, SEAT Leon ST (5F8) 1.4 TGI, SEAT Leon ST (5F8) 1.6 TDI 4Drive, SEAT Leon ST (5F8) 2.0 TDI 4Drive, SEAT Leon ST (5F8) 1.8 TSI 4Drive, SEAT Leon ST (5F8) 1.0 TSI, SEAT Leon ST (5F8) 1.6 SRE, SEAT Leon ST (5F8) 1.5 TSI, SEAT Leon ST (5F8) 1.5 TGi, SEAT Leon ST (5F8) 1.0 TSi (DKLB), SEAT Leon ST (5F8) 1.6 TDI 4Drive (DGTE)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW Golf VII Hatchback (5G1, BQ1, BE1, BE2) 1.8 TSI

**REPLACEMENT: BRAKE DISCS – SEAT LEON ST (5F8).
TOOLS YOU MIGHT NEED:**



- Wire brush
- Nylon cleaning brush
- WD-40 spray
- All-purpose cleaning spray
- Brake cleaner
- Anti-squeal paste
- Ceramic grease
- Torque wrench
- Combination spanner #17
- Drive socket # 13
- Drive socket # 19
- Drive socket # 21
- Torx bit T30
- Wheel impact socket #17
- Ratchet wrench
- Rubber mallet
- Impact screwdriver
- Brake caliper wind back tool
- Crow bar
- Wheel chock


Buy tools

AUTODOC recommends:

- Replace the brake disks on the car SEAT Leon ST (5F8) in complete set for each axis. Regardless of the state of components. This will ensure even braking.
- The replacement procedure is identical for both brake disks on the same axle.
- When changing the brake discs, always replace the brake pads.
- Please note: all work on the car – SEAT Leon ST (5F8) – should be done with the engine switched off.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the bonnet. Unscrew the brake fluid reservoir cap.

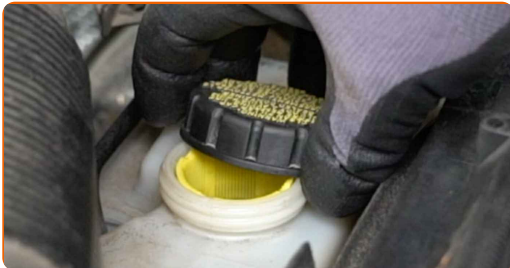

2 Secure the wheels with chocks.

3 Loosen the wheel mounting bolts. Use wheel impact socket #17.



4 Raise the car.

Replacement: brake discs – SEAT Leon ST (5F8). Professionals recommend:

- If you are using a jack, make sure it rests on a flat surface without any unevenness.
- Be sure to additionally secure the car with jack stands.

5

Unscrew the wheel bolts.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts. SEAT Leon ST (5F8)


6

Remove the wheel.



7

Clean the brake caliper fasteners. Use a wire brush. Use a brake cleaner.

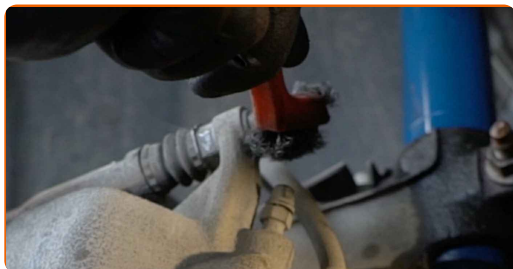


AUTODOC recommends:

- Replacement: brake discs – SEAT Leon ST (5F8). After applying the spray, wait a few minutes.


8

 Unscrew the brake caliper fasteners. Use a combination spanner #17. Use a drive socket #13. Use a ratchet wrench.



9

 Remove the fastening bolts.



10

Spread the brake pads. Use a crowbar.



11

Remove the brake caliper.




Replacement: brake discs – SEAT Leon ST (5F8). AUTODOC recommends:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.

12


Remove the brake pads. Use a crowbar.

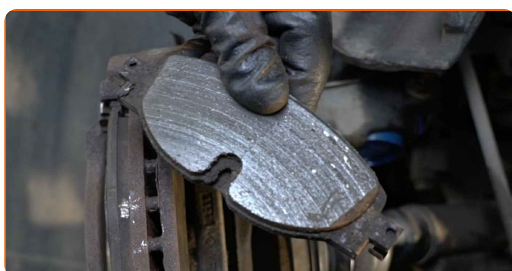

13 Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.



 
14 Unscrew the brake caliper bracket fasteners. Use a drive socket #21. Use a ratchet wrench.




15 Remove the fastening bolts.



 
16 Remove the caliper bracket.




17 Clean the brake disc fastener. Use a wire brush. Use WD-40 spray.

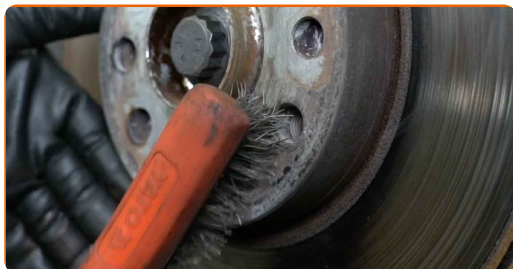

 18 Unscrew the brake disc fastening. Use Torx T30. Use an impact screwdriver.



19 Remove the fastening bolt.

 

20 Remove the brake disc. Use a rubber mallet.



 
21 Clean the hub. Use a wire brush. Use all-purpose cleaning spray.




22 Treat the contacting surface. Use ceramic grease.




23 Install the brake disc.



24 Install the fastening bolt.

 


 25 Tighten the brake disc fastening. Use Torx T30. Use a torque wrench. Tighten it to 8 Nm torque.



26

Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.

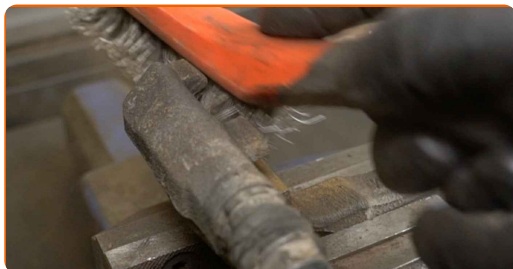


AUTODOC recommends:

- Replacement: brake discs – SEAT Leon ST (5F8). After applying the spray, wait a few minutes.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.


27

 Install the brake caliper bracket.



28

 
Install the fastening bolts.



- 29** Tighten the brake caliper bracket fasteners. Use a drive socket #21. Use a torque wrench. Tighten it to 190 Nm torque.



 
- 30** Treat the brake caliper piston. Use a nylon cleaning brush. Use a brake cleaner.



AUTODOC recommends:

- After applying the spray, wait a few minutes.

 - 31** Press in the brake caliper piston. Use brake caliper wind back tool.



- 32** Treat the brake pads in the area where their surface comes into contact with the brake caliper bracket. Use anti-squeal paste.



Replacement: brake discs – SEAT Leon ST (5F8). Tip:

- Make sure the disc surface is clean before installing the pads.

- 33** Install the brake pads.



 
- 34** Install the brake caliper and fix it.



- 35** Install the fastening bolts.



36 Tighten the brake caliper fasteners. Use a drive socket #13. Use a torque wrench. Tighten it to 35 Nm torque.



37 Treat the surface where the brake disc contacts the wheel rim. Use ceramic grease.



 
38 Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- After applying the spray, wait a few minutes.

39 Install the wheel.




AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. SEAT Leon ST (5F8)


40

 Screw in the wheel bolts. Use wheel impact socket #17.



41

 Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



42

Remove the jacks and chocks.



Replacement: brake discs – SEAT Leon ST (5F8). Tip from AUTODOC experts:

- Without starting the engine, press the brake pedal several times until you feel significant resistance.
- Check the brake fluid level in the expansion tank and refill if necessary.

43

Tighten the brake fluid reservoir cap. Close the hood.



WELL DONE! 

[VIEW MORE TUTORIALS](#)

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

 Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BRAKE DISCS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.