How to change front coil springs on **SEAT TOLEDO** I (1L) – replacement guide



## SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

## (i) Important!

This replacement procedure can be used for: SEAT TOLEDO I (1L) 1.6 i, SEAT TOLEDO I (1L) 1.9 D, SEAT TOLEDO I (1L) 1.9 TD, SEAT TOLEDO I (1L) 1.8 i, SEAT TOLEDO I (1L) 2.0 i, SEAT TOLEDO I (1L) 2.0 i 16V, SEAT TOLEDO I (1L) 1.9 TDI

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW GOLF III (1H1) 1.4



REPLACEMENT: COIL SPRINGS - SEAT TOLEDO I (1L).

- Brake cleaner
- Copper grease
- Combination spanner #18
- Drive socket # 10
- Drive socket # 18
- Drive socket # 21

- Ratchet wrench
- Torque wrench
- Hydraulic strut spring compressor

ß

O

- Fender cover
- Wheel chock

**Buy tools** 



#### Replacement: coil springs – SEAT TOLEDO I (1L). Professionals recommend:

- Both coil springs of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the front suspension.
- Please note: all work on the car SEAT TOLEDO I (1L) should be done with the engine switched off.

## CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:



Secure the wheels with chocks.





Loosen the wheel mounting bolts. Use wheel impact socket #17.



3

Raise the front of the car and secure on supports.



Unscrew the wheel bolts.



## Replacement: coil springs – SEAT TOLEDO I (1L). Tip:

• To avoid injury, hold up the wheel when unscrewing the bolts.



#### Remove the wheel.



6

Clean the fastener of the bracket that connects the brake hose to the shock strut. Use a wire brush. Use WD-40 spray.



Unscrew the brake hose fastening bracket from the shock strut. Use a drive socket #10. Use a ratchet wrench.



တြ



Remove the bracket from the shock absorber strut.



9

Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.

10

Unscrew the lower fastener connecting the shock strut to the steering knuckle. Use a combination spanner #18. Use a drive socket #18. Use a ratchet wrench.



11

Remove the fastening bolts (2 pieces).





Disconnect the steering knuckle from the shock absorber strut.



13

Lower the car.

Open the bonnet.





Unscrew the top fastening of the shock strut mount. Use a drive socket #22. Use a ratchet wrench.

Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



#### AUTODOC recommends:

 Important! Hold the suspension strut while unscrewing the fastening bolts. SEAT TOLEDO I (1L)



Remove the suspension strut.



18

Set the shock absorber strut on the spring compressor tool.





#### Replacement: coil springs – SEAT TOLEDO I (1L). AUTODOC recommends:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.



Compress the spring.



20

Unscrew the fastener of the shock strut mount.





Treat the shock strut rod. Use a wire brush. Use WD-40 spray.





Remove the strut piston rod nut. Use a drive socket #21. Use a ratchet wrench.



23

Remove the top strut mount.



24

Release the coil spring.

25

Remove the spring.



#### AUTODOC recommends:

• Replacement: coil springs – SEAT TOLEDO I (1L). Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.



26

Install the spring on the shock absorber.



27

Compress the spring.



28

Install the upper strut mount and the strut mount bearing.



29


Screw in the fastener of the shock strut mount.



30

Tighten the shock strut piston rod nut. Use a drive socket #21. Use a torque wrench. Tighten it to 65 Nm torque.



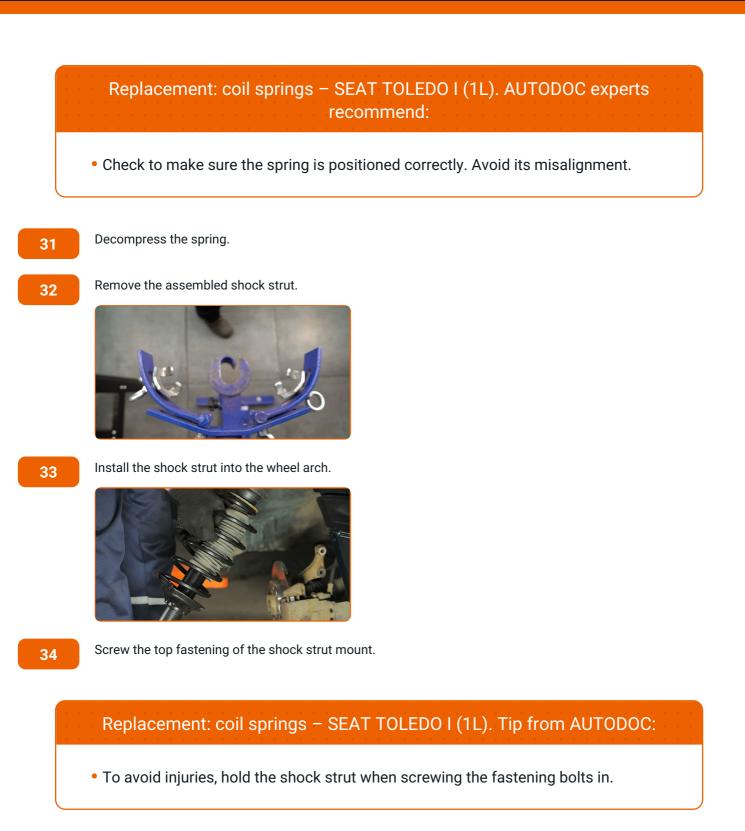

ဂြ



Tighten the upper fastener of the shock absorber strut mount. Use a drive socket #22. Use a torque wrench. Tighten it to 70 Nm torque.





37

Remove the fender protection cover.

Close the hood.



Raise the front of the car and secure on supports.

39

Treat the shock strut mounting seat on the steering knuckle. Use a wire brush. Use WD-40 spray.



40

Fix the shock absorber strut on the steering knuckle.



41

Install the fastening bolts (2 pieces).





Tighten the lower fasteners connecting the shock strut to the steering knuckle. Use a combination spanner #18. Use a drive socket #18. Use a torque wrench. Tighten it to 80 Nm torque.



43

Install the bracket onto the shock absorber strut.



44

Tighten the brake hose fastening bracket to the shock strut. Use a drive socket #10. Use a ratchet wrench.



45

Treat the shock strut fasteners. Use copper grease.





Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



47

Clean the brake disk surface. Use a brake cleaner.



#### Replacement: coil springs – SEAT TOLEDO I (1L). AUTODOC recommends:

• After applying the spray, wait a few minutes.



Install the wheel.



#### AUTODOC recommends:

 Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. SEAT TOLEDO I (1L)



Screw in the wheel bolts. Use wheel impact socket #17.



50

Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 nm torque.



51

Remove the jacks and chocks.






**VIEW MORE TUTORIALS** 



## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

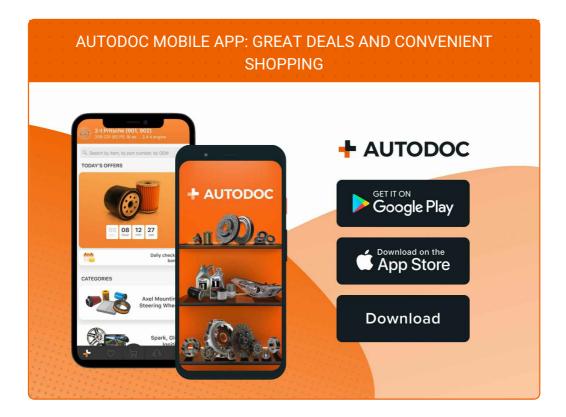

### A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

#### **COIL SPRINGS: A WIDE SELECTION**

# **(i) DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.