


How to change tailgate struts on **SKODA Fabia I Hatchback (6Y2)** – replacement guide





SIMILAR VIDEO TUTORIAL

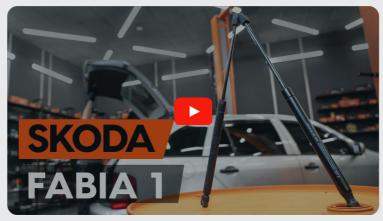

This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for:

SKODA Fabia I Hatchback (6Y2) 1.4 16V, SKODA Fabia I Hatchback (6Y2) 1.4, SKODA Fabia I Hatchback (6Y2) 1.9 SDI, SKODA Fabia I Hatchback (6Y2) 1.0, SKODA Fabia I Hatchback (6Y2) 1.9 TDI, SKODA Fabia I Hatchback (6Y2) 2.0, SKODA Fabia I Hatchback (6Y2) 1.2, SKODA Fabia I Hatchback (6Y2) 1.9 TDI RS, SKODA Fabia I Hatchback (6Y2) 1.4 TDI

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: SKODA Fabia I Combi (6Y5) 1.2

CLUB.AUTODOC.CO.UK 1-6





REPLACEMENT: TAILGATE STRUTS – SKODA FABIA I HATCHBACK (6Y2). TOOLS YOU MIGHT NEED:



• Flat Screwdriver

Buy tools

CLUB.AUTODOC.CO.UK 2-6





Replacement: tailgate struts – SKODA Fabia I Hatchback (6Y2). AUTODOC recommends:

- Right and left gas struts of the boot lid should be replaced simultaneously.
- The replacement procedure is identical for the right and left gas struts of the boot lid.
- All work should be done with the engine stopped.

REPLACEMENT: TAILGATE STRUTS – SKODA FABIA I HATCHBACK (6Y2). USE THE FOLLOWING PROCEDURE:

Open the boot lid.

Release the circlip connecting the gas strut to the car body. Use a flat screwdriver.



Release the circlip connecting the gas strut to the boot lid. Use a flat screwdriver.



CLUB.AUTODOC.CO.UK 3-6







Replacement: tailgate struts – SKODA Fabia I Hatchback (6Y2). Tip:

 To avoid any injuries, be sure to hold the boot lid while demounting the gas struts.

Remove the boot lid gas strut.



5 Install the new boot lid gas strut.

6



Replacement: tailgate struts – SKODA Fabia I Hatchback (6Y2). AUTODOC experts recommend:

• To avoid any injuries, be sure to hold the boot lid while installing the gas strut.

Snap on the circlip connecting the gas strut to the boot lid.



CLUB.AUTODOC.CO.UK 4-6









- Check the working condition of the boot lid gas springs after they are installed.
- Close the lid of the luggage compartment.



VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 5-6





AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

TAILGATE STRUTS: A WIDE SELECTION

(i) DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2021 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.

CLUB.AUTODOC.CO.UK 6-6