



How to change ignition  
coil on **SKODA FELICIA I**  
**Estate (6U5)** –  
replacement guide

## SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

### Important!

This replacement procedure can be used for:

SKODA FELICIA I Estate (6U5) 1.3 LX, SKODA FELICIA I Estate (6U5) 1.3 LXI, SKODA FELICIA I Estate (6U5) 1.6 GLX, SKODA FELICIA I Estate (6U5) 1.3

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW Polo Hatchback (6N1) 1.0

REPLACEMENT: IGNITION COIL – SKODA FELICIA I ESTATE (6U5). LIST OF THE TOOLS YOU'LL NEED:



- Electronic spray
- Torque wrench
- Drive socket # 10
- Torx bit T30
- Ratchet wrench
- Fender cover

**Buy tools**

Replacement: ignition coil – SKODA FELICIA I Estate (6U5). Tip from AUTODOC:

- The replacement procedure is the same for the ignition coils of all cylinders.
- Please note: all work on the car – SKODA FELICIA I Estate (6U5) – should be done with the engine switched off.

**CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:**

**1** Open the bonnet.

**2** Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

**3** Unscrew the ignition coil bracket. Use Torx T30. Use a ratchet wrench.



**4** Remove the ignition coil.



**5** Disconnect the high voltage wire.



Replacement: ignition coil – SKODA FELICIA I Estate (6U5). AUTODOC recommends:

- Be careful to avoid damaging spark plug wires.

**6** Detach the connector from the ignition coil.



**7** Remove the cowl grille seal.



**8** Raise up and remove the cowl grille.



 
**9** Install a new ignition coil.



**10** Tighten the ignition coil fastening. Use a drive socket #10. Use a torque wrench. Tighten it to 7 nm torque.



**11** Treat the ignition coil connector with electronic spray. The spray will protect the electrical contacts from corrosion, oxidation, and will reduce the contact resistance.



**12** Plug in the ignition coil connector.



**13** Connect the high voltage wire.



**14** Install and secure the cowl grille.



**15** Install the cowl grille seal.



**16** Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.



**17** Shut off the engine.

**18** Remove the fender protection cover.

19

Close the hood.

**WELL DONE!** 

**VIEW MORE TUTORIALS**



## AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**IGNITION COIL: A WIDE SELECTION**

### **i DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.