+ AUTODOC CLUB

How to change coolant flange on **SKODA FELICIA II (6U1)** – replacement guide







SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for: SKODA FELICIA II (6U1) 1.9 D

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW GOLF II (19E, 1G1) 1.6

CLUB.AUTODOC.CO.UK 1–10







REPLACEMENT: COOLANT FLANGE – SKODA FELICIA II (6U1). TOOLS YOU MIGHT NEED:



- Torque wrench
- Drive socket # 7
- Drive socket # 10
- Drive socket #13

- Ratchet wrench
- Fluid container
- Funnel
- Fender cover

Buy tools

CLUB.AUTODOC.CO.UK 2-10







Replacement: coolant flange - SKODA FELICIA II (6U1). Tip from AUTODOC:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Check the coolant condition and replace it if necessary.
- Inspect the thermostat. Replace it if necessary.
- All work should be done with the engine stopped.

REPLACEMENT: COOLANT FLANGE – SKODA FELICIA II (6U1). USE THE FOLLOWING PROCEDURE:

- Open the hood.
- Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.
- Unscrew the coolant reservoir cap.



Prepare a container for fluids.



CLUB.AUTODOC.CO.UK 3-10







Loosen the coolant hose clamp. Use a drive socket #7. Use a ratchet wrench.



Detach the coolant hose.



Replacement: coolant flange – SKODA FELICIA II (6U1). Professionals recommend:

- Caution! Coolant may come out from the water pump channels and body.
- Drain the coolant from the engine.



CLUB.AUTODOC.CO.UK 4–10







Replacement: coolant flange – SKODA FELICIA II (6U1). Tip from AUTODOC:

- Caution! The coolant can be very hot.
- Wear gloves to prevent contact with hot liquid.
- All work should be done with the engine stopped.
- Wait until the coolant has completely flowed out of the drain hole.

Unscrew the thermostat housing fasteners. Use a drive socket #13. Use a ratchet wrench.



Remove the thermostat housing.



AUTODOC recommends:

 Replacement: coolant flange – SKODA FELICIA II (6U1). Do not use excessive force when removing the part as this may damage it.

CLUB.AUTODOC.CO.UK 5-10







10 Remove the thermostat.



Replacement: coolant flange – SKODA FELICIA II (6U1). AUTODOC experts recommend:

- Do not apply excessive force when removing the part. Otherwise you may damage it.
- Caution! Coolant may leak out of the coolant lines and thermostat housing.

11

Install the thermostat.



AUTODOC recommends:

 Caution! Do not use excessive force during installation. This may damage the fasteners of the car. SKODA FELICIA II (6U1)

CLUB.AUTODOC.CO.UK 6-10







12 Install a new thermostat housing.



Tighten the thermostat housing fasteners. Use a drive socket #10. Use a torque wrench. Tighten it to 13 nm torque.



14 Attach the coolant hose.

15

16



Secure the coolant hose clamp. Use a drive socket #7. Use a ratchet wrench.



Remove the coolant reservoir cap.

CLUB.AUTODOC.CO.UK 7–10







17 Insert the funnel.



Pour coolant in the coolant reservoir.



Replacement: coolant flange – SKODA FELICIA II (6U1). Professionals recommend:

- Only use the coolant recommended by the manufacturer.
- The coolant level should be at the MAX mark.
- Wait until the air goes out of the system.
- Run the engine for a few minutes. This should be done in order to remove residual air from the cooling system and to check if the components are operating correctly.
- 20 Shut off the engine.
- Install the coolant reservoir cap.



CLUB.AUTODOC.CO.UK 8-10







- Screw on the coolant reservoir cap.
- Remove the fender protection cover.
- Close the hood.



VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 9-10





AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

COOLANT FLANGE: A WIDE SELECTION

① DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.

CLUB.AUTODOC.CO.UK 10-10