



How to change front  
brake discs on **SKODA**  
**Octavia III Combi (5E5)** –  
replacement guide

### SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

#### **i Important!**

This replacement procedure can be used for:

SKODA Octavia III Combi (5E5) 1.2 TSI, SKODA Octavia III Combi (5E5) 1.4 TSI, SKODA Octavia III Combi (5E5) 1.8 TSI, SKODA Octavia III Combi (5E5) 1.6 TDI, SKODA Octavia III Combi (5E5) 2.0 TDI, SKODA Octavia III Combi (5E5) 1.6 TDI 4x4, SKODA Octavia III Combi (5E5) 1.8 TSI 4x4, SKODA Octavia III Combi (5E5) 2.0 TDI 4x4, SKODA Octavia III Combi (5E5) 2.0 TDI RS, SKODA Octavia III Combi (5E5) 2.0 TSI RS, SKODA Octavia III Combi (5E5) 1.4 TSI G-TEC, SKODA Octavia III Combi (5E5) 1.6, SKODA Octavia III Combi (5E5) 2.0 TDI / TDI RS 4x4, SKODA Octavia III Combi (5E5) 1.0 TSI, SKODA Octavia III Combi (5E5) 1.5 TSI, (+ 3)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW Passat Saloon (362) 2.0 TDI

**REPLACEMENT: BRAKE DISCS – SKODA OCTAVIA III COMBI (5E5). LIST OF THE TOOLS YOU'LL NEED:**



- Wire brush
- Nylon cleaning brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Torque wrench
- Drive socket # 21
- HEX bit No.H7
- Torx bit T27
- Torx bit T30
- Wheel impact socket #17
- Ratchet wrench
- Tap wrench
- Rubber mallet
- Impact screwdriver
- Brake caliper wind back tool
- Crow bar
- Wheel chock

**Buy tools**

**AUTODOC recommends:**

- Replace the brake disks on the car SKODA Octavia III Combi (5E5) in complete set for each axis. Regardless of the state of components. This will ensure even braking.
- The replacement procedure is identical for both brake disks on the same axle.
- When changing the brake discs, always replace the brake pads.
- Please note: all work on the car – SKODA Octavia III Combi (5E5) – should be done with the engine switched off.

**CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:**

**1** Open the hood.

**2** Clean the brake fluid reservoir cap. Use a brake cleaner.



**AUTODOC recommends:**

- Replacement: brake discs – SKODA Octavia III Combi (5E5). After applying the spray, wait a few minutes.

3

Unscrew the engine solenoid valve bracket. Use Torx T27. Use a ratchet wrench.



4

Unscrew the brake fluid reservoir cap.



5

Secure the wheels with chocks.

6

Loosen the wheel mounting bolts. Use wheel impact socket #17.



7

Raise the front of the car and secure on supports.

8

Unscrew the wheel bolts.



AUTODOC recommends:

- Important! Hold the wheel while unscrewing the fastening bolts. SKODA Octavia III Combi (5E5)

9

Remove the wheel.



10

Spread the brake pads. Use a crowbar.



11

Remove the dust boot caps of the brake caliper guide pins. Use a crowbar.



12

Unscrew the brake caliper fastening. Use HEX No.H7. Use a ratchet wrench.



**13**

Detach the brake caliper retaining spring. Use a crowbar.



**14**

Remove the brake caliper.



**Replacement: brake discs – SKODA Octavia III Combi (5E5). Tip:**

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.
- Check the brake caliper bracket, brake caliper guide pins and boots. Clean them. Replace, if necessary.

**15** Remove the brake pads.



**16** Clean the brake caliper bracket fasteners. Use a wire brush. Use WD-40 spray.



**17** Unscrew the caliper bracket fastening. Use a drive socket #21. Use a ratchet wrench. Use a tap wrench.



**18** Remove the caliper bracket.





**19** Clean the brake disc fastener. Use a wire brush. Use WD-40 spray.



**20** Unscrew the brake disc fastening. Use Torx T30. Use an impact screwdriver.



**21** Remove the brake disc. Use a rubber mallet.



**22** Clean the hub. Use a wire brush. Treat the contacting surface. Use copper grease.



**23** Install the brake disc.



**24** Tighten the brake disc fastening. Use Torx T30. Use a torque wrench. Tighten it to 4 Nm torque.



**25** Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.




**AUTODOC recommends:**

- Replacement: brake discs – SKODA Octavia III Combi (5E5). After applying the spray, wait a few minutes.

**26** Install the brake caliper bracket.



**27** Tighten the brake caliper bracket. Use a drive socket #21. Use a torque wrench. Tighten it to 175 Nm torque.

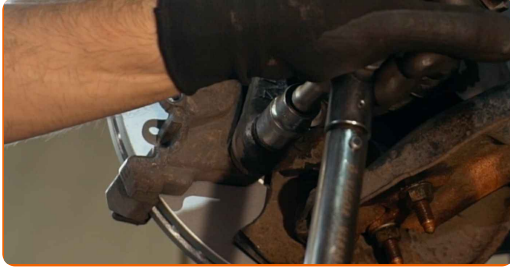

**28** Treat the brake caliper piston. Use a nylon cleaning brush. Use a brake cleaner.



Replacement: brake discs – SKODA Octavia III Combi (5E5). Tip from AUTODOC experts:

- After applying the spray, wait a few minutes.

**29** Press in the brake caliper piston. Use brake caliper wind back tool.



**30** Install the brake pads.



**31** Install the brake caliper and fix it. Use HEX No.H7. Use a torque wrench. Tighten it to 30 Nm torque.



**32** Install the dust boot caps of the brake caliper guide pins.



**33** Install the brake caliper retaining spring. Use a crowbar.



**34** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



35

Clean the brake disk surface. Use a brake cleaner.



**AUTODOC recommends:**

- Replacement: brake discs – SKODA Octavia III Combi (5E5). After applying the spray, wait a few minutes.

36

Install the wheel.




**AUTODOC recommends:**

- Important! Hold the wheel while screwing in the fastening bolts. SKODA Octavia III Combi (5E5)

37

Screw in the wheel bolts. Use wheel impact socket #17.

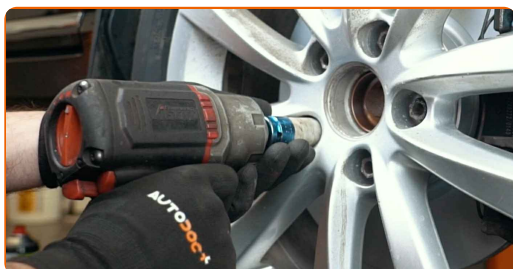

- 38** Lower the car and working in a cross order, tighten the wheel bolts. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



- 39** Remove the jacks and chocks.



Replacement: brake discs – SKODA Octavia III Combi (5E5). AUTODOC recommends:

- Check the brake fluid level in the expansion tank and refill if necessary.

- 40** Tighten the brake fluid reservoir cap.

 


AUTODOC recommends:

- Without starting the engine, press the brake pedal several times until you feel significant resistance.

41

Install the engine solenoid valve bracket. Use Torx T27. Use a ratchet wrench.



42

Close the hood.

**WELL DONE!** 

[VIEW MORE TUTORIALS](#)

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
 **Google Play**

Download on the  
 **App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**BRAKE DISCS: A WIDE SELECTION**

## **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.