



How to change air filter  
on **SKODA Octavia III  
Hatchback (5E3, NL3,  
NR3)** – replacement  
guide

## SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

### **Important!**

This replacement procedure can be used for:

SKODA Octavia III Hatchback (5E3, NL3, NR3) 1.8 TSI, SKODA Octavia III Hatchback (5E3, NL3, NR3) 1.6 TDI, SKODA Octavia III Hatchback (5E3, NL3, NR3) 2.0 TDI, SKODA Octavia III Hatchback (5E3, NL3, NR3) 2.0 TDI RS, SKODA Octavia III Hatchback (5E3, NL3, NR3) 2.0 TSI RS, SKODA Octavia III Hatchback (5E3, NL3, NR3) 1.6 TDI 4x4, SKODA Octavia III Hatchback (5E3, NL3, NR3) 1.8 TSI 4x4, SKODA Octavia III Hatchback (5E3, NL3, NR3) 2.0 TDI 4x4, SKODA Octavia III Hatchback (5E3, NL3, NR3) 2.0 TDI / TDI RS 4x4, SKODA Octavia III Hatchback (5E3, NL3, NR3) 2.0 TSI, SKODA Octavia III Hatchback (5E3, NL3, NR3) 2.0 TSI 4x4

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW Golf VII Hatchback (5G1, BQ1, BE1, BE2) 1.8 TSI

REPLACEMENT: AIR FILTER – SKODA OCTAVIA III  
HATCHBACK (5E3, NL3, NR3). LIST OF THE TOOLS  
YOU'LL NEED:



- Torx bit T25
- Ratchet wrench
- Microfibre towel
- Fender cover

[Buy tools](#)

### Replacement: air filter – SKODA Octavia III Hatchback (5E3, NL3, NR3). Tip from AUTODOC:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Please note: all work on the car – SKODA Octavia III Hatchback (5E3, NL3, NR3) – should be done with the engine switched off.

## CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Disconnect the crankcase breather hose from the air filter housing.



4 Disconnect the vacuum hose from the air filter housing.



**5** Undo the fastening screws of the air filter cover. Use Torx T25. Use a ratchet wrench.



**6** Take off the filter lid.



**7** Remove the filter element from the filter housing.



**8** Cover the air intake hose with a microfibre towel to prevent dust and dirt from getting into the system.



**9** Clean the air filter cover and housing.



**10** Remove the microfibre towel from the air intake hose.



**11** Insert a new filter element into the filter housing.



 
**Replacement: air filter – SKODA Octavia III Hatchback (5E3, NL3, NR3). Tip:**

- Make sure that the filter edge fits tight to the housing.
- Attention! Use quality filters – SKODA Octavia III Hatchback (5E3, NL3, NR3).
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

**12** Reinstall the air filter cover. Fasten it.



**13** Screw in the fastening screws of the air filter cover. Use Torx T25. Use a ratchet wrench.



**14** Connect the vacuum hose to the air filter housing.



**15** Connect the crankcase breather hose to the air filter housing.



**16** Remove the fender protection cover.

**17** Close the hood.

**WELL DONE!** 

**VIEW MORE TUTORIALS**

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

 Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**AIR FILTER: A WIDE SELECTION**

## **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.