



How to change air filter  
on **SKODA SUPERB (3T4)**  
– replacement guide

## SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

### Important!


This replacement procedure can be used for:

SKODA SUPERB (3T4) 1.8 TSI, SKODA SUPERB (3T4) 1.8 TSI 4x4, SKODA SUPERB (3T4) 2.0 TSI, SKODA SUPERB (3T4) 1.6 TDI, SKODA SUPERB (3T4) 2.0 TDI 16V 4x4, SKODA SUPERB (3T4) 1.9 TDI, SKODA SUPERB (3T4) 2.0 TDI, SKODA SUPERB (3T4) 2.0 TDI 4x4, SKODA SUPERB (3T4) 2.0 TDI 16V

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: SKODA Octavia II Combi (1Z5) 1.8 TSI

REPLACEMENT: AIR FILTER – SKODA SUPERB (3T4).  
LIST OF THE TOOLS YOU'LL NEED:

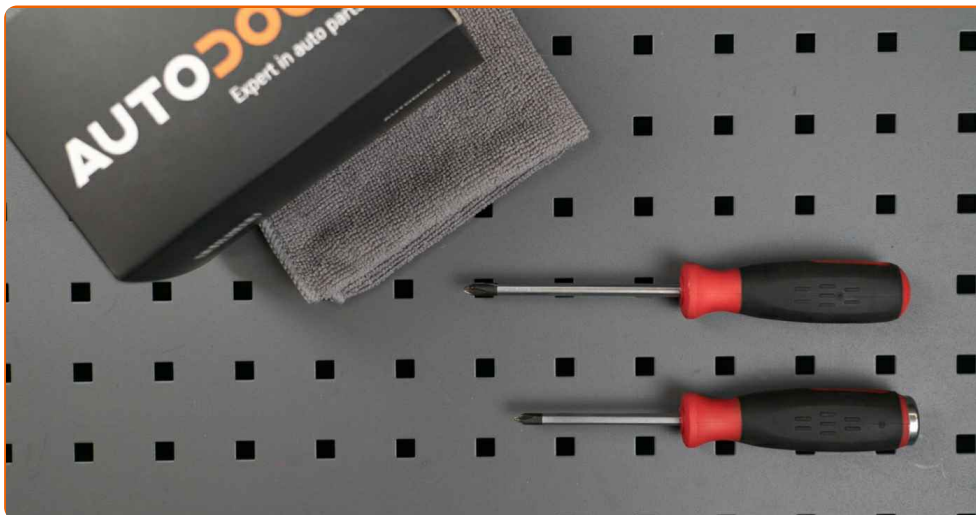

- Microfibre towel
- Phillips screwdriver
- Fender cover

[Buy tools](#)

Replacement: air filter – SKODA SUPERB (3T4). AUTODOC recommends:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Please note: all work on the car – SKODA SUPERB (3T4) – should be done with the engine switched off.

**CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:**


**1** Open the bonnet.

**2** Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.


**3** Undo the fastening screws of the air filter cover. Use a Phillips screwdriver.



**4** Take off the filter lid.

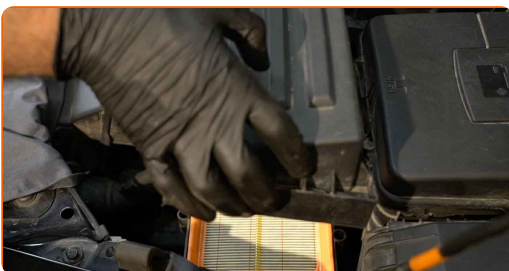

 
**5** Remove the filter element from the filter housing.



**6** Cover the air intake hose with a microfibre towel to prevent dust and dirt from getting into the system.



 
**7** Clean the air filter cover and housing.




**Replacement: air filter – SKODA SUPERB (3T4). Tip from AUTODOC experts:**

- Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

 **8** Remove the microfibre towel from the air intake hose.



 
**9** Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



Replacement: air filter – SKODA SUPERB (3T4). AUTODOC experts recommend:

- Check out the correct location of the filter element. Do not skew.
- SKODA SUPERB (3T4) – It's important to only use high-quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

 **10** Reinstall the air filter cover. Fasten it.



**11**

Screw in the fastening screws of the air filter cover. Use a Phillips screwdriver.

**12**

Remove the fender protection cover.

**13**

Close the hood.

**WELL DONE!** 

**VIEW MORE TUTORIALS**

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**AIR FILTER: A WIDE SELECTION**

## **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.