



How to change front coil
springs on **SKODA**
SUPERB Estate (3T5) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

i Important!

This replacement procedure can be used for:

SKODA SUPERB Estate (3T5) 1.8 TSI, SKODA SUPERB Estate (3T5) 1.6 TDI, SKODA SUPERB Estate (3T5) 1.9 TDI

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: VW Passat Saloon (362) 2.0 TDI

REPLACEMENT: COIL SPRINGS – SKODA SUPERB ESTATE (3T5). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Torque wrench
- Combination spanner #10
- Combination spanner #18
- Drive socket # 13
- Drive socket # 16
- Drive socket # 18
- Drive socket # 21
- Drive socket # 22
- Drive socket # 27
- XZN socket bit # 6
- XZN socket bit # 14
- HEX bit No.H7
- Wheel impact socket #17
- Ratchet wrench
- Pin punch
- Flat chisel
- Hammer
- Tap wrench
- Crow bar
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Fender cover
- Wheel chock

[Buy tools](#)


Replacement: coil springs – SKODA SUPERB Estate (3T5). AUTODOC experts recommend:

- Both coil springs of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the front suspension.
- Please note: all work on the car – SKODA SUPERB Estate (3T5) – should be done with the engine switched off.


CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

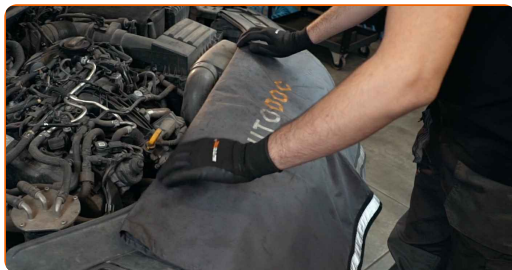

3 Remove the cowl grille seal.

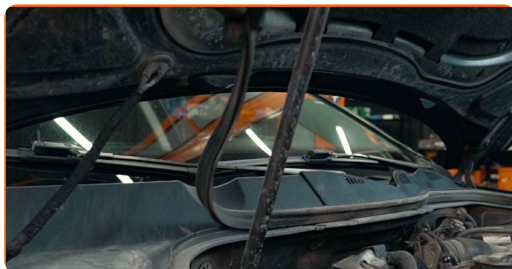

- 4 Remove the clips of the plastic cowl grille.



 
- 5 Raise the wiper plastic cowl grille.



- 6 Clean the fasteners of the shock strut upper mount. Use a wire brush. Use WD-40 spray.



- 7 Loosen the upper fasteners of the suspension strut. Use a drive socket #13. Use a ratchet wrench.



- 8 Secure the wheels with chocks.

9

Loosen the wheel mounting bolts. Use wheel impact socket #17.




10

Raise the front of the car and secure on supports.

11

Unscrew the wheel bolts.

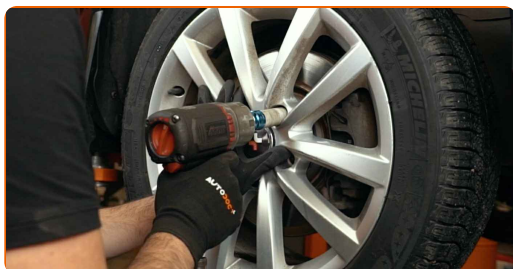

AUTODOC recommends:

 
- Warning! To avoid injury, hold the wheel while unscrewing the fastening bolts.
SKODA SUPERB Estate (3T5)

12

Remove the wheel.




- 13** Clean all joints of the stabiliser link. Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.




- 14** Unscrew the fastener connecting the stabilizer link to the shock strut. Use a drive socket #18. Use a ratchet wrench.



- 15** Remove the stabilizer rod.

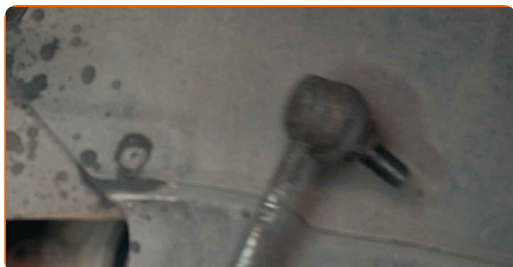


- 16** Clean the brake hose bracket fasteners. Use a wire brush. Use WD-40 spray.

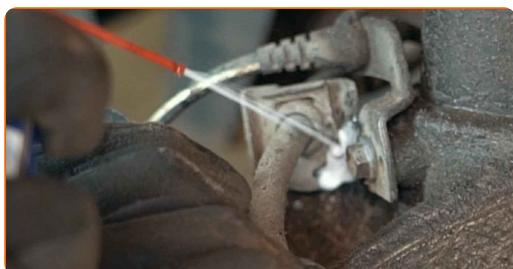


17

Unscrew the brake hose fastening bracket from the shock strut. Use a combination spanner #10.

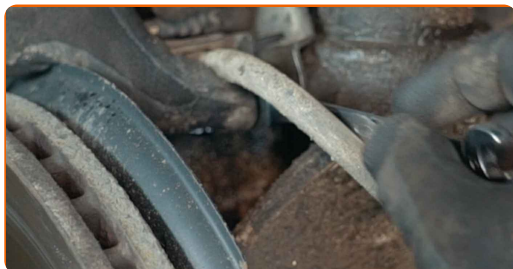

18

 Loosen the fastener of the driveshaft. Use a drive socket #27. Use a ratchet wrench.




19

Remove the fastening bolt.



20

 
Unscrew the lower fastener connecting the shock strut to the steering knuckle. Use a drive socket #18. Use XZN #14. Use a ratchet wrench.




21 Clean the fasteners connecting the ball joint to the suspension control arm. Use a wire brush. Use WD-40 spray.



 22 Unscrew the fastener connecting the ball joint to the suspension control arm. Use a drive socket #16. Use a ratchet wrench.



 
23 Disconnect the ball joint from the arm. Use a crowbar.



24 Prop up the steering knuckle. Use a hydraulic transmission jack.




 25 Detach the driveshaft from the steering knuckle. Use a pin punch. Use a hammer.




26

 Remove the fastening bolt.



27

 Release the lower fastener connecting the shock strut to the steering knuckle. Use a flat metal-working chisel. Use a hammer.



28

Disconnect the steering knuckle from the shock absorber strut.



29

Unscrew the upper fasteners of the shock strut.



AUTODOC recommends:

- SKODA SUPERB Estate (3T5) – To avoid injury, hold the suspension strut while unscrewing the fastening bolts.

 
30

Remove the suspension strut.



31

Set the shock absorber strut on the spring compressor tool.



Replacement: coil springs – SKODA SUPERB Estate (3T5). AUTODOC recommends:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

32

Compress the spring.



33 Treat the shock strut rod. Use a wire brush. Use WD-40 spray.




34 Remove the strut piston rod nut. Use a drive socket #22. Use HEX No.H7. Use a ratchet wrench.




35 Remove the top strut mount.



36 Release the coil spring.

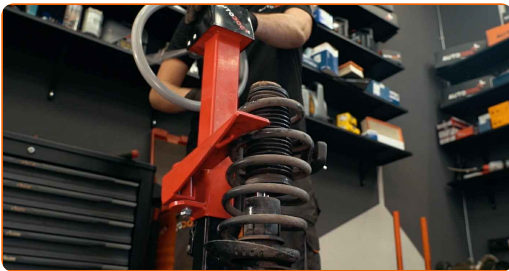


37 Remove the spring.

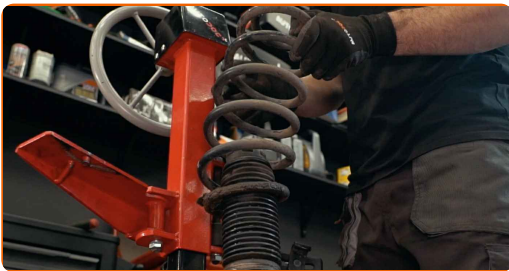

38

 Remove the shock absorber dust cap and the bump stop.



AUTODOC recommends:

- Replacement: coil springs – SKODA SUPERB Estate (3T5). Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.

 
39

Install the spring on the shock absorber.




40

Compress the spring.



41

 Install the boot and a bump stop onto the shock absorber.



42

Install the upper strut mount and the strut mount bearing.



43

Tighten the shock strut piston rod nut. Use a drive socket #21. Use HEX No.H7. Use a torque wrench. Tighten it to 60 Nm torque.



Replacement: coil springs – SKODA SUPERB Estate (3T5). Professionals recommend:


- Check to make sure the spring is positioned correctly. Avoid its misalignment.

44


Treat the shock strut rod. Use copper grease.



45 Decompress the spring.

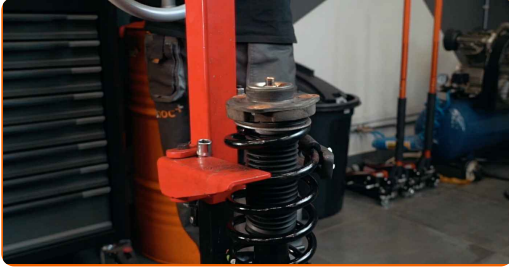

46 Remove the assembled shock strut.

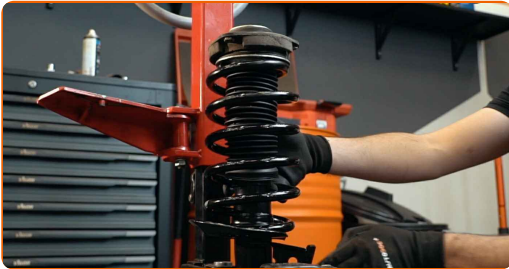

47 Clean the mounting seats of the shock strut. Use a wire brush. Use WD-40 spray.



48 Install the shock strut into the wheel arch.



 
49 Secure the upper fasteners of the shock strut. Do not tighten it.

AUTODOC recommends:

- SKODA SUPERB Estate (3T5) – To avoid injury, hold the suspension strut while screwing in the fastening bolts.


50

Clean the mounting seats of the shock strut. Use a wire brush. Use WD-40 spray.




51

 Fix the shock absorber strut on the steering knuckle.



52

 Install the fastening bolt.



53

Screw in the fastener that connects the shock strut to the steering knuckle. Use a drive socket #18. Use XZN #14. Use a ratchet wrench.



 
54

Clean the splines of the drive shaft CV joint. Use a wire brush. Use WD-40 spray.



55

Remove the support from under the steering knuckle.




AUTODOC recommends:

- Replacement: coil springs – SKODA SUPERB Estate (3T5). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.


56

 Install the drive shaft.




57

 Clean the ball joint mounting seat. Use a wire brush. Use WD-40 spray.




58

 Attach the ball joint to the control arm.




59

 Tighten the fasteners connecting the ball joint to the control arm. Use a drive socket #16. Use a torque wrench. Tighten it to 60 Nm torque.




60

 Tighten the brake hose fastening bracket to the shock strut. Use a combination spanner #10.



- 61 Tighten the lower fastening of the shock absorber. Use a drive socket #18. Use XZN #14. Use a ratchet wrench. Use a torque wrench. Tighten it to 70 Nm torque.+90°

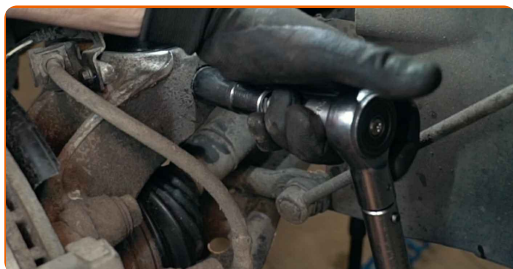

AUTODOC recommends:

- Important! Be sure to use new fasteners.

- 62 Clean the mounting seats of the stabiliser link. Use a wire brush. Use WD-40 spray.



- 63 Install the transverse stabilizer link.



 
- 64** Tighten the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #18. Use a drive socket #18. Use XZN #6. Use a torque wrench. Tighten it to 55 Nm torque.



- 65** Install and tighten the drive shaft bolt. Use a drive socket #27. Use a ratchet wrench.



- 66** Treat all joints of the arm. Treat the shock strut fasteners. Use copper grease.



- 67** Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



68

Clean the brake disk surface. Use a brake cleaner.



AUTODOC recommends:

- Replacement: coil springs – SKODA SUPERB Estate (3T5). After applying the spray, wait a few minutes.

69

Install the wheel.



AUTODOC recommends:

- Warning! To avoid injury, hold the wheel while screwing in the fastening bolts on the car. SKODA SUPERB Estate (3T5)

70

 
Screw in the wheel bolts. Use wheel impact socket #17.



71 Lower the car.



72 Tighten the bolt connecting the drive shaft to the wheel hub. Use a drive socket #27. Use a torque wrench. Tighten it to 70 Nm torque.+90°



AUTODOC recommends:

- Important! Be sure to use new fasteners.

73 Tighten the wheel bolts using a criss-cross pattern. Use wheel impact socket #17. Use a torque wrench. Tighten it to 120 Nm torque.



74 Remove the jacks and chocks.



75

Tighten the upper fasteners of the shock strut. Use a drive socket #13. Use a torque wrench. Tighten it to 15 Nm torque. +90°



AUTODOC recommends:

- Important! Be sure to use new fasteners.


76

Treat the fasteners of the shock strut mount. Use copper grease.




77

Install and secure the cowl grille.

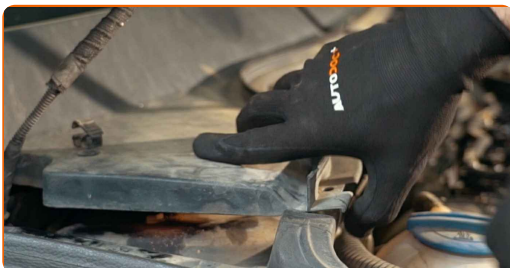


78

 Install the fasteners of the wiper plastic cowl grille.




79

 Install the cowl grille seal.



80

 Remove the fender protection cover.



81

Close the hood.

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING

+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

COIL SPRINGS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.