+ AUTODOC CLUB

How to change air filter on **KIA Sorento JC** – replacement guide







VIDEO TUTORIAL



i Important!

This replacement procedure can be used for: KIA SORENTO I (JC) 2.4, KIA SORENTO I (JC) 3.5 V6, KIA SORENTO I (JC) 2.5 CRDi, KIA SORENTO I (JC) 3.3 V6

The steps may slightly vary depending on the car design.

CLUB.AUTODOC.CO.UK 1–9









REPLACEMENT: AIR FILTER – KIA SORENTO JC. LIST OF THE TOOLS YOU'LL NEED:



- Flat Screwdriver
- Phillips screwdriver

- Microfibre towel
- Fender cover

BUY TOOLS

CLUB.AUTODOC.CO.UK 2-9







Replacement: air filter – KIA Sorento JC. AUTODOC experts recommend:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- All work should be done with the engine stopped.

REPLACEMENT: AIR FILTER – KIA SORENTO JC. USE THE FOLLOWING PROCEDURE:

1

3

Open the bonnet.



Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



Unplug the mass air flow sensor connector. Use a flat screwdriver.



CLUB.AUTODOC.CO.UK 3–9







Detach the retainers of the ignition cables. Use a flat screwdriver.



Detach the air intake hose clamp. Use a Phillips screwdriver.



Disconnect the air intake pipe from the air filter housing.



7 Release the air filter cover clips.



Take off the filter lid.



CLUB.AUTODOC.CO.UK 4–9







9 Remove the filter element from the filter housing.



Clean the air filter cover and housing.

Replacement: air filter – KIA Sorento JC. Professionals recommend:

- Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.
- Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.



AUTODOC recommends:

- Check out the correct location of the filter element. Do not skew.
- Attention! Use quality filters KIA Sorento JC.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

CLUB.AUTODOC.CO.UK 5–9







Reinstall the air filter cover. Fasten it.



Press the air filter cover clips into place.



Connect the air intake pipe to the air filter housing.



Fasten the clamp on the air intake hose. Use a Phillips screwdriver.



Attach the retainers of the ignition cables.

CLUB.AUTODOC.CO.UK 6–9



18







Plug in the mass air flow sensor conntector.



Remove the fender protection cover. Close the hood.






VIEW MORE TUTORIALS

CLUB.AUTODOC.CO.UK 7–9





AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

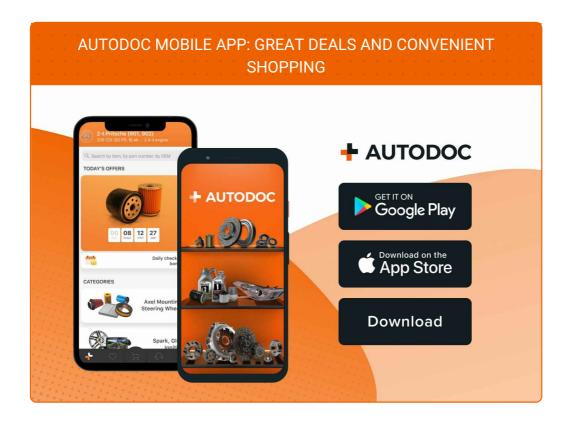

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR KIA

AIR FILTER: A WIDE SELECTION

CLUB.AUTODOC.CO.UK 8-9





CHOOSE CAR PARTS FOR KIA SORENTO JC

AIR FILTER FOR KIA: BUY NOW

AIR FILTER FOR KIA SORENTO JC: THE BEST DEALS & OFFERS

① DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.

CLUB.AUTODOC.CO.UK 9-9