



How to change front coil
springs on **TOYOTA Auris**
Estate (E18) –
replacement guide

SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle


Important!

This replacement procedure can be used for:
 TOYOTA Auris Estate (E18) 1.8 Hybrid (ZWE186_)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: TOYOTA Auris Hatchback (E15) 1.8 Hybrid (ZWE150_)

REPLACEMENT: COIL SPRINGS – TOYOTA AURIS ESTATE (E18). LIST OF THE TOOLS YOU'LL NEED:

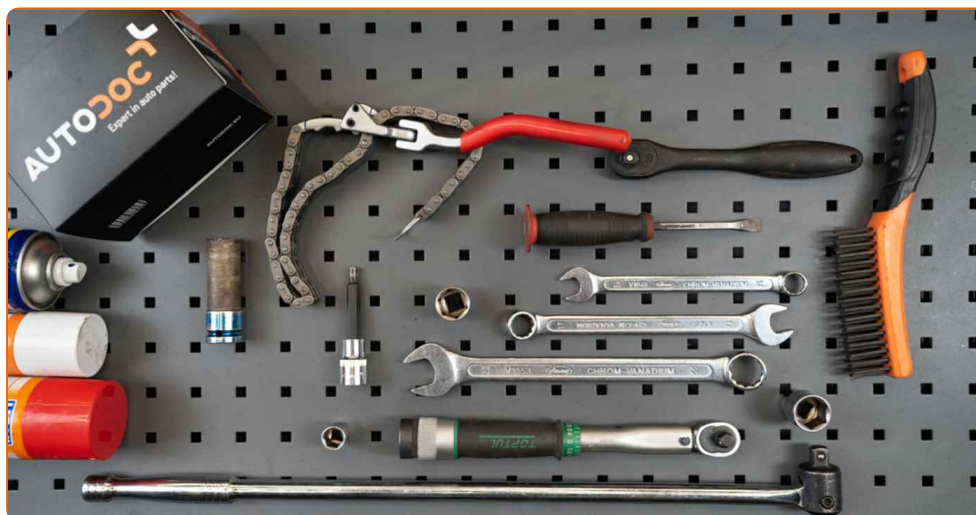

- Wire brush
- WD-40 spray
- Brake cleaner
- Copper grease
- Combination spanner #14
- Combination spanner #17
- Combination spanner #22
- Drive socket # 14
- Drive socket # 17
- Drive socket # 21
- Drive socket # 22
- HEX bit no.H6.
- Wheel impact socket #21
- Ratchet wrench
- Torque wrench
- Tap wrench
- Crow bar
- Chain wrench
- Hydraulic strut spring compressor
- Hydraulic transmission jack
- Fender cover
- Wheel chock

Buy tools

Replacement: coil springs – TOYOTA Auris Estate (E18). AUTODOC experts recommend:

- Both coil springs of the front suspension should be replaced simultaneously.
- The replacement procedure is identical for the left and right coil springs of the front suspension.
- All work should be done with the engine stopped.

REPLACEMENT: COIL SPRINGS – TOYOTA AURIS ESTATE (E18). USE THE FOLLOWING PROCEDURE:

 
1 Open the bonnet.

2 Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

3 Clean the fasteners of the shock strut upper mount. Use a wire brush. Use WD-40 spray.



4 Loosen the upper fastener of the shock strut mount. Use a combination spanner #14.

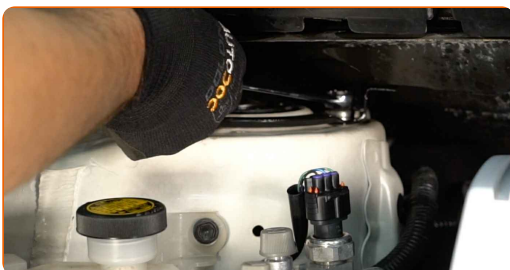

5 Secure the wheels with chocks.



6 Loosen the wheel mounting bolts. Use wheel impact socket #21.



7 Raise the front of the car and secure on supports.


8 Unscrew the wheel bolts.



Replacement: coil springs – TOYOTA Auris Estate (E18). Tip:

- To avoid injury, hold up the wheel when unscrewing the bolts.

9 Remove the wheel.

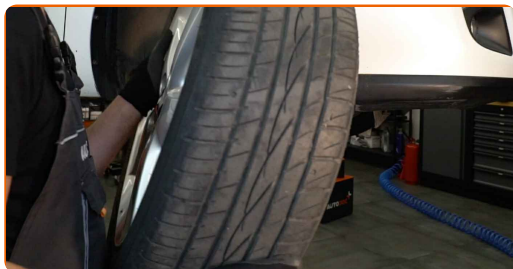


10 Clean the stabiliser link fasteners. Use a wire brush. Use WD-40 spray.



11 Disconnect the wiring and the brake hose from the bracket on the shock strut. Use a drive socket #14. Use a ratchet wrench.



 12 Clean the fasteners connecting the shock strut to the steering knuckle. Use a wire brush. Use WD-40 spray.

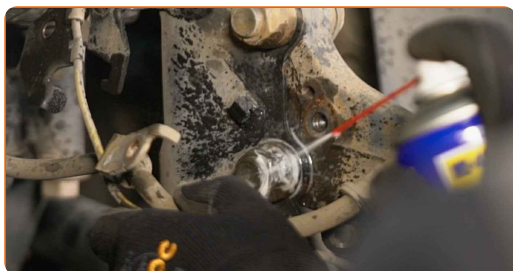

- 13** Unscrew the fastener connecting the stabilizer link to the shock strut. Use a combination spanner #17. Use HEX No.H6. Use a ratchet wrench.



- 14** Remove the stabilizer rod.



 
Replacement: coil springs – TOYOTA Auris Estate (E18). Tip from AUTODOC experts:

- Examine stabiliser bushes. Replace them if needed.

- 15** Unscrew the lower fastener connecting the shock strut to the steering knuckle. Use a combination spanner #22. Use a drive socket #22. Use a tap wrench.




16 Prop up the steering knuckle. Use a hydraulic transmission jack.

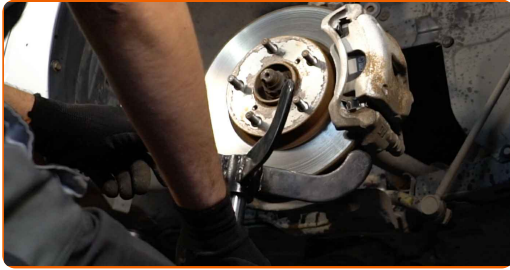

17 Remove the fastening bolts.



 18 Disconnect the steering knuckle from the shock absorber strut.

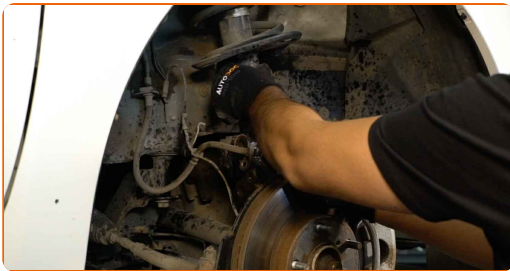

19 Unscrew the top fastening of the shock strut mount.



AUTODOC recommends:

- TOYOTA Auris Estate (E18) – To avoid injury, hold the suspension strut while unscrewing the fastening bolts.

 
20

Remove the suspension strut.



21

Set the shock absorber strut on the spring compressor tool.

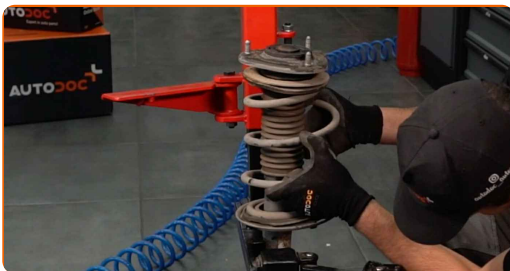


Replacement: coil springs – TOYOTA Auris Estate (E18). AUTODOC experts recommend:

- Note that when using a spring compressor, spring coils need to be securely gripped, compressing the spring on the opposite sides.
- Ensure the correct position of the spring in the retainer.
- Make sure that the spring coils tightly entered the lock handles.

22

 Compress the spring.

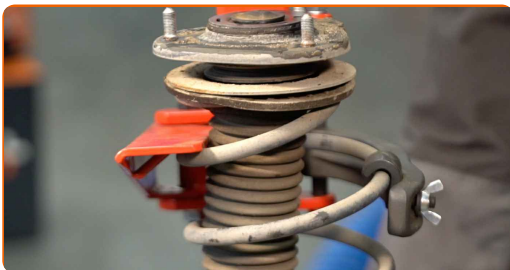


23 Remove the shock strut mount cap. Use a crowbar.




24 Treat the shock strut rod. Use a wire brush. Use WD-40 spray.



25 Remove the strut piston rod nut. Use a chain wrench. Use a drive socket #21. Use a ratchet wrench.

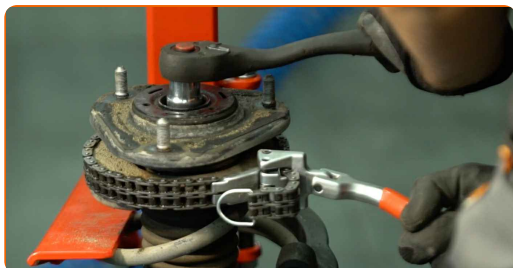

 26 Remove the shock absorber mount, boot and bump stop. Use a crowbar.

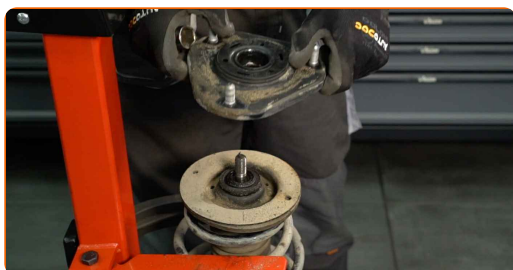

AUTODOC recommends:

- Replacement: coil springs – TOYOTA Auris Estate (E18). Carefully inspect the mount, the boot, and the bump stop of the shock absorber. Replace if necessary.

 
27

Release the coil spring.




28

Remove the spring.

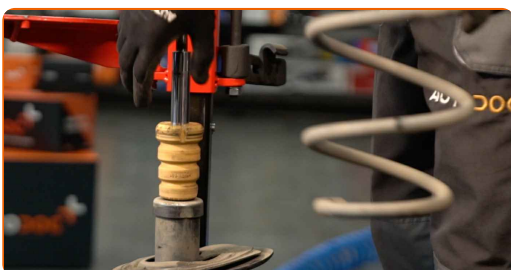


29

 Install the spring on the shock absorber.

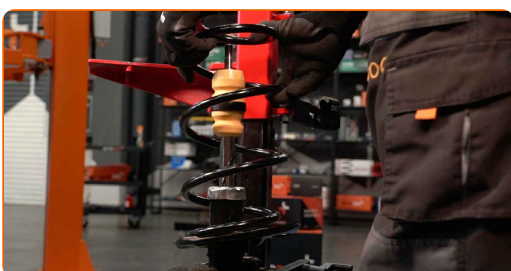


30

 Compress the spring.

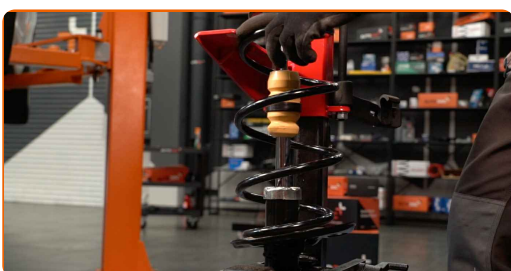


31

 Install the mount, the boot and the bump stop on the shock absorber.

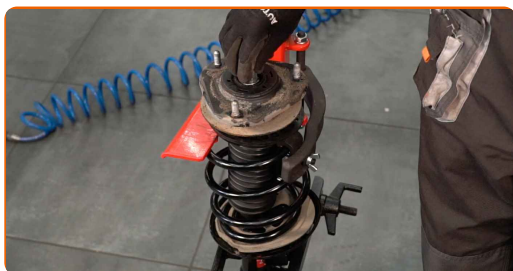

32

 Tighten the shock strut piston rod nut. Use a chain wrench. Use a drive socket #21. Use a torque wrench. Tighten it to 47 Nm torque.

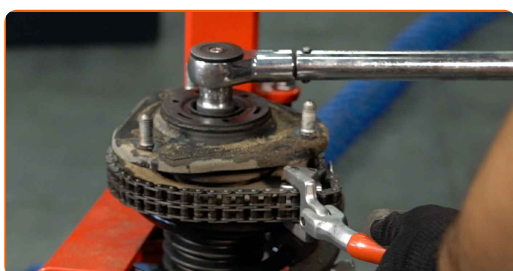

Replacement: coil springs – TOYOTA Auris Estate (E18). Tip:

- Check to make sure the spring is positioned correctly. Avoid its misalignment.

33

Treat the shock strut rod. Use copper grease.



34 Install the shock strut mount cap.

 


35 Decompress the spring.



36 Remove the assembled shock strut.

37 Install the shock strut into the wheel arch.

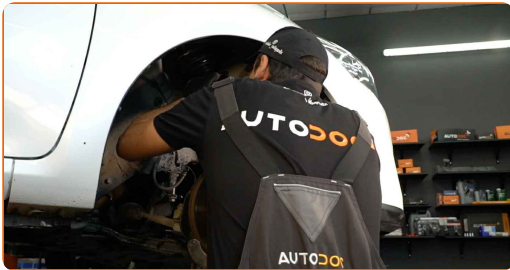

38 Screw the top fastening of the shock strut mount. Do not tighten it.



Replacement: coil springs – TOYOTA Auris Estate (E18). Tip from AUTODOC:

- To avoid injuries, hold the shock strut when screwing the fastening bolts in.

 
39 Clean the mounting seats of the shock strut. Use a wire brush. Use WD-40 spray.



40 Fix the shock absorber strut on the steering knuckle.




41 Install the fastening bolts.

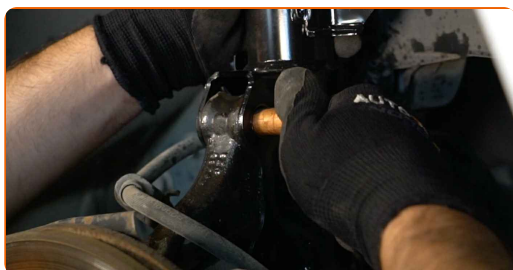


42 Screw in the fastener that connects the shock strut to the steering knuckle. Use a combination spanner #22. Use a drive socket #22.



 - 43** Tighten the lower fasteners connecting the shock strut to the steering knuckle. Use a drive socket #22. Use a torque wrench. Tighten it to 240 Nm torque.

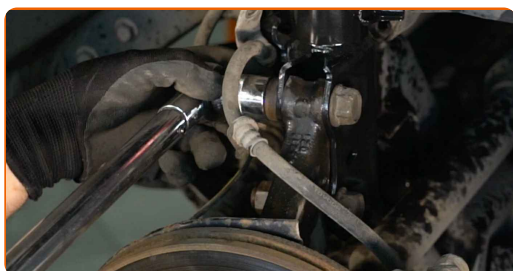

 
- 44** Remove the support from under the steering knuckle.

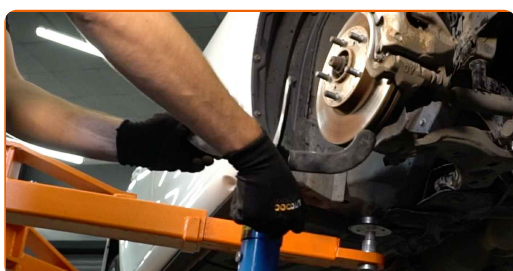

AUTODOC recommends:

- Replacement: coil springs – TOYOTA Auris Estate (E18). Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.

 
- 45** Fasten the brake hose on the strut. Connect the fastener of the ABS sensor cable to the shock absorber strut. Use a drive socket #14. Use a ratchet wrench.

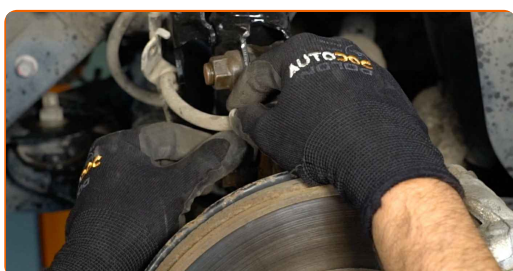

46 Install the transverse stabilizer link.



 
47 Tighten the fastener connecting the stabilizer link to the shock strut. Use a drive socket #17. Use a torque wrench. Tighten it to 74 Nm torque.

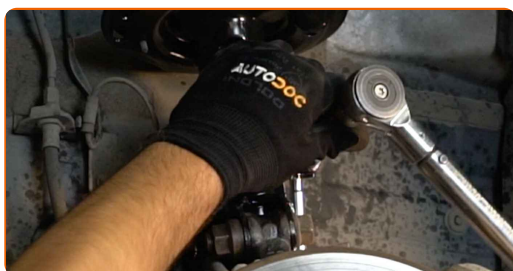

48 Treat the shock strut fasteners. Use copper grease.



 49 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.

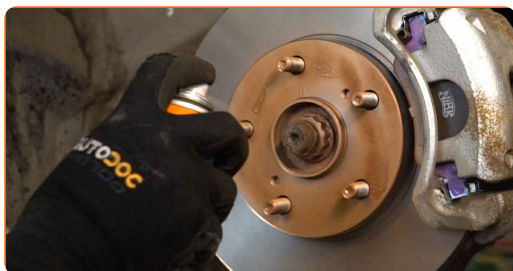

50

Clean the brake disk surface. Use a brake cleaner.

 


AUTODOC recommends:

- Replacement: coil springs – TOYOTA Auris Estate (E18). After applying the spray, wait a few minutes.

51

Install the wheel.

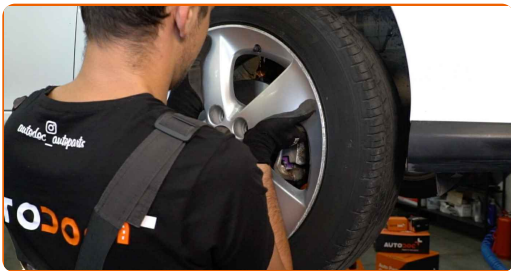


Replacement: coil springs – TOYOTA Auris Estate (E18). Professionals recommend:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

52

 Screw in the wheel bolts. Use wheel impact socket #21.

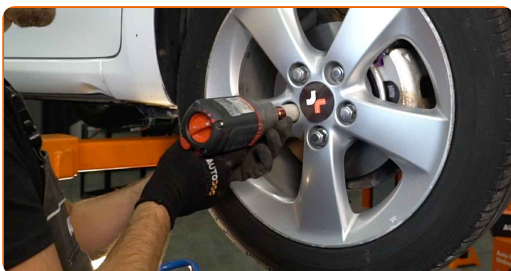

53 Lower the car.

54 Tighten the upper fastener of the shock absorber strut mount. Use a drive socket #14. Use a torque wrench. Tighten it to 50 Nm torque.



55 Treat the fasteners of the shock strut mount. Use copper grease.

 
56 Remove the fender protection cover.

57 Close the hood.

58 Tighten the wheel bolts using a criss-cross pattern. Use a torque wrench. Tighten it to 103 Nm torque.



59 Remove the jacks and chocks.

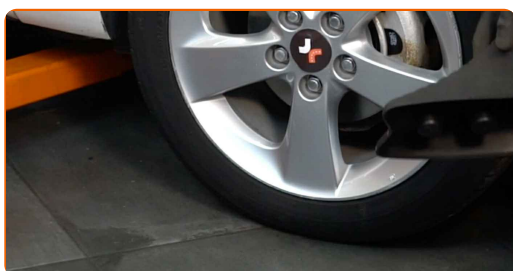

WELL DONE! 

VIEW MORE TUTORIALS

AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



+ AUTODOC

GET IT ON
Google Play

Download on the
App Store

Download

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

COIL SPRINGS: A WIDE SELECTION

DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.