- AUTODOC CLUB

How to change pollen filter on TOYOTA Hiace / Commuter Minibus V (TRH2_, KDH2_) – replacement guide



SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

(i) Important!

This replacement procedure can be used for: TOYOTA Hiace / Commuter Minibus V (TRH2_, KDH2_) 2.7 (TRH223)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: TOYOTA RAV 4 III (ACA3_, ACE_, ALA3_, GSA3_, ZSA3_) 2.4 (ACA33)

+ AUTODOC CLUB



CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:



Open the glove box.





Detach the stopper (strap) from the glove box lid.





3

Release the cabin filter cover clips.



4

Remove the cabin filter housing cover.



AUTODOC recommends:

 Replacement: pollen filter – TOYOTA Hiace / Commuter Minibus V (TRH2_, KDH2_). To avoid damaging the part when removing it, do not use excessive force.



Remove the cabin filter.



AUTODOC recommends:

• Do not attempt to clean and reuse the filter - it will affect the quality of air cleaning inside the car.



6

Install the cabin filter to its mounting seat.



Replacement: pollen filter – TOYOTA Hiace / Commuter Minibus V (TRH2_, KDH2_). Tip from AUTODOC experts:

- Check out the correct location of the filter element. Do not skew.
- Follow the air flow direction arrow on the filter.
- TOYOTA Hiace / Commuter Minibus V (TRH2_, KDH2_) It's important to only use high-quality filters.

7

Reinstall the cabin filter housing cover. Make sure you hear a click indicating that it is locked in place.



8

Attach the stopper (strap) to the glove box lid.







Close the glove box.





Switch on the ignition.

11 Switch on the air conditioning system. This is necessary in order to make sure that the component operates properly.



Switch off the ignition.





AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

POLLEN FILTER: A WIDE SELECTION

i DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.