How to change air filter on **TOYOTA PREVIA III** (ACR5\_, GSR5\_) – replacement guide



### SIMILAR VIDEO TUTORIAL




This video shows the replacement procedure of a similar car part on another vehicle

### (i) Important!

This replacement procedure can be used for: TOYOTA PREVIA III (ACR5\_, GSR5\_) 3.5 (GSR50\_), TOYOTA PREVIA III (ACR5\_, GSR5\_) 2.4 (ACR50\_)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: TOYOTA RAV 4 III (ACA3\_, ACE\_, ALA3\_, GSA3\_, ZSA3\_) 2.4 (ACA33)

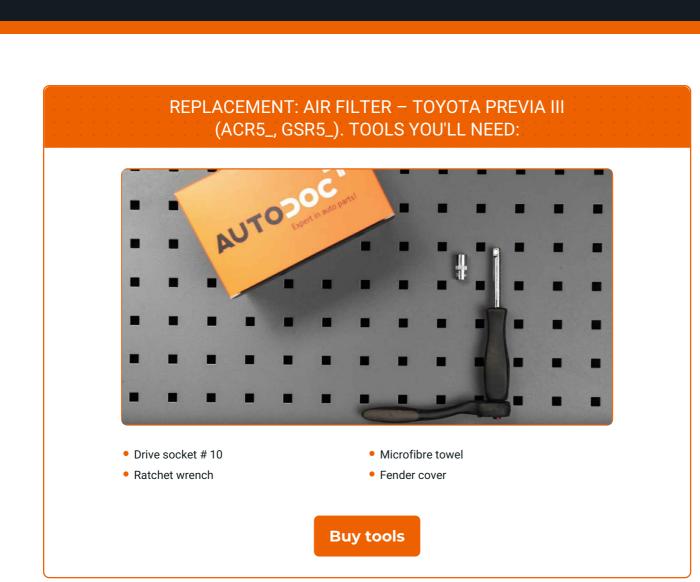

4

O



# Replacement: air filter – TOYOTA PREVIA III (ACR5\_, GSR5\_). AUTODOC experts recommend:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- Please note: all work on the car TOYOTA PREVIA III (ACR5\_, GSR5\_) should be done with the engine switched off.

### CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:



Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



Release the air filter cover clips.

Open the bonnet.



4

Slightly raise the cover of the air filter housing.





5

Remove the filter element from the filter housing.



6

Unscrew the clamp and fasteners on the air filter intake pipe. Use a drive socket #10. Use a ratchet wrench.



7

Disconnect the air intake pipe from the air filter housing.



8

Take off the filter lid.

9

Cover the air intake hose with a microfibre towel to prevent dust and dirt from getting into the system.





10

Clean the air filter cover and housing.



# Replacement: air filter – TOYOTA PREVIA III (ACR5\_, GSR5\_). Professionals recommend:

- Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.
- 11

Remove the microfibre towel from the air intake hose.

12

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.







- Check out the correct location of the filter element. Do not skew.
- TOYOTA PREVIA III (ACR5\_, GSR5\_) It's important to only use high-quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.



Reinstall the air filter cover. Fasten it.



14

Connect the air intake pipe to the air filter housing.



15

Fasten the clamp on the air intake hose. Use a drive socket #10. Use a ratchet wrench.





16

Press the air filter cover clips into place.





Remove the fender protection cover.

18

Close the hood.



**VIEW MORE TUTORIALS** 



### AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE



#### A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

#### **AIR FILTER: A WIDE SELECTION**

### **(i) DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.