



How to change air filter  
on **TOYOTA Verso S**  
**(\_P12\_)** – replacement  
guide

## SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

### Important!

This replacement procedure can be used for:  
TOYOTA Verso S (\_P12\_) 1.33 (NSP120\_)

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: TOYOTA Yaris Hatchback (\_P1\_) 1.3 (NCP10\_, SCP12\_)

REPLACEMENT: AIR FILTER – TOYOTA VERSO S  
(\_P12\_). TOOLS YOU'LL NEED:



- Flat Screwdriver
- Phillips screwdriver
- Fender cover

[Buy tools](#)

Replacement: air filter – TOYOTA Verso S (\_P12\_). AUTODOC recommends:


- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- All work should be done with the engine stopped.

## REPLACEMENT: AIR FILTER – TOYOTA VERSO S (\_P12\_). RECOMMENDED SEQUENCE OF STEPS:


**1** Open the bonnet.

**2** Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.

**3** Detach the air intake hose clamp. Use a Phillips screwdriver.

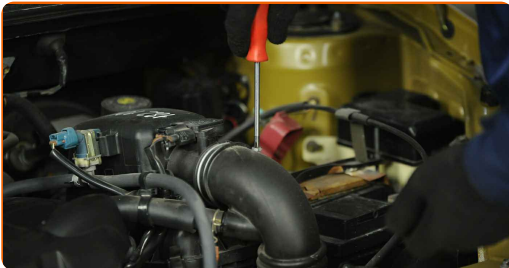


**4** Disconnect the air intake pipe from the air filter housing.

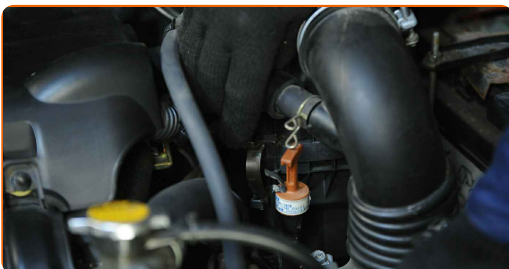

**5**

 Unplug the mass air flow sensor connector. Use a flat screwdriver.

**6**

Slide the filter cover clips.

**7**

Take off the filter lid.

**8**

Remove the filter element from the filter housing.

**9**

Clean the air filter cover and housing.

Replacement: air filter – TOYOTA Verso S (\_P12\_). Tip:

- Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.

10

Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.

 


AUTODOC recommends:


- Replacement: air filter – TOYOTA Verso S (\_P12\_). Be sure to position the filtering element correctly. Avoid misalignment.
- Take care to only use quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.

11

Reinstall the air filter cover. Fasten it.



 **12** Lock the retaining clips of the air filter housing cover.



**13** Plug in the mass air flow sensor connector.



**14** Connect the air intake pipe to the air filter housing.



**15** Fasten the clamp on the air intake hose. Use a Phillips screwdriver.



**16** Remove the fender protection cover. Close the hood.

**WELL DONE!** 

**VIEW MORE TUTORIALS**

# AUTODOC – TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

**AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING**



**+ AUTODOC**

GET IT ON  
**Google Play**

 Download on the  
**App Store**

**Download**

**A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR**

**AIR FILTER: A WIDE SELECTION**

## **DISCLAIMER:**

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2023 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC SE.